


Torque limit input

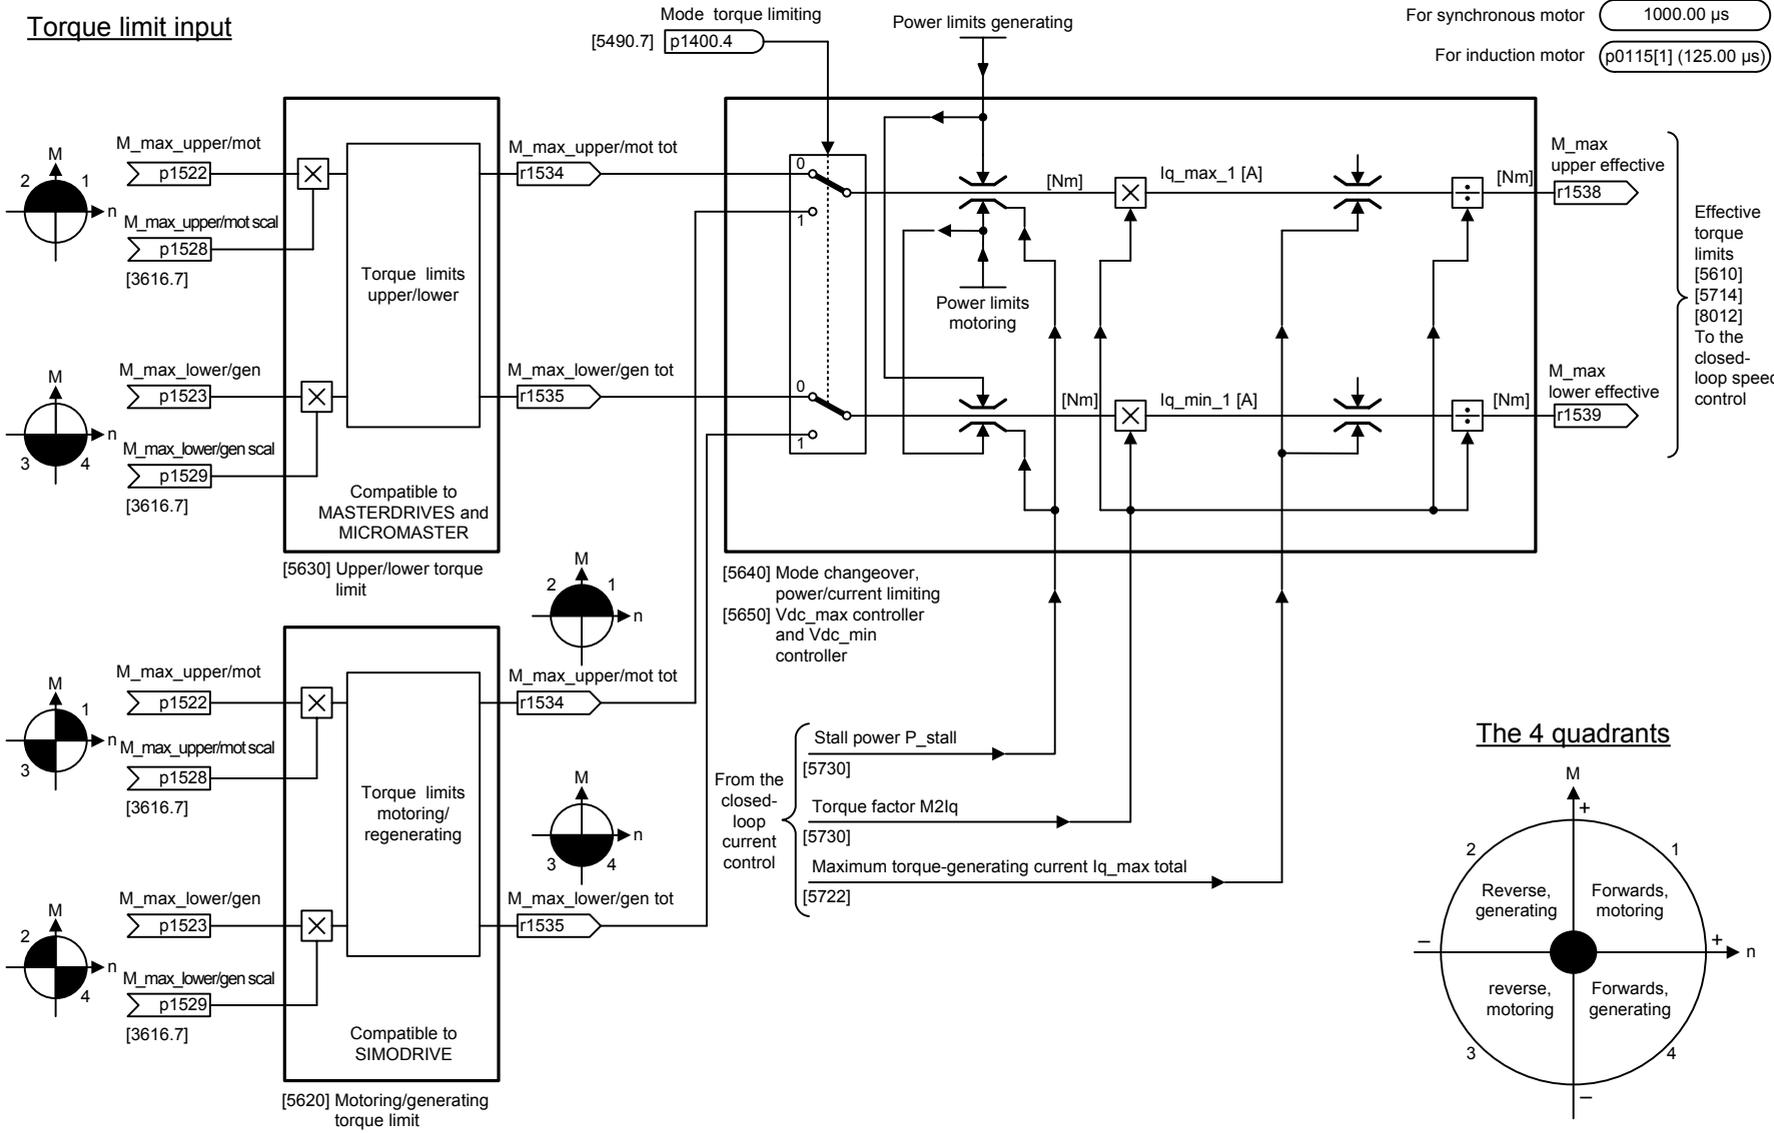

DO: SERVO

fp_1610_01_eng.vsd

Function diagram

- 1610 -

Overviews - Servo control, generation of the torque limits

30.03.07 V02.05.00

SINAMICS S