

- <2> For p1276 = 300.000 s, the timer is de-activated, i.e. the timer output is always 0. Note: When operating a motor with a brake which must not be applied while the motor is rotating, the monitoring time of both timers must be set to 300 s.
- <3> For operation without brake, p1224[0...3] must be 0 (factory setting) in order to avoid undesirable interaction with the sequence control.
- <4> The internal signal comprises signals that lead to OFF1 or OFF3, e.g. BICO or fault response.

1	2	3	4	5	6	7	8
DOLOFDVO VECTOR					6 0704 04	Enter all and all and and	

DO: SERVO, VECTOR Braking control - Extended braking control, zero-speed detection (r0108.14 = 1)

16.03.06 V02.05.00

fp_2704_01_eng.vsd | Function diagram SINAMICS S

- 2704 -