


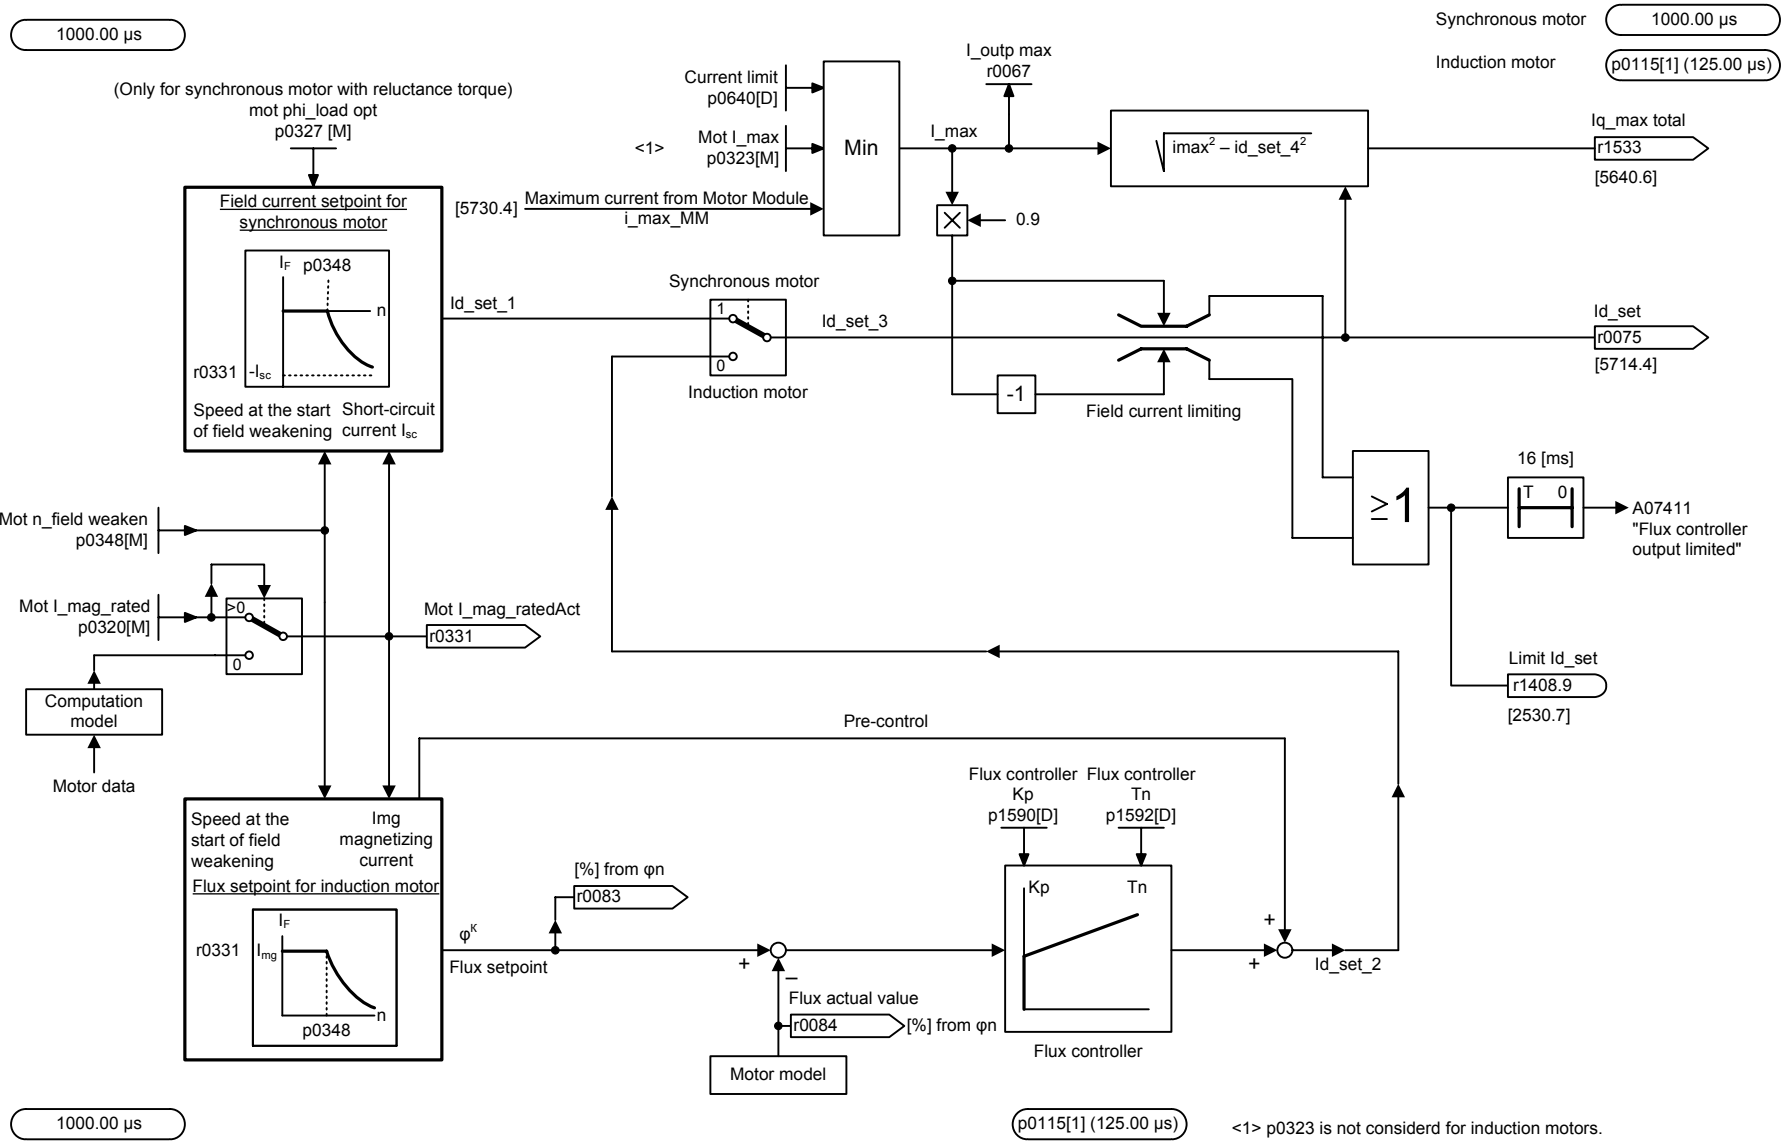

1	2	3	4	5	6	7	8
DO: SERVO					fp_5722_01_eng.vsd	Function diagram	
Servo control - Field current input, flux controller					15.05.07 V02.05.00	SINAMICS S	
							- 5722 -