
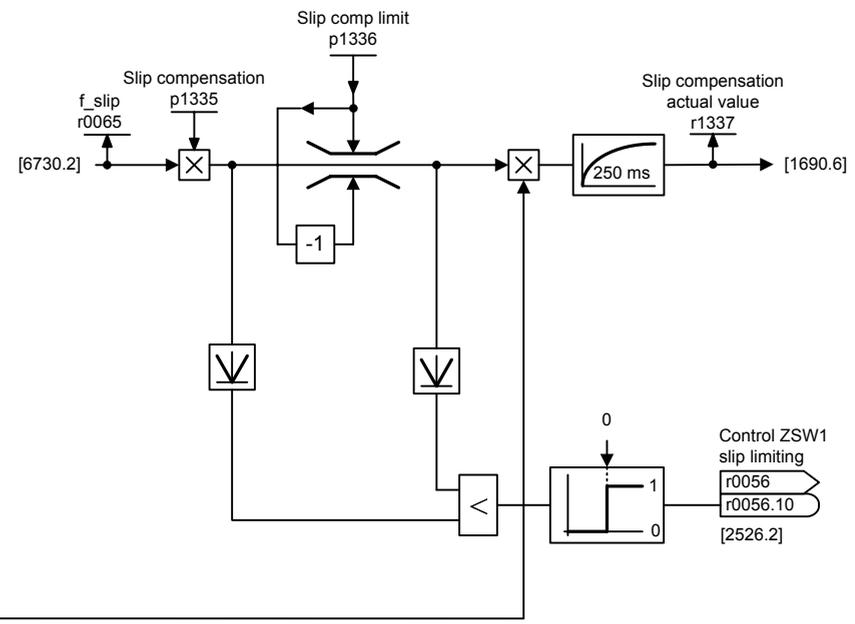


### V/f resonance damping

### V/f slip compensation

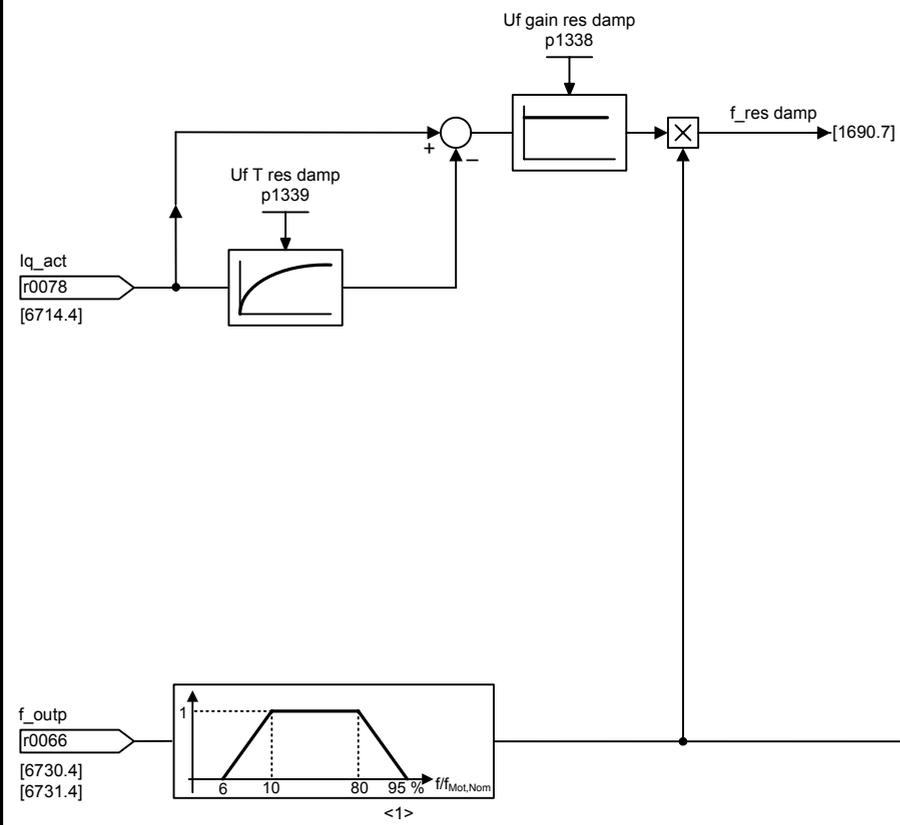

<1> Up to 45 Hz

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6310_01_eng.vsd	Function diagram	
Vector control - Resonance damping and slip compensation					23.03.07 V02.05.00	SINAMICS S	
<b>- 6310 -</b>							