# Altivar<sup>®</sup> 31



Adjustable Speed Drive Controllers Variadores de velocidad ajustable Variateurs de vitesse

#### Programming Manual Directives de programmation Guide de programación

Retain for future use. / Conservar para uso futuro. / À conserver pour usage ultérieur.









Altivar <sup>®</sup> 31 Adjustable Speed Drive Controllers
Programming Manual 5
Variadores de velocidad Ajustable Altivar <sup>®</sup> 31
· ····································
Manual de programación97
I
Variateurs de vitesse Altivar <sup>®</sup> 31
Guide de programmation

SECTION 1:	INTRODUCTION	Product Range	7
		About This Document	7
		Hazard Categories and Special Symbols	
		Product support	8
		Start-Up Overview	
		Preliminary Recommendations	
		Precautions	. 10
		Starting from Line Power	
		Power Up after a Manual Fault Reset or Stop Command	
		Test on a Low Power Motor or without a Motor	
		Using Motors in Parallel	. 11
		Operation on an Impedance Grounded System	. 11
		Programming Recommendations	
		Factory Settings	. 12
		Drive Thermal Protection	. 13
		Ventilation	. 13
		Motor Thermal Protection	. 14
SECTION 2	PROGRAMMING	Drive Keypad Display	15
020110112		ATV31•••••• Controllers	
		ATV31A Controllers	
		Remote Keypad Display	
		Saving and Loading Configurations	
		Accessing the Menus	
		Accessing the Parameters	
		bFr Parameter	
		Function Compatibility	
		Logic and Analog Input Application Functions	
SECTION 3:	MENUS	Settings Menu SEt-	23
		Drive Control Menu drC-	
		I/O Menu I-O-	
		Control Menu CtL-	
		Control Channels	. 34
		Parameter LAC	. 35
		Parameter LAC = L1 or L2	. 36
		Parameter LAC = L3	. 37
		Reference Channel for LAC = L1 or	. 39
		Control Channel for LAC = L1 or L2	. 40
		Reference Channel for LAC = L3	. 41
		Control Channel for LAC = L3:	
		CHCF = SIM, Combined Reference and Control	. 42
		Control Channel for LAC = L3:	
		CHCF = SEP, Mixed Mode (Separate Reference and Control)	. 43
		Application Functions Menu FUn-	. 48
		Summing Inputs	. 54
		Preset Speeds	. 55
			59
		+/- Speed	
		+/- Speed PI Regulator	
			. 62
		PI Regulator Manual–Automatic Operation with PI Regulator Brake Control	. 62 . 64 . 68
		PI Regulator Manual-Automatic Operation with PI Regulator Brake Control Management of Limit Switches	. 62 . 64 . 68 . 74
		PI Regulator Manual–Automatic Operation with PI Regulator Brake Control Management of Limit Switches Fault Menu FLt	. 62 . 64 . 68 . 74 . 76
		PI Regulator Manual–Automatic Operation with PI Regulator Brake Control Management of Limit Switches Fault Menu FLt Communication Menu COM-	. 62 . 64 . 68 . 74 . 76 . 80
		PI Regulator Manual–Automatic Operation with PI Regulator Brake Control Management of Limit Switches Fault Menu FLt	. 62 . 64 . 68 . 74 . 76 . 80

SECTION 4: MAINTENANCE AND TROUBLE-	Precautions	85
SHOOTING	Routine Maintenance	85
	Fault Display	85
	Drive Controller Does Not Start, No Fault Displayed	
	Clearing Faults	
	Faults Which Cannot Be Automatically Reset	
	Faults Which Can Be Automatically Reset	
	Faults That Reset When the Fault Is Cleared	
	Configuration Settings Tables	
	Drive Controller and Customer ID	
	1st level Adjustment Parameter	
	Settings menu	
	Drive Menu	90
	I/O Menu	90
	Control Menu	
	Application Functions Menu	91
	Fault Menu	93
	Communication Menu	93
	Index of Parameter Codes	
	Index of Functions	95

### **SECTION 1: INTRODUCTION**

#### **PRODUCT RANGE** The Altivar 31 (ATV31) family of adjustable frequency AC drive controllers is used for controlling three-phase asynchronous motors. The controllers range from: 0.25 to 3 hp (0.18 to 2.2 kW), 208/230/240 V, single-phase input 0.25 to 20 hp (0.18 to 15 kW), 208/230/240 V, three-phase input ٠ 0.5 to 20 hp (0.37 to 15 kW), 400/460/480 V, three-phase input 1 to 20 hp (0.75 to 15 kW), 525/575/600 V, three-phase input • Some ATV31 controllers are available with a reference potentiometer, a run button, and a stop/reset button. These controllers are designated as ATV31 ••••• A controllers throughout this manual. The symbol "•" in a catalog number designates parts of the number that vary with rating. ABOUT THIS DOCUMENT This manual contains programming instructions for ATV31 drive controllers. The following documentation is also provided with the controller:

- Altivar 31 Installation Manual, VVDED303041US
- Altivar 31 Start-Up Guide, VVDED303043US

Refer to the *ATV31 Installation Manual* for instructions on receiving, inspection, mounting, electrical installation, and wiring. Refer to the *ATV31 Start-Up Guide* for instructions on bringing the drive controller into service with the factory configuration.

Refer to the Index of Parameter Codes and the Index of Functions on pages 94–95 of for an alphabetical index of the codes and functions discussed in this manual.

NOTE: Throughout this manual, and on the drive keypad display, a dash appears after menu and sub-menu codes to differentiate them from parameter codes. For example, SEt- is a menu, but ACC is a parameter.

# HAZARD CATEGORIES AND SPECIAL SYMBOLS

The following symbols and special messages may appear in this manual or on the equipment to warn of potential hazards.

The addition of the lightening bolt or ANSI man symbol to a "Danger" or "Warning" safety label affixed to the equipment indicates an electrical hazard which will result in personal injury if the instructions are not followed.

The addition of the exclamation point symbol to a safety message in the manual indicates potential personal injury hazards. Obey all safety messages introduced by this symbol to avoid possible injury or death.

Symbol	Name
4	Lightening Bolt
ý	ANSI Man
	Exclamation Point

# **A** DANGER

**DANGER** indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

# A WARNING

**WARNING** indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

# **A**CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

# CAUTION

**CAUTION**, used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, **can result in** property damage.

For support and assistance, contact the Drives Product Support Group. The Drives Product Support group is available 24 hours a day, 365 days a year. They can work with you over the telephone to diagnose application or product problems and to advise the correct course of action.

Telephone919-266-8600E-maildrivepsg@us.schneider-electric.comFax919-217-6508

#### PRODUCT SUPPORT

ENGLISH

#### START-UP OVERVIEW

The following procedure is an overview of the minimum steps necessary for bringing an ATV31 drive controller into service. Refer to the *ATV31 Installation Manual* for the mounting, wiring, and bus voltage measurement steps. Refer to the appropriate sections of this manual for the programming steps.

- 1. Mount the drive controller. Refer to the ATV31 Installation Manual.
- 2. Make the following connections to the drive controller. Refer to the *ATV31 Installation Manual*:
  - Connect the grounding conductors.
  - Connect the line supply. Ensure that it is within the voltage range of the drive controller.
  - Connect the motor. Ensure that its rating corresponds to the drive controller's voltage.
- 3. Power up the drive controller, but do not give a run command.
- 4. Configure bFr (motor nominal frequency) if it is other than 50 Hz. bFr appears on the display the first time the drive controller is powered up. It can be accessed in the drC- menu (page 27) anytime.
- 5. Configure the parameters in the drC- menu if the factory configuration is not suitable. Refer to page 12 for the factory settings.
- Configure the parameters in the I-O-, CtL-, and FUn- menus if the factory configuration is not suitable. Refer to page 12 for the factory settings.
- 7. Configure the following parameters in the SEt- menu (pages 23-27):
  - ACC (acceleration) and dEC (deceleration)
  - LSP (low speed when the reference is zero) and HSP (high speed when the reference is at its maximum)
  - ItH (motor thermal protection)
- 8. Remove power from the drive controller and follow the bus voltage measurement procedure in the *ATV31 Installation Manual*. Then connect the control wiring to the logic and analog inputs.
- 9. Power up the drive controller, then issue a run command via the logic input (refer to the *ATV31 Start-Up Guide*).
- 10. Adjust the speed reference.

#### PRELIMINARY RECOMMENDATIONS

#### Precautions

Before powering up and configuring the drive controller, read and observe the following precautions.

# 

#### UNINTENDED EQUIPMENT OPERATION

- Before powering up and configuring the drive controller, ensure that the logic inputs are switched off (State 0) to prevent unintended starting.
- An input assigned to the run command may cause the motor to start immediately upon exiting the configuration menus.

Failure to follow these instructions will result in death or serious injury.

### **A** WARNING

#### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure.
- Examples of critical control functions are Emergency Stop and Overtravel Stop.
- Separate or redundant control paths must be provided for critical control functions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

## CAUTION

#### DAMAGED EQUIPMENT

Do not operate or install any drive controller that appears damaged.

Failure to follow this instruction can result in equipment damage.

Starting from Line Power	If starting the drive controller from line power, limit operations of the line contactor to fewer than one per minute <b>to avoid premature failure of the filter capacitors and precharge resistors</b> . Use inputs LI1 to LI6 to control the drive controller. The motor thermal state memory returns to zero when line power is removed from the drive controller.
Power Up after a Manual Fault Reset or Stop Command	With the factory configuration, when the drive controller is powered up after a manual fault reset or a stop command, the forward, reverse, and DC injection stop commands must be reset for the drive controller to start. If they are not reset, the drive controller will display nSt and will not start. If automatic restart is configured (parameter Atr in the FLt- menu, see page 77) the reset is not necessary.
Test on a Low Power Motor or without a Motor	With the factory configuration, motor phase loss detection (OPL) is active. To check the drive controller in a test or maintenance environment without having to switch to a motor with the same rating as the drive controller, disable motor phase loss detection and configure the voltage/frequency ratio (UFt) to L, constant torque (see page 29). The drive controller will not provide motor thermal protection if the motor current is less than 0.2 times the nominal drive current.
Using Motors in Parallel	When using motors in parallel, configure the voltage/frequency ratio, UFt, to L (constant torque) and provide an alternate means of thermal protection on every motor. The drive controller cannot provide adequate motor thermal protection for each motor.
Operation on an Impedance Grounded System	When using the drive controller on a system with an isolated or impedance grounded neutral, use a permanent insulation monitor compatible with non- linear loads.
	ATV31••••••M2 <sup>1</sup> and N4 drive controllers feature built-in radio frequency interference (RFI) filters which have capacitors to ground. These filters can be disconnected from ground when using the drive controller on an impedance grounded system to increase the operating life of their capacitors. Refer to the <i>ATV31 Installation Manual</i> for more information.
Programming Recommendations	Use the configuration settings tables beginning on page 89 to prepare and record the configuration before programming the drive controller. It is always possible to <b>return to the factory settings</b> by setting the FCS parameter to InI in the drC-, I-O-, CtL-, or FUn- menus. See pages 30, 33, 47, and 75.
	When first commissioning an ATV31 drive controller for a 60 Hz system, perform a factory parameter reset. Be sure to set bFr to 60 Hz.
	We recommend using the auto-tuning function to optimize the drive controller's accuracy and response time. Auto-tuning measures the stator resistance of the motor to optimize the control algorithms. See page 29.

<sup>&</sup>lt;sup>1</sup> Throughout this manual, the symbol "•" in a catalog number denotes the portion of the number that varies with the drive controller rating.

#### FACTORY SETTINGS

The ATV31 drive controller is supplied ready for use in most applications, with the factory settings shown in Table 1.

Table 1:	Factory Settings
----------	------------------


Function	Code	Factory Setting			
Display	—	r d			
Motor frequency	bFr	50 Hz			
Type of voltage/frequency ratio	UFt	n: sensorless flux vector control for constant torque applications			
Normal stop mode	Stt	5 E n: normal stop on deceleration ramp			
Stop mode in the event of a fault	EPL	9 E 5: freewheel stop			
Linear ramps	ACC, dEC	3 seconds			
Low speed	LSP	0 Hz			
High speed	HSP	50 Hz			
Frequency loop gain	FLG, StA	Standard			
Motor thermal current	ItH	Nominal motor current (value depends on the drive controller rating)			
DC injection braking	SdC	0.7 x nominal drive controller current for 0.5 seconds			
Deceleration ramp adaptation	brA	9 E 5: automatic adaptation of the deceleration ramp in the event of overvoltage on braking			
Automatic restart	Atr	n D: no automatic restart after a fault			
Switching frequency	SFr	4 kHz			
	LI1, LI2	2-wire transition detection control: LI1 = forward, LI2 = reverse. Not assigned on ATV31•••••A <sup>1</sup> drive controllers			
Logic inputs	LI3, LI4	4 preset speeds: speed 1 = speed reference or LSP (see page 24) speed 2 = 10 Hz speed 3 = 15 Hz speed 4 = 20 Hz			
	LI5, LI6	Not assigned			
	Al1	Speed reference 0–10 V. Not assigned on ATV31••••••A <sup>1</sup> drive controllers.			
Analog inputs	Al2	Summed speed reference input 0 ±10 V			
	AI3	4–20 mA, not assigned			
Relays	R1	The contact opens in the event of a fault or if power is removed from the drive controller.			
-	R2	Not assigned			
Analog output	AOC	0–20 mA, not assigned			

<sup>1</sup> ATV31-----A range drive controllers have a reference potentiometer, a run button, and a stop/reset button. They are factory set for local control with the run button, the stop/reset button, and the reference potentiometer active. Logic inputs LI1 and LI2 and analog input AI1 are inactive (not assigned).

#### **DRIVE THERMAL PROTECTION**

Thermal protection of the drive controller is achieved with a positive temperature coefficient (PTC) resistor on the heatsink or power module. In the event of an overcurrent, the drive controller trips to protect itself against overloads. Typical tripping points are:

- Motor current is 185% of nominal drive controller current for 2 seconds
- Motor current is 150% of nominal drive controller current for 60 seconds

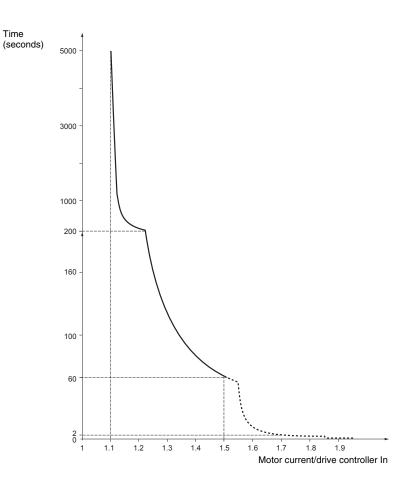


#### Ventilation

The fan starts when the drive controller is powered up, but stops after 10 seconds if a run command is not received. The fan starts automatically when the drive controller receives an operating direction and reference. It stops a few seconds after motor speed is less than 0.2 Hz and injection braking is completed.

#### MOTOR THERMAL PROTECTION

Motor thermal protection is achieved by continuous calculation of  $l^2t$ . The protection is available for self-cooled motors.

NOTE: The motor thermal state memory returns to zero when line power is removed from the drive controller.

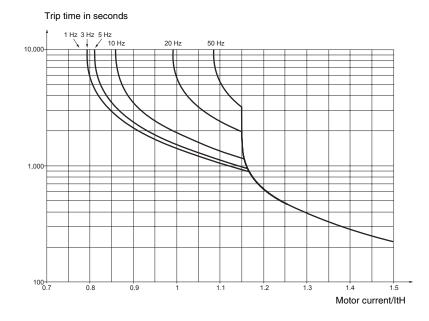

## CAUTION

#### INADEQUATE MOTOR THERMAL PROTECTION

The use of external overload protection is required under the following conditions:

- Starting from line power
- Running multiple motors
- Running motors rated at less than 0.2 times the nominal drive current
- Using motor switching

Failure to follow this instruction can result in equipment damage.

Refer to "Preliminary Recommendations" on pages 10–11 for more information about external overload protection.

### **SECTION 2: PROGRAMMING**


#### DRIVE KEYPAD DISPLAY

### A DANGER

#### **UNQUALIFIED USER**

- This equipment must be installed and serviced only by qualified personnel.
- Qualified personnel performing diagnostics or troubleshooting that requires electrical conductors to be energized must comply with NFPA 70 E - Standard for Electrical Safety Requirements for Employee Workplaces and OSHA Standards - 29 CFR Part 1910 Subpart S Electrical.

Failure to follow these instructions will result in death or serious injury.

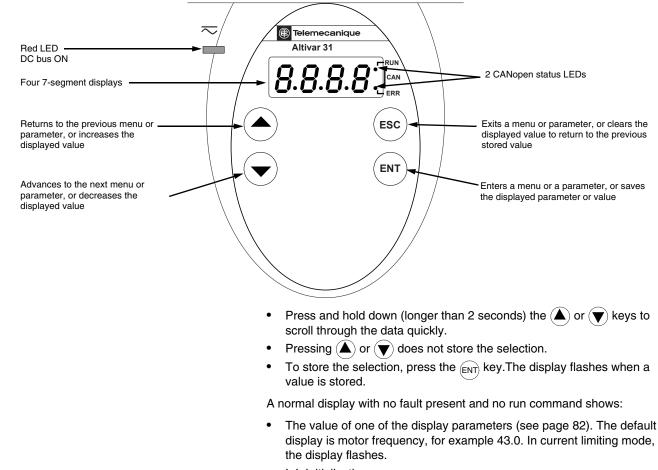

• Inl: Initialization sequence


#### ATV31 ----- Controllers

- dcb: DC injection braking in progress
- nSt: Freewheel stop
- FSt: Fast stop
- tUn: Auto-tuning in progress

If a fault is present, the display flashes.

#### ATV31•••••A Controllers

ATV31••••••A controllers have a reference potentiometer, a run button, and a stop/reset button.

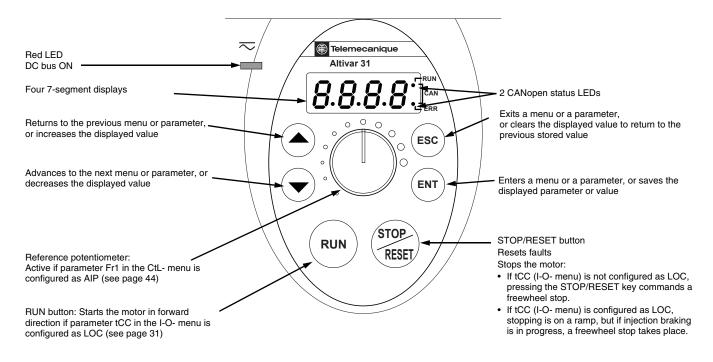

- Press and hold down (longer than 2 seconds) the or keys to scroll through the data quickly.
- Pressing (▲) or (▼) does not store the selection.
- To store the selection, press the ENT key. The display flashes when a value is stored.

A normal display with no fault present and no run command shows:

- The value of one of the display parameters (see page 82). The default display is motor frequency, for example 43.0. In current limiting mode, the display flashes.
- Inl: Initialization sequence
- rdY: Drive ready
- dcb: DC injection braking in progress
- nSt: Freewheel stop
- FSt: Fast stop
- tUn: Auto-tuning in progress


If a fault is present, the display flashes.

#### **REMOTE KEYPAD DISPLAY**

The optional remote keypad display is a local control unit that can be wallmounted on the door of an enclosure. It has a cable with connectors for connection to the drive serial link (refer to the manual supplied with the display). The remote keypad display has the same display and programming buttons as the drive controller, with the addition of a switch to lock access to the menu and three buttons for commanding the drive controller:

- FWD/REV commands the direction of rotation.
- RUN commands the motor to run.
- STOP/RESET commands the motor to stop or resets a fault. Pressing the STOP/RESET button once stops the motor; pressing it a second time stops DC injection braking if it is configured.

In order for the remote keypad display to be active, the tbr parameter in the COM- menu must remain at the factory setting, 19.2 (19,200 bps, see page 80).

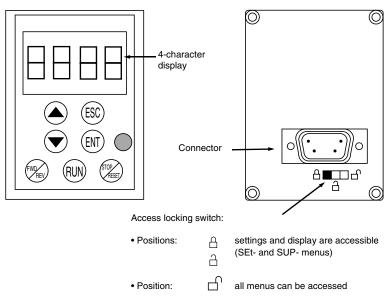


NOTE: Password protection has priority over the access locking switch. See page 84.

Placing the access locking switch in the locked position also prevents the drive settings from being accessed via the drive controller keypad. When the remote keypad display is disconnected, if the access locking switch is in the locked position, *the drive controller keypad also remains locked*.

#### Saving and Loading Configurations

Up to four complete configurations can be stored in the remote keypad display and transferred to other drive controllers of the same rating. Four different operations for the same device can also be stored on the terminal. See the SCS and FCS parameters in the drC-, I-O-, CtL-, or FUn- menus. See pages 30, 33, 47, and 75.

#### **ACCESSING THE MENUS**

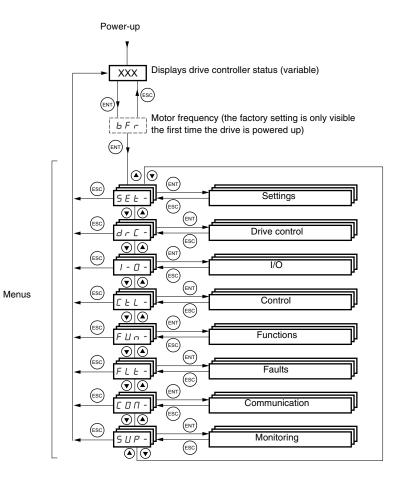


For added convenience, some parameters can be accessed in more than one menu. For example, return to factory settings (FCS) and saving the configuration (SCS) are available in multiple menus.


NOTE: Throughout this guide, a dash appears after menu codes to differentiate them from parameter codes. For example, SEt- is a menu, but ACC is a parameter.

#### **ACCESSING THE PARAMETERS**


The following figure illustrates how to access parameters and assign their values. To store the parameter value, press the (ENT) key. The display flashes when a value is stored.

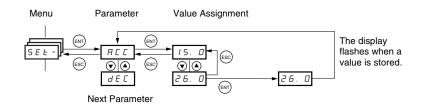

All of the menus are drop-down type menus. Once you have reached the last parameter in a list, press the  $\checkmark$  key to return to the first parameter. From the first parameter in the list, press the  $\blacktriangle$  key to jump to the last parameter.

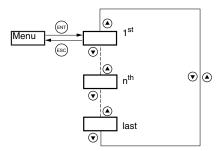

If you have modified a parameter in a menu and you return to that menu without accessing another menu in the meantime, you will be taken directly to the parameter you last modified. See the illustration below. If you have accessed another menu or have restarted the drive controller since the modification, you will be taken to the first parameter in the menu. See the illustration above.

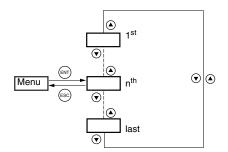

Motor frequency, bFr, can only be modified when the drive controller is stopped and not receiving a run command.

Code	Description	Adjustment range	Factory setting
ЬFг	Motor frequency	50 or 60 Hz	50 Hz
	This is the first parameter displayed when the drive control bFr can be modified at any time in the drC- menu. Modifying this parameter also modifies the values of the fi (page 24), Ftd (page 27), FrS (page 28), and tFr (page 30)	ollowing param	

#### **bFr Parameter**

#### **FUNCTION COMPATIBILITY**

Automatic restart, catch on the fly, and reverse direction are only available as described below:

- Automatic restart is only available in 2-wire control (tCC = 2C and • tCt = LEL or PFO, see page 31).
- Catch on the fly is only available in 2-wire control (tCC = 2C and tCt = LEL or PFO, see page 31). It is deactivated if automatic DC injection braking is configured as DC (AdC = Ct, see page 53).
- Reverse direction is only available on ATV31 ----- A controllers if local • control is active (tCC = LOC, see page 31).

The choice of application functions is limited by the number of I/O available and by the fact that some functions are incompatible with one another as illustrated in the figure below. Functions which are not listed in the figure are fully compatible. If there is an incompatibility between functions, the first function configured will prevent the others from being configured.

	Summing inputs	+/- Speed <sup>1</sup>	Management of limit switches	Preset speeds	Pl regulator	Jog operation	Brake sequence	DC injection stop	Fast stop	Freewheel stop
Summing inputs		•		Ť	٠	t				
+/- Speed <sup>1</sup>	•			•	•	•				
Management of limit switches					•					
Preset speeds	+	•			•	t				
PI regulator	•	•	•	•		•	•			
Jog operation	+	•		ŧ	•		•			
Brake sequence					•	•		•		
DC injection stop							•			t
Fast stop										t
Freewheel stop								+	+	
1 Excluding a special applic	ation w	ith refe	rence	channe	l Fr2 (s	see nao	nes 39	and 41	)	

Excluding a special application with reference channel Fr2 (see pages 39 and 41).



Incompatible functions

Compatible functions

Not applicable

+

t

Functions which cannot be active at the same time. The arrow points to the function that has priority.

Stop functions have priority over run commands. Speed references via logic command have priority over analog references.

#### LOGIC AND ANALOG INPUT APPLICATION FUNCTIONS

Tables 2–5 list the functions that can be assigned to the logic and analog inputs and their factory assignments. A single input can activate several functions at the same time. For example, reverse and second ramp can be assigned to one input. When more than one function is assigned to an input, ensure that the functions are compatible. Use the LIA- and AIA- sub-menus of the SUP- menu (see page 84) to display the functions assigned to the inputs and to check their compatibility.

#### Table 2: Logic Inputs

Frenchland	0 - 1-		Factory Setting		
Function	Code	See Page:	ATV31•••••	ATV31•••••A	
Not assigned	_	_	LI5–LI6	LI1–LI2 LI5–LI6	
Forward	—	-	LI1		
2 preset speeds	P 5 2	56	LI3	LI3	
4 preset speeds	P 5 4	56	LI4	LI4	
8 preset speeds	P 5 8	56	—	—	
16 preset speeds	P5 16	57	—	—	
2 preset PI references	Pr2	66	—	_	
4 preset PI references	Pr4	66	_	_	
+ speed	U 5 P	61	_	_	
- speed	d 5 P	61	_	_	
Jog operation	J 0 G	58	_	_	
Ramp switching	r P 5	50	_	_	
Switching for 2 <sup>nd</sup> current limit	L C 2	71	_	_	
Fast stop via logic input	F 5 Ł	51	_	_	
DC injection via logic input	d C I	51	_	_	
Freewheel stop via logic input	n 5 E	52	_	_	
Reverse	r r 5	31	LI2	_	
External fault	EEF	78	_	_	
RESET (fault reset)	r SF	77	_	_	
Forced local mode	FL D	80	_	_	
Reference switching	r F E	45	_	_	
Control channel switching	<i>L L</i> 5	46	_	_	
Motor switching	E H P	72	_	_	
Limiting of forward motion (limit switch)	LAF	74	_	-	
Limiting of reverse motion (limit switch)	LAr	74	_	_	
Fault inhibit	InH	79	_	_	

#### Table 3: Analog Inputs

Function		See Page:	Factory Setting		
	Code		ATV31•••••	ATV31•••••A	
Not assigned	_	_	AI3	Al1 - Al3	
Reference 1	Frl	44	Al1	AIP (potentiometer)	
Reference 2	Fr2	44		—	
Summing input 2	582	54	Al2	AI2	
Summing input 3	583	54	_	—	
PI regulator feedback	PIF	66	_	_	

#### Table 4: Analog and Logic Outputs

Function	Code	See Page:	Factory Setting
Not assigned	-	_	AOC/AOV
Motor current	D C r	32	_
Motor frequency	rFr	32	_
Motor torque	010	32	_
Power supplied by the drive controller	0 P r	32	_
Drive fault (logic data)	FLE	32	_
Drive running (logic data)	rUn	32	_
Frequency threshold reached (logic data)	FER	32	_
High speed (HSP) reached (logic data)	FLA	32	_
Current threshold reached (logic data)	C E A	32	_
Frequency reference reached (logic data)	5 r A	32	_
Motor thermal threshold reached (logic data)	E S A	32	_
Brake sequence (logic data)	ЬΙС	32	_

#### Table 5: Relays

Function	Code	See Page:	Factory Setting
Not assigned	_	-	R2
Drive fault	FLE	32	R1
Drive running	гUп	32	_
Frequency threshold reached	FER	32	_
High speed (HSP) reached	FLR	32	_
Current threshold reached	C E A	32	_
Frequency reference reached	Sr A	32	_
Motor thermal threshold reached	E S A	32	_
Brake sequence	ЬΙΓ	32	_

### **SECTION 3: MENUS**

## A DANGER

#### UNINTENDED EQUIPMENT OPERATION

Ensure that changes to the operating settings do not present any danger, especially when making adjustments while the drive controller is running the motor.

Failure to follow these instructions will result in death or serious injury.


## CAUTION

#### MOTOR OVERHEATING

- This drive controller does not provide direct thermal protection for the motor.
- Use of a thermal sensor in the motor may be required for protection at all speeds or loading conditions.
- Consult the motor manufacturer for the thermal capability of the motor when operated over the desired speed range.

Failure to follow these instructions can result in equipment damage.



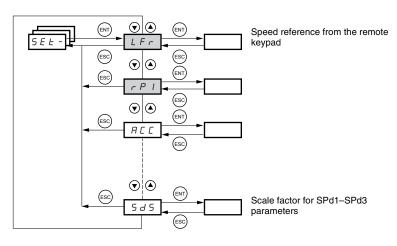

The parameters in the SEt- menu can be modified with the drive controller running or stopped. However, we recommend making modifications to the settings with the drive controller stopped.

5*E E -*

Code	Description		Adjustment Range	Factory Settin		
	Speed reference from the remote keypad.		0 to HSP			
LFr	This parameter appears if LCC = YES (page 46) or if Fr1/Fr2 = LCC (page 44), and if the remote keypad is online. In this case, LFr can also be accessed via the drive controller keypad. LFr is reset to 0 when the drive controller is powered down.					
r P I	Internal PI regulator reference	See page 62.	0.0 to 100%	0		
ACC	Acceleration ramp time		0.1 to 999.9 s	3 s		
	Defined as the time it takes for the motor to go from 0 Hz to Fi	S (nominal freque	ency, see page 28).	1		
8 C 2	2 <sup>nd</sup> acceleration ramp time	See page 50.	0.1 to 999.9 s	5 s		
d E 2	2 <sup>nd</sup> deceleration ramp time	See page 50.	0.1 to 999.9 s	5 s		
	Deceleration ramp time		0.1 to 999.9 s	3 s		
d E C	Defined as the time it takes for the motor to go from FrS (nom Ensure that dEC is not set too low for the load.	inal frequency, se	e page 28) to 0 Hz.			
EA I	Start of custom acceleration ramp, rounded as a percentage of total ramp time (ACC or AC2)	See page 49.	0 to 100	10%		
E A S	End of custom acceleration ramp, rounded as a percentage of total ramp time (ACC or AC2)	See page 49.	0 to (100-tA1)	10%		
E A 3	Start of custom deceleration ramp, rounded as a percentage of total ramp time (dEC or dE2)	See page 49.	0 to 100	10%		
ĿЯЧ	End of custom deceleration ramp, rounded as a percentage of total ramp time (dEC or dE2)	See page 49.	0 to (100-tA3)	10%		
LSP	Low speed		0 to HSP	0 Hz		
LSP	Minimum reference		ł			
НSР	High speed		LSP to tFr	bFr		
	Maximum reference. Ensure that this setting is suitable for the	motor and the ap	oplication.	•		
	Current used for motor thermal protection.		0.2 to 1.5 In <sup>1</sup>	Varies with drive controller rating		

<sup>1</sup> In is the nominal drive controller current indicated on the drive controller nameplate.



These parameters appear regardless of how the other menus have been configured. They only appear in the Settings menu.

These parameters only appear if the corresponding function has been selected in another menu. To facilitate programming, they can also be accessed and adjusted from the menu where the corresponding function is found. A detailed description of these functions can be found on the indicated pages.

	J			
Code	Description		Adjustment Range	Factory Setting
	IR compensation or voltage boost		0 to 100%	20
ШFг	If UFt (page 29) = n or nLd, UFr is IR compensation. If UFt = L or P, UFr is voltage boost. Used to optimize torque at very low speed. Increase UFr if the To avoid operating instability, ensure that the value of UFr is no NOTE: Modifying UFt (page 29) will cause UFr to return to the	ot too high for a w	arm motor.	•
	Frequency loop gain	raciony county (20	1 to 100%	20
	This parameter can only be accessed if UFt (page 29) = n or n	Ld.		-
	FLG adjusts the speed ramp based on the inertia of the driven If the value is too low, the response time is longer. If the value		ting instability can result.	
FLG	50 50 40 - 40 - 30 - In this case, 30 -	G correct	50 40 30	ELG high this case, duce FLG
	20 10 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 -10 0 0 0 -10 0 0 0 0 0 -10 0 0 0 0 0 0 0 0 0 0 0 0 0	0.3 0.4 0.8	$\begin{array}{c} 20 \\ 10 \\ 0 \\ -10 \\ 0 \\ 0 \\ -10 \\ 0 \\ 0 \\ 0 \\ -1 \\ 0 \\ 0 \\ -1 \\ 0 \\ 0 \\ 0 \\ -1 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ $	0.2 0.3 0.4
	This parameter can only be accessed if UFt (page 29) = n or nl After a period of acceleration or deceleration, StA adapts the re If the value is too low, overspeed or operating instability can re	eturn to a steady s		ne machine.
5 E A	$\begin{array}{c} 50 \\ 40 \\ 30 \\ 20 \\ 10 \\ 0 \\ -10 \\ \hline 0 \\ 0 \\ 0 \\ -10 \\ \hline 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 $	correct	Hz S 50 40 30 20 10 0 -10 0 0.1 0	StA high In this case, reduce StA
5 L P	50     50       40     40       30     10       10     10       10     10	correct 0.3 0.4 0.5 Ld. on. prrect speed in ste	Hz $hz$ S $10^{-10} hz$ S $10^{-10} h$	StA high In this case, reduce StA
	50 40 30 20 10 10 0 0 10 0 0 10 0 0 10 0 0 10 0 0 1 0 29 1 1 0 1 10 29 1 10	0.3 0.4 0.5 Ld. on. prrect speed in ste nd the speed is un	Hz $hz$ S $10^{-10} hz$ S $10^{-10} h$	StA high In this case, reduct StA
S L P	50 40 30 20 10 10 10 10 10 10 10 10 10 1	correct 0.3 0.4 0.8 Ld. on. orrect speed in ste nd the speed is un	Hz = 5 $50$ $40$ $40$ $30$ $20$ $10$ $10$ $-10$ $0$ $10$ $0$ $10$ $10$ $10$ $10$ $10$	StA high In this case, reduce StA
SLP IdC	50 40 30 20 10 10 10 10 10 10 10 10 10 1	correct 0.3 0.4 0.5 Ld. on. prrect speed in ste nd the speed is un See page 51.	Hz = 5 $50$ $40$ $30$ $20$ $10$ $0$ $10$ $0$ $10$ $0$ $10$ $0$ $10$ $0$ $10$ $1$	5tA high In this case, reduce 5tA
5 L P I d C E d C	50 40 30 40 50 10 10 10 10 10 10 10 10 10 1	correct 0.3 0.4 0.4 Ld. on. orrect speed in ste nd the speed is un See page 51. See page 51.	Hz $hz$ S 50 $hz$ $hz$ $hz$ $hz$ $hz$ $hz$ $hz$ $hz$	StA high           In this case, reduced           0.2         0.3         0.4           100           0.7 In           0.5 s
5 L P I d C E d C <u>E d C I</u>	50 40 40 50 10 10 10 10 10 10 10 10 10 1	correct 0.3 0.4 0.5 Ld. on. orrect speed in ste nd the speed is un See page 51. See page 51. See page 53.	Hz + S $50$ $40$ $30$ $20$ $10$ $-10$ $0  to 150%$ eady state. nstable. $0  to In (In is the nominal drive controller current indicated on the nameplate).$ $0.1  to 30 s$ $0.1  to 30 s$	StA high           In this case, reduce           0.2         0.3         0.4           100           0.7 In           0.5 s           0.5 s

<sup>1</sup> These settings are not related to the Automatic DC Injection function.



These parameters only appear if the corresponding function has been selected in another menu. To facilitate programming, they can also be accessed and adjusted from the menu where the corresponding function is found. A detailed description of these functions can be found on the indicated pages.

5 E

Code	Description		Adjustment Range	Factory Setting			
	Skip frequency		0 to 500	0 Hz			
JPF	JPF prevents prolonged operation at a frequency range of $\pm$ to resonance. Setting the function to 0 renders it inactive.	1 Hz around JPF. TI	his function avoids a critic	al speed which leads			
	2 <sup>nd</sup> skip frequency		0 to 500	0 Hz			
JF2	JF2 prevents prolonged operation at a frequency range of ± 1 Hz around JF2. This function avoids a critical speed which leads resonance. Setting the function to 0 renders it inactive.						
JGF	Jog operating frequency	See page 58.	0 to 10 Hz	10 Hz			
r P G	PI regulator proportional gain	See page 66.	0.01 to 100	1			
r IG	PI regulator integral gain	See page 66.	0.01 to 100/s	1/s			
FЬS	PI feedback multiplication coefficient	See page 66.	0.1 to 100	1			
PIC	Reversal of the direction of correction of the PI regulator	See page 66.	nO - YES	nO			
r P 2	2 <sup>nd</sup> preset PI reference	See page 66.	0 to 100%	30%			
rРЭ	3 <sup>rd</sup> preset PI reference	See page 66.	0 to 100%	60%			
rРЧ	4 <sup>th</sup> preset PI reference	See page 66.	0 to 100%	90%			
<u>5 P 2</u>	2 <sup>nd</sup> preset speed	See page 57.	0 to 500 Hz	10 Hz			
<u>5 P 3</u>	3 <sup>rd</sup> preset speed	See page 57.	0 to 500 Hz	15 Hz			
<u>5 P 4</u>	4 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	20 Hz			
5 P 5	5 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	25 Hz			
5 P 6	6 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	30 Hz			
5 P 7	7 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	35 Hz			
5 P 8	8 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	40 Hz			
5 P 9	9 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	45 Hz			
5 P I D	10 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	50 Hz			
5 P I I	11 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	55 HZ			
5 P I 2	12 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	60 Hz			
5 P I 3	13 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	70 Hz			
5 P I 4	14 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	80 Hz			
5 P I 5	15 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	90 Hz			
5 P I 6	16 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	100 Hz			
ELI	Current limit		0.25 to 1.5 In <sup>1</sup>	1.5 ln			
	Used to limit the torque and the temperature rise of the moto			. <b>.</b> .			
C L 2	2 <sup>nd</sup> current limit	See page 71.	0.25 to 1.5 In	1.5 ln			
EL S	Low speed operating time After operation at LSP for a defined period, a motor stop is re is greater than LSP and if a run command is still present.	quested automatical	0 to 999.9 s ly. The motor restarts if the	0 (no time limit) e frequency reference			
r 5 L	Restart error threshold (wake-up threshold)	See page 67.	0 to 100%	0			
UFr2	IR compensation, motor 2	See page 73.	0 to 100%	20			
FLGZ	Frequency loop gain, motor 2	See page 73.	1 to 100%	20			

<u>E -</u> µ◄─	-	
	Code	Description
		Skip frequency
	100	

	to resonance. Setting the function to 0 renders it inactive.			
	2 <sup>nd</sup> skip frequency		0 to 500	0 Hz
JF 2	JF2 prevents prolonged operation at a frequency range of $\pm$ 1 Hz resonance. Setting the function to 0 renders it inactive.	around JF2. This	function avoids a critical	speed which leads to
J G F	Jog operating frequency	See page 58.	0 to 10 Hz	10 Hz
r P G	PI regulator proportional gain	See page 66.	0.01 to 100	1
r IG	PI regulator integral gain	See page 66.	0.01 to 100/s	1/s
FЬS	PI feedback multiplication coefficient	See page 66.	0.1 to 100	1
PIC	Reversal of the direction of correction of the PI regulator	See page 66.	nO - YES	nO
r P 2	2 <sup>nd</sup> preset PI reference	See page 66.	0 to 100%	30%
r P 3	3 <sup>rd</sup> preset PI reference	See page 66.	0 to 100%	60%
r P 4	4 <sup>th</sup> preset PI reference	See page 66.	0 to 100%	90%
<u>5 P 2</u>	2 <sup>nd</sup> preset speed	See page 57.	0 to 500 Hz	10 Hz
<u>5 P 3</u>	3 <sup>rd</sup> preset speed	See page 57.	0 to 500 Hz	15 Hz
<u>5 P 4</u>	4 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	20 Hz
5 P 5	5 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	25 Hz
5 P 6	6 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	30 Hz
5 P 7	7 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	35 Hz
5 P B	8 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	40 Hz
5 P 9	9 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	45 Hz
5 P I D	10 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	50 Hz
5 P I I	11 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	55 HZ
5 P I 2	12 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	60 Hz
5 P I 3	13 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	70 Hz
5 P I 4	14 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	80 Hz
5 P I 5	15 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	90 Hz
5 P 16	16 <sup>th</sup> preset speed	See page 57.	0 to 500 Hz	100 Hz
E L I	Current limit		0.25 to 1.5 In <sup>1</sup>	1.5 ln
L L 1	Used to limit the torque and the temperature rise of the motor.			
E L 2	2 <sup>nd</sup> current limit	See page 71.	0.25 to 1.5 In	1.5 ln
	Low speed operating time		0 to 999.9 s	0 (no time limit)
EL S	After operation at LSP for a defined period, a motor stop is reque is greater than LSP and if a run command is still present.	sted automatically	. The motor restarts if the	e frequency reference
r 5 L	Restart error threshold (wake-up threshold)	See page 67.	0 to 100%	0
UFr2	IR compensation, motor 2	See page 73.	0 to 100%	20
FLG2	Frequency loop gain, motor 2	See page 73.	1 to 100%	20
5 E A 2	Stability, motor 2	See page 73.	1 to 100%	20
SLP2	Slip compensation, motor 2	See page 73.	0 to 150%	100%
<sup>1</sup> In is the nor	minal drive controller current indicated on the drive controller nan	neplate.		




These parameters only appear if the corresponding function has been selected in another menu. To facilitate programming, they can also be accessed and adjusted from the menu where the corresponding function is found. A detailed description of these functions can be found on the indicated pages.

5 E E

Code	Description	Adjustment Range	Factory Setting					
FEd	Motor frequency threshold above which the relay contact (R1 or R2) closes, or output AOV = 10 V. R1, R2, or dO must be assigned to FtA.	0 to 500 Hz	bFr					
E E d	Motor thermal state threshold above which the relay contact (R1 or R2) closes, or output AOV = 10 V. R1, R2, or dO must be assigned to tSA.	0 to 118%	100%					
ГĿd	Motor current threshold beyond which the relay contact (R1 or R2) closes, or output AOV = 10 V. R1, R2, or dO must be assigned to CtA.	0 to 1.5 In <sup>1</sup>	In <sup>1</sup>					
	Scale factor for display parameter SPd1/SPd2/SPd3 (see SUP- menu on page 83)	0.1 to 200	30					
	Used to scale a value (such as motor speed) in proportion to the output frequen	cy rFr.						
	If SdS $\leq$ 1, SPd1 is displayed (possible definition = 0.01).							
	If $1 < SdS \le 10$ , SPd2 is displayed (possible definition = 0.1).							
	If SdS > 10, SPd3 is displayed (possible definition = 1).							
	If SdS > 10 and SdS x rFr > 9999:							
5 d 5	Display of Spd3 = $\frac{SdS \times rFr}{1000}$ (to 2 decimal places).							
	For example, if SdS x rFr equals 24,223, the display shows 24.22.							
	If SdS > 10 and SdS x rFr > 65535, the display shows 65.54.							
	Example: Display motor speed for a 4-pole motor, 1500 rpm at 50 Hz (synchronous speed): SdS = 30 SPd3 = 1500 at rFr = 50 Hz							
SEc	Switching frequency See page 30.	2.0 to 16 kHz	4 kHz					
שרר	This parameter can also be accessed in the drC- menu.							

<sup>1</sup> In is the nominal drive controller current indicated on the drive controller nameplate.

#### DRIVE CONTROL MENU drC-

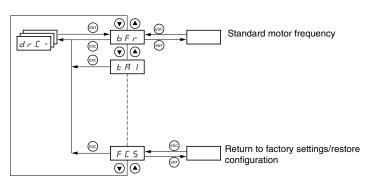

With the exception of tUn, drive control parameters can only be modified when the drive controller is stopped and no run command is present. This menu can be accessed with the access locking switch on the remote keypad display in the  $\Box^{\cap}$  position. Drive controller performance can be optimized by:

- Setting the drive control parameters to the values on the motor nameplate
- Performing an auto-tune operation (on a standard asynchronous motor)

ENGLISH

dr [ -

-	]		
Code	Description	Adjustment Range	Factory Setting
ЬFг	Motor frequency	50 or 60 Hz	50
	This parameter modifies the presets of the following parameters: HSP (page 2 (page 30).	4), Ftd (page 27), FrS (page	28), and tFr
	Nominal motor voltage indicated on the nameplate	Varies with drive controller rating	Varies with drive controller rating
U n 5	ATV31•••M2: 100 to 240 V ATV31•••M3X: 100 to 240 V ATV31•••N4: 100 to 500 V ATV31•••S6X: 100 to 600 V		<u> </u>
	Nominal motor frequency indicated on the nameplate	10 to 500 Hz	50 Hz
	The ratio UnS (in volts) FrS (in Hz) must not exceed the following values:		
Fr 5	ATV31•••M2: 7 ATV31•••M3X: 7 ATV31•••N4: 14 ATV31•••S6X: 17		
	NOTE: Changing the setting of bFr to 60 Hz also changes the setting of FrS to	60 Hz.	
n [ r	Nominal motor current indicated on the nameplate	0.25 to 1.5 In <sup>1</sup>	Varies with drive controller rating
	Nominal motor speed indicated on the nameplate	0 to 32760 rpm	Varies with drive controller rating
	0 to 9999 rpm, then 10.00 to 32.76 krpm		•
	If the nameplate indicates synchronous speed and slip (in Hz or as a percenta speed as follows:	ge) instead of nominal spee	d, calculate nominal
	100 - slip as a%		
n 5 P	Nominal speed = Synchronous speed x 100 000 100 000 000 000 000 000 000 0		
	Nominal speed = Synchronous speed x <u>50 - slip in Hz</u> (50 Hz n or 50	otors)	
	Nominal speed = Synchronous speed x $\frac{60 - \text{slip in Hz}}{60}$ (60 Hz n	otors)	
C 0 5	Motor power factor indicated on the nameplate	0.5 to 1	Varies with drive controller rating

<sup>1</sup> In is the nominal drive controller current indicated on the drive controller nameplate.


Code	Description	Adjustment Range	Factory Setting
	Cold state stator resistance	See below.	nO
	$r_{\rm D}$ : Function inactive. For applications that do not require high performance or do current through the motor) each time the drive is powered up.	o not tolerate automatic a	uto-tuning (passing a
	$I_{n}$ IE: Activates the function. Used to improve low-speed performance, whatev	er the thermal state of th	e motor.
	XXXX: Value of cold state stator resistance used, in m $\Omega$		
r 5 [	NOTE: We recommended that you activate this function for lifting and handle be activated when the motor is cold.	ling applications. This i	unction should only
	When $rSC = InIt$ , parameter tUn is forced to POn. At the next run command, the st The value of parameter rSC then changes to this measured stator resistance valu remains forced to POn. Parameter rSC remains at InIt as long as the stator resist	e (XXXX) and is maintai	ned at that value; tUn
	Value XXXX can be forced or modified using the $igtheadrightarrow igty $ keys.		
	Motor control auto-tuning	See below.	nO
	Before performing an auto-tune, ensure that all the drive control parameters (UnS	, FrS, nCr, nSP, COS) ar	e configured correctly.
ΕUn	<i>n</i> $\square$ : Auto-tuning is not performed. <i>y</i> $E 5$ : Auto-tuning is performed as soon as possible, then the parameter automating fault, to nO. The tnF fault is displayed if tnL = YES (see page 79). <i>d</i> $\square$ <i>n</i> $E$ : Auto-tuning is completed and the measured stator resistance will be use <i>r</i> $\square$ <i>n</i> : Auto-tuning is performed each time a run command is sent. <i>P</i> $\square$ <i>n</i> : Auto-tuning is performed each time the controller is powered up. <i>L</i> 1 to <i>L</i> 15: Auto-tuning is performed when the logic input assigned to this function.	d to control the motor.	
	Note:		
	tUn is forced to POn if rSC is any value other than nO.		
	Auto-tuning will only be performed if no run or braking command is activated. If a f to a logic input, this input must be set to 1 (active at 0). Auto-tuning may last for 1 dOnE or nO. Interrupting auto-tuning may result in an auto-tuning fault (see page tuned. During auto-tuning, the motor operates at nominal current.	to 2 seconds. Wait for the	e display to change to
	Auto-tuning status (status information only, cannot be modified)	See below.	tAb
E U 5	<ul> <li><i>L R b</i>: The default stator resistance value is used to control the motor.</li> <li><i>P E n d</i>: Auto-tuning has been requested but not yet performed.</li> <li><i>P r D L</i>: Auto-tuning is in progress.</li> <li><i>F R I L</i>: Auto-tuning has failed.</li> <li><i>D n E</i>: Auto-tuning is complete. The stator resistance measured by the auto-tur</li> <li><i>S L r d</i>: Auto-tuning is complete. The cold state stator resistance is used to control</li> </ul>		
	Selection of the voltage/frequency ratio	See below.	n
	<ul> <li>L: Constant torque (for motors connected in parallel or special motors)</li> <li>P: Variable torque (pump and fan applications)</li> <li>n: Sensorless flux vector control (for constant torque applications)</li> <li>n L d: Energy savings (for variable torque applications not requiring high dynamic at no load and the n ratio with load.)</li> </ul>	cs. This behaves in a sim	ilar way to the P ratio
	Voltage		
UFE	Uns L P Frequency		
	FrS Frequency		

Code	Description	Adjustment Range	Factory Setting
	Random switching frequency	See below.	YES
nrd	This function randomly modulates the switching frequency to reduce motor noise.	•	
	J E 5: Frequency with random modulation         D: Fixed frequency		
	Switching frequency <sup>1</sup>	2.0 to 16 kHz	4 kHz
5Fr	Adjust this setting to reduce audible motor noise. If the switching frequency is set excessive temperature rise, the drive controller automatically reduces the switchin temperature returns to normal. Refer to the <i>ATV31 Installation Manual</i> for derating	ig frequency. It increases	
L F r	Maximum output frequency	10 to 500 Hz	60 Hz
EFr	The factory setting is 60 Hz, or 72 Hz if bFr is set to 60 Hz.		
	Suppression of the speed loop filter	See below.	nO
	YE 5: The speed loop filter is suppressed. In position control applications, this served end of the served	tting reduces the respon	se time, but the
5 S L	SSL = nO	SSL = YES	
	0 0,1 0,2 0,3 0,4 0,5 t 0 0,1 0,		-0
	Saving the configuration <sup>2</sup> $r_{i}$ $D$ : Function inactive $5 \ge r_{i}$ : Saves the current configuration (but not the result of auto-tuning) to EEF soon as the save is performed. Use this function to keep another configuration in re-		
565	The drive controller is factory set with the current configuration and the backup co configuration.	nfiguration both initialized	d to the factory
	If the remote keypad display is connected to the drive controller, up to four additio $F \mid L \exists$ , and $F \mid L \exists$ . Use these selections to save up to four configurations in the SCS automatically switches to nO as soon as the save is performed.		
	Return to factory settings/Restore configuration <sup>2</sup>	See below.	nO
	$\square$ : Function inactive $r \in C$ /: Replaces the current configuration with the backup configuration previou visible only if the backup configuration has been saved. FCS automatically change $I \cap I$ : Replaces the current configuration with the factory settings. FCS automatic performed.	es to nO as soon as this	action is performe
F C S	If the remote keypad display is connected to the drive controller, up to four additio backup files loaded in the remote keypad display's EEPROM memory: F IL I, F selections replace the current configuration with the corresponding backup configuration automatically changes to nO as soon as this action is performed.	IL 2, FIL 3, and F	IL 4. These
	Note: If n R d briefly appears on the display once the parameter has switched to		
	and has not been performed (because the controller ratings are different, for exan once the parameter has switched to nO, a configuration transfer error has occurre using InI. In both cases, check the configuration to be transferred before trying ag	d and the factory setting	


<sup>1</sup> This parameter can also be accessed in the Settings menu, SEt-. See page 23.
 <sup>2</sup> SCS and FCS can be accessed in several configuration menus, but their settings affect all menus and parameters as a whole.

ENGLISH

#### I/O MENU I-O-

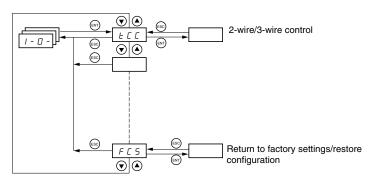

I/O parameters can only be modified when the drive controller is stopped and no run command is present. This menu can be accessed with the access locking switch on the remote keypad display in the  $\Box$  position.

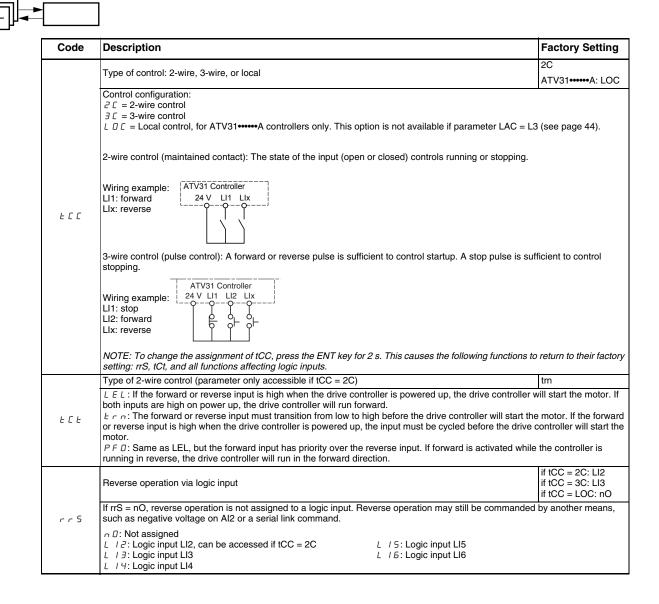


Code	Description	Factory Setting
	Value for low speed (LSP) on input Al3, can be set between 0 and 20 mA Value for high speed (HSP) on input Al3, can be set between 4 and 20 mA	4 mA 20 mA
	These two parameters are used to configure the input for 0–20 mA, 4–20 mA, 20–4 mA, etc.	
	Frequency	
	HSP Example: HSP	
ErL3	20–4 mA	
[ r H 3		\
	LSP	
	0	CrL3 AI 3
		(20 mA) (mA)
	Configuration of the analog output	0A
AD IF	미유: 0–20 mA configuration (use terminal AOC)	
	/ D U: 0–10 V configuration (use terminal AOV)	
	Analog/logic output AOC/AOV	nO
	n D: Not assigned	
	<i>D C r</i> : Motor current. 20 mA or 10 V corresponds to twice the nominal drive controller current. <i>r F r</i> : Motor frequency. 20 mA or 10 V corresponds to the maximum frequency tFr (page 30).	
	$\Box E_r$ : Motor torque. 20 mA or 10 V corresponds to twice the nominal motor torque.	
	$\Box P r$ : Power supplied by the drive. 20 mA or 10 V corresponds to twice the nominal drive controller p	
	Making the following assignments changes the analog output to a logic output (refer to the ATV31 Ir information). With these assignments, configure AOt to 0 A.	Istallation Manual for more
	F L E : Drive fault	
d 0	<i>Γ U</i> n: Drive running <i>F L R</i> : Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)	
	<i>F L R</i> : High speed (HSP) reached	
	<i>L L R</i> : Current threshold reached (Ctd parameter in the SEt- menu, page 27) 5 <i>r R</i> : Frequency reference reached	
	E 5 R: Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)	
	<i>L L C</i> : Brake sequence (status information only. bLC can be only be activated or deactivated from the F $PPL$ : Loss of 4–20 mA signal, even if LFL = nO (page 79)	Un- menu, see page 70).
	The logic output state is 1 (24 V) when the selected assignment is active, except for FLt which is in a	state 1 if the drive controller
	is not faulted.	
	Relay R1	FLt
	F L E : Drive fault	
	F L L: Drive fault	
	F L E: Drive fault F U n: Drive running F E R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)	
r I	<ul> <li>F L E: Drive fault</li> <li>F U n: Drive running</li> <li>F E R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)</li> <li>F L R: High speed (HSP) reached</li> <li>L E R: Current threshold reached (Ctd parameter in the SEt- menu, page 27)</li> </ul>	
r	<ul> <li>F L E: Drive fault</li> <li>F U n: Drive running</li> <li>F E R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)</li> <li>F L R: High speed (HSP) reached</li> <li>L E R: Current threshold reached (Ctd parameter in the SEt- menu, page 27)</li> <li>S r R: Frequency reference reached</li> </ul>	
r I	<ul> <li>F L E: Drive fault</li> <li>F U n: Drive running</li> <li>F E R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)</li> <li>F L R: High speed (HSP) reached</li> <li>L E R: Current threshold reached (Ctd parameter in the SEt- menu, page 27)</li> </ul>	
r l	<ul> <li>F L L : Drive fault</li> <li>F L Drive running</li> <li>F L Drive</li></ul>	) if the drive controller is not
r	$F \ L \ E$ : Drive fault $r \ U \ n$ : Drive running $F \ L \ R$ : Frequency threshold reached (Ftd parameter in the SEt- menu, page 27) $F \ L \ R$ : High speed (HSP) reached $L \ R$ : Current threshold reached (Ctd parameter in the SEt- menu, page 27) $5 \ r \ R$ : Frequency reference reached $L \ S \ R$ : Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27) $R \ L \ L$ coss of 4-20 mA signal, even if LFL = nO (page 79)The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.	b if the drive controller is not
r	<ul> <li>F L L : Drive fault</li> <li>F L Drive running</li> <li>F L Drive</li></ul>	
r	$F \ L \ E$ : Drive fault $r \ U \ n$ : Drive running $F \ E$ and $F$ requency threshold reached (Ftd parameter in the SEt- menu, page 27) $F \ L \ R$ : High speed (HSP) reached $L \ R$ : Current threshold reached (Ctd parameter in the SEt- menu, page 27) $S \ r \ R$ : Frequency reference reached $L \ S \ R$ : Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27) $R \ P \ L$ : Loss of 4–20 mA signal, even if LFL = nO (page 79)         The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.         Relay R2 $n \ D$ : Not assigned $F \ L \ L$ : Drive fault	
r	$F \ L \ E$ : Drive fault $r \ U \ n$ : Drive running $F \ L \ R$ : Frequency threshold reached (Ftd parameter in the SEt- menu, page 27) $F \ L \ R$ : High speed (HSP) reached $L \ R$ : Current threshold reached (Ctd parameter in the SEt- menu, page 27) $5 \ r \ R$ : Frequency reference reached $L \ S \ R$ : Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27) $R \ P \ L$ : Loss of 4–20 mA signal, even if LFL = nO (page 79)         The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.         Relay R2 $n \ D$ : Not assigned	
	F L L : Drive fault         r U n: Drive running         F L R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)         F L R: High speed (HSP) reached         L R: Current threshold reached (Ctd parameter in the SEt- menu, page 27)         S r R: Frequency reference reached         L 5 R: Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)         R P L : Loss of 4–20 mA signal, even if LFL = nO (page 79)         The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.         Relay R2         n D: Not assigned         F L L : Drive fault         r U n: Drive running         F E R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)         F L H: Drive fault         r U n: Drive running         F L R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)	
r   r 2	$F \ L \ E$ : Drive fault $r \ U \ n$ : Drive running $F \ E \ R$ : Frequency threshold reached (Ftd parameter in the SEt- menu, page 27) $F \ L \ R$ : High speed (HSP) reached $L \ R$ : Current threshold reached (Ctd parameter in the SEt- menu, page 27) $S \ R$ : Frequency reference reached $L \ S \ R$ : Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27) $R \ R \ R \ R \ R \ R \ R \ R \ R \ R \$	
	F L L : Drive faultr U n: Drive runningF L R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)F L R: High speed (HSP) reachedL R: A: Current threshold reached (Ctd parameter in the SEt- menu, page 27)S r R: Frequency reference reachedL 5 R: Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)R P L: Loss of 4–20 mA signal, even if LFL = nO (page 79)The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.Relay R2n D: Not assignedF L : Drive faultr U n: Drive runningF L R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)F L R: Frequency threshold reached (Etd parameter in the SEt- menu, page 27)F L R: Street (Etd R)F L R: Drive faultr U n: Drive runningF L R: Frequency threshold reached (Etd parameter in the SEt- menu, page 27)F L R: Street (Etd R)F L R: Street (Etd R)F R)F R)F R)F)F R: Frequency reference reachedL E R: Current threshold reached (Ctd parameter in the SEt- menu, page 27)S r R: Frequency reference reachedL E R: Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)	nO
	$F \ L \ L \ L \ Drive fault$ $r \ U \ n$ : Drive running $F \ L \ R \ L \ R$ : Frequency threshold reached (Ftd parameter in the SEt- menu, page 27) $F \ L \ R \ High speed (HSP)$ reached $L \ R \ L \ Current threshold reached (Ctd parameter in the SEt- menu, page 27)S \ r \ R \ Current threshold reached (Ctd parameter in the SEt- menu, page 27)S \ r \ R \ Frequency reference reachedL \ S \ R \ Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)R \ L \ L \ Sos of 4-20 \ mA \ signal, even if \ LFL = nO \ (page 79)The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.Relay R2n \ D \ Not assignedF \ L \ L \ Drive faultr \ U \ r \ Drive faultr \ U \ r \ Drive faultr \ U \ r \ Drive faultr \ L \ R \ High speed (HSP) reachedF \ L \ R \ High speed (HSP) reachedF \ L \ R \ High speed (HSP) reachedL \ R \ Current threshold reached (Ctd parameter in the SEt- menu, page 27)F \ L \ R \ Current threshold reached (Ctd parameter in the SEt- menu, page 27)S \ R \ Notor thermal threshold reached (ttd parameter in the SEt- menu, page 27)S \ R \ Notor thermal threshold reached (ttd parameter in the SEt- menu, page 27)b \ L \ R \ Sequence (status information only. bLC can be only be activated or deactivated from the F$	nO
	F L L : Drive faultr U n: Drive runningF L R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)F L R: High speed (HSP) reachedL R: A: Current threshold reached (Ctd parameter in the SEt- menu, page 27)S r R: Frequency reference reachedL 5 R: Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)R P L: Loss of 4–20 mA signal, even if LFL = nO (page 79)The relay is powered up when the selected assignment is active, except for FLt which is powered up faulted.Relay R2n D: Not assignedF L : Drive faultr U n: Drive runningF L R: Frequency threshold reached (Ftd parameter in the SEt- menu, page 27)F L R: Frequency threshold reached (Etd parameter in the SEt- menu, page 27)F L R: Street (Etd R)F L R: Drive faultr U n: Drive runningF L R: Frequency threshold reached (Etd parameter in the SEt- menu, page 27)F L R: Street (Etd R)F L R: Street (Etd R)F R)F R)F R)F)F R: Frequency reference reachedL E R: Current threshold reached (Ctd parameter in the SEt- menu, page 27)S r R: Frequency reference reachedL E R: Motor thermal threshold reached (ttd parameter in the SEt- menu, page 27)	nO Un- menu, see page 70).

	]	
Code	Description	Factory Setting
	Saving the configuration <sup>1</sup>	nO
	$r \square$ : Function inactive 5 $E r$ /: Saves the current configuration (but not the result of auto-tuning) to EEPROM. SCS auton soon as the save is performed. Use this function to keep another configuration in reserve, in addition	
565	The drive controller is factory set with the current configuration and the backup configuration both ir configuration.	nitialized to the factory
	If the remote keypad display is connected to the drive controller, up to four additional settings are at $F \ IL \ 3$ , and $F \ IL \ 4$ . Use these selections to save up to four configurations in the remote keypad of SCS automatically switches to nO as soon as the save is performed.	
	Return to factory settings/restore configuration <sup>1</sup>	nO
F [ 5	$\[mathcal{n}\]$ = Function inactive $\[mathcal{r}\]$ = E [ ]: Replaces the current configuration with the backup configuration previously saved by SCS visible only if the backup configuration has been saved. FCS automatically changes to nO as soon $\[mathcal{l}\]$ = Replaces the current configuration with the factory settings. FCS automatically switches to r performed.	as this action is performe
	If the remote keypad display is connected to the drive controller, up to four additional selections are backup files loaded in the remote keypad display's EEPROM memory: <i>F IL 1, F IL 2, F IL 3,</i> is selections replace the current configuration with the corresponding backup configuration in the remote automatically changes to nO as soon as this action is performed.	and F IL 4. These
	Note: If $r_n R d$ briefly appears on the display once the parameter has switched to nO, the configurat and has not been performed (because the controller ratings are different, for example). If $r_n E r_n$ brief once the parameter has switched to nO, a configuration transfer error has occurred and the factory using InI. In both cases, check the configuration to be transferred before trying again.	efly appears on the display
	NOTE: For rECI, InI, and FIL1 to FIL4 to take effect, you must press and hold down the ENT key fo	r 2 s.

<sup>1</sup> SCS and FCS can be accessed in several configuration menus, but their settings affect all menus and parameters as a whole.

#### **CONTROL MENU CTL-**

#### **Control Channels**

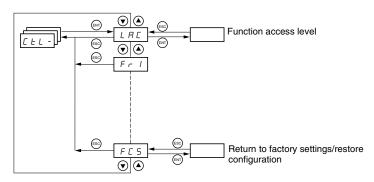

Control parameters can only be modified when the drive controller is stopped and no run command is present. This menu can be accessed with the access locking switch on the remote keypad display in the  $\Box^{\cap}$  position.

Control commands, such as forward and reverse, and speed reference commands can be sent to the drive controller from the sources specified in Table 6. ATV31 drive controllers allow you to assign control and reference sources to separate control channels (Fr1, Fr2, Cd1, or Cd2, see pages 44–45) and to switch between them. For example, you might assign LCC to reference channel 1 and CAn to reference channel 2 and switch between the two reference sources. It is also possible to use separate sources for control and reference commands. This is called mixed mode operation. These functions are explained in detail in the sections beginning on page 36.

Table 6:	Control and Reference Sources
----------	-------------------------------

Control Sources (CMD)		Reference Sources (rFr)	
tEr:	Terminal (LI)	AI1, AI2, AI3:	Terminal
LOC:	Drive keypad (RUN/STOP) on ATV31••••••A controllers only	AIP:	Potentiometer on ATV31 •••••• A only
LCC:	Remote keypad display (RJ45 socket)	LCC:	Drive keypad (on ATV31+++++ and ATV31+++++++ controllers) or remote keypad display
Mdb:	Modbus (RJ45 socket)	Mdb:	Modbus (RJ45 socket)
CAn:	CANopen (RJ45 socket)	CAn:	CANopen (RJ45 socket)

### **A** WARNING

#### UNINTENDED EQUIPMENT OPERATION

The stop buttons on ATV31••••••A drive controllers and on the remote keypad display can be programmed to not have priority. To retain stop key priority, set PSt to YES (see page 47).

Failure to follow this instruction can result in death, serious injury, or equipment damage.

Use parameter LAC (page 44) in the CtL- menu to select levels of function access and to set the control and reference sources.

- LAC = L1: Level 1—access to standard functions. Control and reference commands come from one source. See "Parameter LAC = L1 or L2" on page 36.
- LAC = L2: Level 2—access to all of the level 1 functions, plus the advanced functions listed below. Control and reference commands come from one source. See "Parameter LAC = L1 or L2" on page 36.
  - +/- Speed (motorized potentiometer)
  - Brake control
  - Switching for 2nd current limit
  - Motor switching
  - Management of limit switches
- LAC = L3: Level 3—access to all of the level 2 functions. Control and reference commands can come from separate sources. See "Parameter LAC = L3" on page 37.


#### Parameter LAC = L1 or L2

If parameter LAC is set to L1 or L2, the control and reference commands come from one source. The possible control and reference sources, and the settings that specify them, are:

- Control and reference via the input terminals or the drive keypad display in forced local (see FLO on page 80)
- Control and reference via the Modbus serial link
- Control and reference via the CANopen serial link
- Control and reference via the remote keypad display (see LCC on page 46)

NOTE: Modbus or CANopen is selected online by writing the appropriate control word (refer to the protocol-specific documentation).

The diagram below illustrates the order of priority when more than one control and reference source is specified. In the diagram, information flows from left to right. At step 1, LCC is not set to YES to enable the remote keypad display, so the drive keypad display is selected as the control and reference source. At steps 2–4, Modbus, CANopen, and forced local control are not set to YES, so the drive keypad display remains the selected source. The order of priority, therefore, is forced local, CANopen, Modbus, and the drive keypad display or the remote keypad display. For example, if forced local mode were enabled, it would have priority over any other setting. Similarly, if CANopen were enabled, it would have priority over any other setting except for FLO. Refer to the diagrams on pages 39 and 40 for more detail.

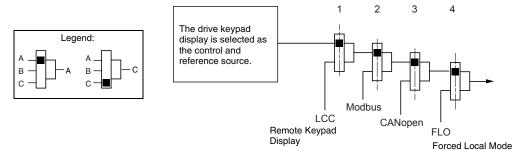

- On ATV31••••• drive controllers with the factory configuration, control and reference commands come from the control terminals.
- On ATV31•••••A drive controllers with the factory configuration, control commands come from the drive keypad display and reference commands come from a summation of the reference potentiometer and Al1 on the control terminals.
- With a remote keypad display, if LCC = YES (see page 46), control and reference commands come from the remote keypad display. The reference frequency is set by parameter LFr in the SEt- menu (see page 24).

Parameter LAC = L3	If parameter LAC is set to L3:
	• The control and reference channels can be combined (parameter CHCF = SIM, see page 45), <i>or</i>
	<ul> <li>The control and reference channels can be separate (parameter CHCF = SEP, see page 45)</li> </ul>
Parameter CHCF = SIM	The following figure illustrates combined control and reference sources:
	Selection of reference channel 1 (Fr1, page 44)
	The control commands are from the same source.
	Selection of reference channel


The control commands are from the same source.

Use parameter rFC (page 45) to select reference channel Fr1 or Fr2, or to configure a logic input or a control word bit for remote switching between the two channels. Refer to the diagram on page 42.

### Parameter CHCF = SEP


The following figures illustrate separate control and reference channels (parameter CHCF = SEP).

### Separate Reference Channels:

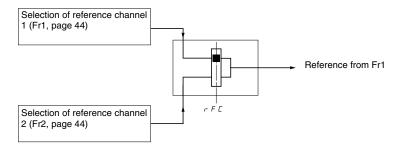

Use parameter rFC (page 45) to select reference channel Fr1 or Fr2, or to configure a logic input or a control word bit for remote switching between the two channels.


### Separate Control Channels:

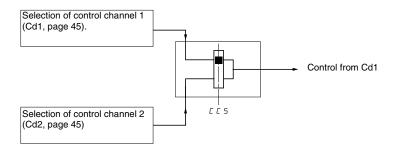

Use parameter CCS (page 46) to select control channel Cd1 or Cd2, or to configure a logic input or a control word bit for remote switching between the two channels.


Section 3: Menus Control Menu CtL-

### Reference Channel for LAC = L1 or L2

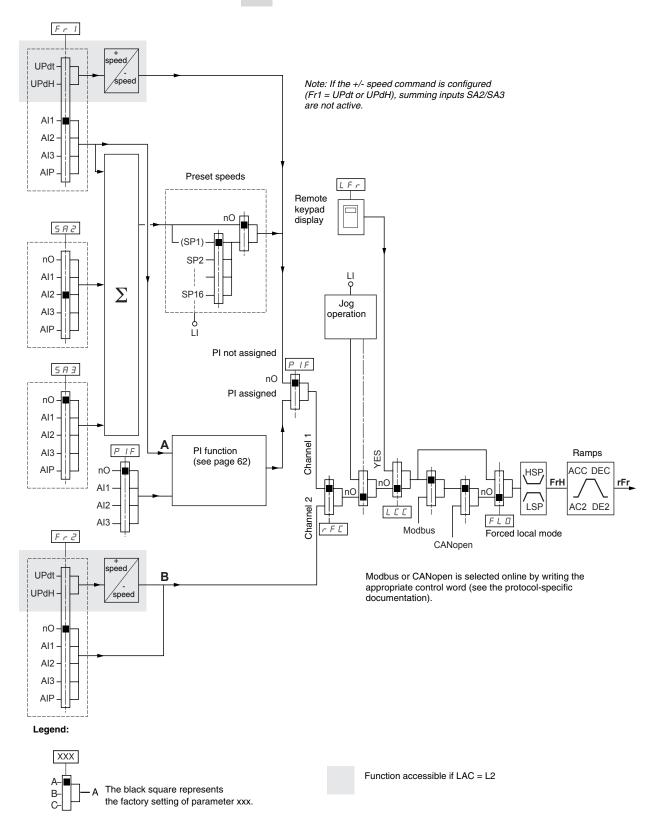



### Control Channel for LAC = L1 or L2

The settings of parameters FLO, LCC, and the selection of Modbus or CANopen protocol determine both the reference and control channels. The order of priority is FLO, CANopen, Modbus, and LCC.

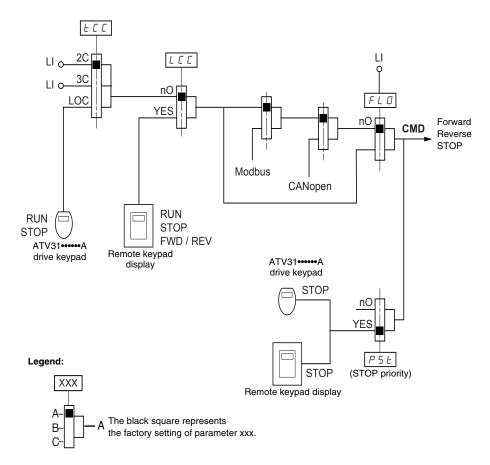

### Reference Channel for LAC = L3

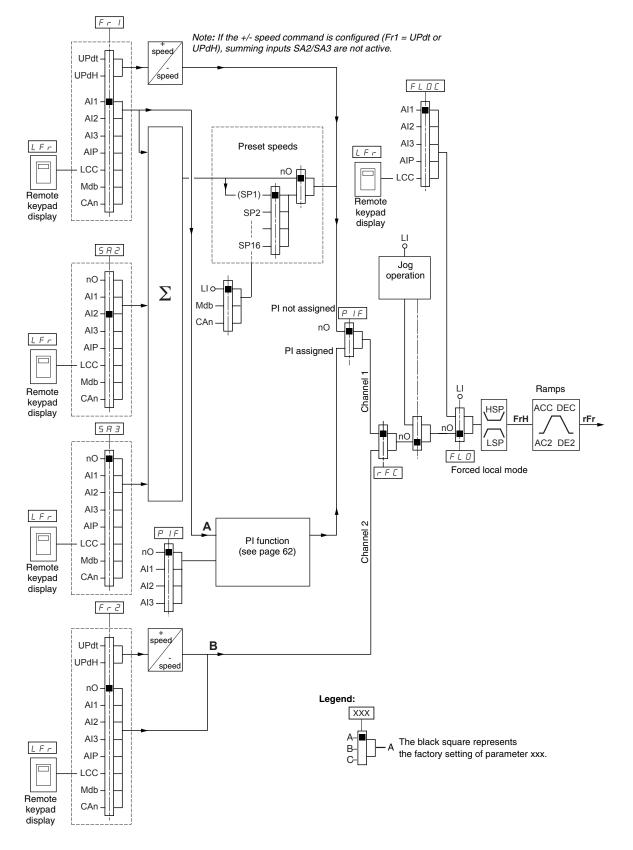

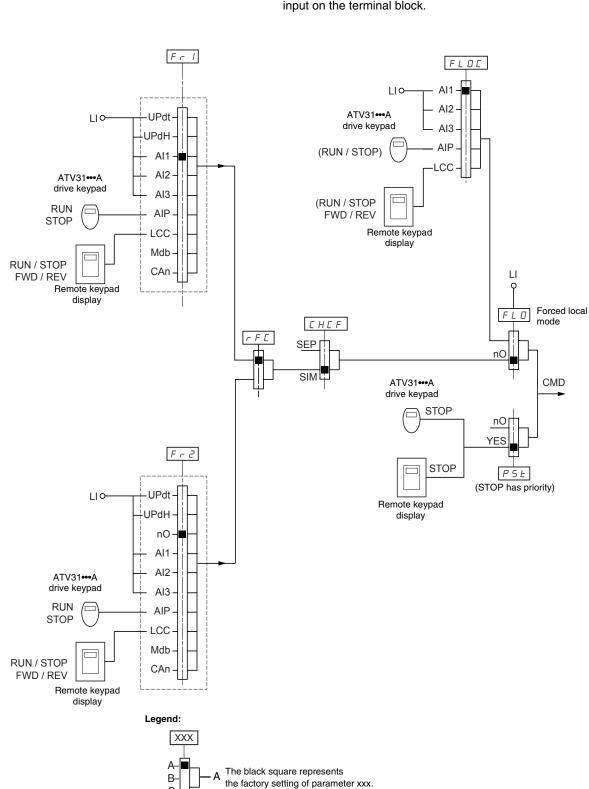


### Control Channel for LAC = L3: CHCF = SIM, Combined Reference and Control

If CHCF is set to SIM (see page 45), parameters Fr1, Fr2, FLO, and FLOC determine both the reference and control source. For example, if the reference is via the analog input on the terminal block, control is via the logic input on the terminal block.

### Control Channel for LAC = L3: CHCF = SEP, Mixed Mode (Separate Reference and Control)

Parameters FLO and FLOC are common to reference and control. For example, if the reference in forced local mode is via the analog input on the terminal block, control in forced local mode is via the logic input on the terminal block.

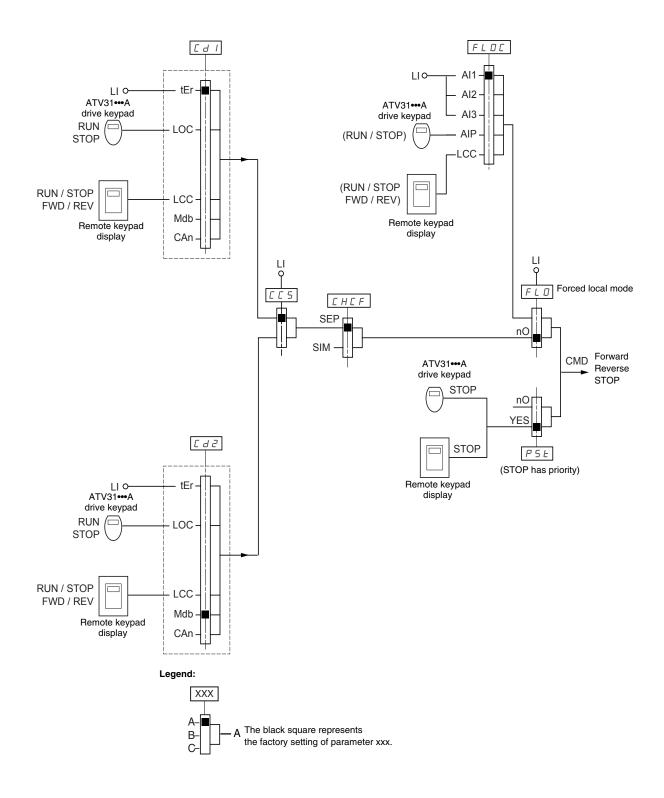

Refer to the function compatibility table on page 20. It is not possible to configure incompatible control functions. The first function configured will prevent any functions that are incompatible with it from being configured.

# 

Code	Description	Adjustment Range	Factory Setting
	Function access level	See below.	L1
	L /: Level 1—access to standard functions.	-	
	L 2: Level 2-access to the level 1 functions plus the following advance	ed functions in the FUn- menu:	
LAC	<ul> <li>+/- speed</li> <li>Brake control</li> <li>Switching for second current limit</li> <li>Motor switching</li> <li>Management of limit switches</li> </ul>		
	L 3: Level 3-access to all of the level 2 functions plus mixed mode op	peration.	
	Assigning L3 to LAC restores parameters Fr1 (below), Cd1 (page 45), C settings (on ATV31A drive controllers, tCC is reset to 2C).	CHCF (page 45), and tCC (page 3	31) to their factory
	If LAC is set to L3, you must restore the factory setting with parameter F If LAC is set to L2, you must restore the factory setting with parameter f If LAC is set to L2, you can change LAC to L3 without using parameter	FCS to set LAC back to L1.	L1 or to change it to L
	NOTE: In order to change the assignment of LAC, you must press and	hold down the ENT key for 2 seco	
	Configuration of reference 1	See below.	AI1 AIP for ATV31•••••A
	R       I       I: Analog input A11         R       I       I: Analog input A12         R       I       I: Analog input A13         R       I       P: Potentiometer (ATV31••••••A)		
Frl	If LAC = L2 or L3, the following additional assignments are possible: UP d L: + speed/- speed via L1 $UP d H$ : + speed/- speed via $\blacktriangle \nabla$ on the drive keypad display (ATV3) operation, display the frequency rFr (see page 83).	81 or ATV31••••••A) or on the remo	ote keypad display. Fo
Frl	<i>U P d L</i> : + speed/- speed via LI <sup>1</sup> <i>U P d H</i> : + speed/- speed via ▲ ▼ on the drive keypad display (ATV3 operation, display the frequency rFr (see page 83). <sup>1</sup> If LAC = L3, the following additional assignments are possible:		ote keypad display. Fc
Frl	<i>U P d L</i> : + speed/- speed via Ll <sup>1</sup> <i>U P d H</i> : + speed/- speed via ▲ ▼ on the drive keypad display (ATV3 operation, display the frequency rFr (see page 83). <sup>1</sup> If LAC = L3, the following additional assignments are possible: <i>L L L</i> : Reference via the remote keypad display, LFr parameter in the S <i>Π d b</i> : Reference via Modbus		ote keypad display. Fo
Frl	U P d L: + speed/- speed via Ll <sup>1</sup> U P d H: + speed/- speed via ▲ ▼ on the drive keypad display (ATV3 operation, display the frequency rFr (see page 83). <sup>1</sup> If LAC = L3, the following additional assignments are possible: L C C: Reference via the remote keypad display, LFr parameter in the S		ote keypad display. Fo
Fr I	<i>U P d L</i> : + speed/- speed via Ll <sup>1</sup> <i>U P d H</i> : + speed/- speed via ▲ ▼ on the drive keypad display (ATV3 operation, display the frequency rFr (see page 83). <sup>1</sup> If LAC = L3, the following additional assignments are possible: <i>L C C</i> : Reference via the remote keypad display, LFr parameter in the S <i>I d b</i> : Reference via Modbus <i>C R n</i> : Reference via CANopen	SEt- menu page 24.	nO

<sup>1</sup> Only one of the UPdt/UPdH assignments is permitted on each reference channel.

ENGLISH

Ľ

Co	ode	Description	Adjustment Range	Factory Setting
	1	Reference switching	See below.	Fr1
		Use parameter rFC to select channel Fr1 or Fr2, or to configure a logic input or a of Fr /: Reference = Reference 1 Fr 2: Reference = Reference 2 L / I: Logic input L11 L /2: Logic input L12 L /3: Logic input L13 L /4: Logic input L14 L /5: Logic input L15 L /5: Logic input L16	control bit for remote swi	iching of Fr1 or Fr2
r I	FC	If LAC = L3, the following additional assignments are possible: [      : Bit 11 of the Modbus control word [    2: Bit 12 of the Modbus control word [    2: Bit 13 of the Modbus control word [    4: Bit 14 of the Modbus control word [    4: Bit 14 of the Modbus control word [   2: Bit 15 of the Modbus control word [ 2:  2: Bit 15 of the Modbus control word [ 2:  2: Bit 12 of the CANopen control word [ 2:  3: Bit 13 of the CANopen control word [ 2:  3: Bit 13 of the CANopen control word [ 2:  3: Bit 13 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 2:  5: Bit 15 of the CANopen control word [ 3: active when the logic input or control word bit is in state 0. [ 5: Bit 15 of the CANopen control word bit is in state 1.		
		Mixed mode (separate control and reference channels)	See below.	SIM
		CHCF can be accessed if $LAC = L3$ .		
LH		5 / II: Combined control and reference channels 5 E P: Separate control and reference channels		
	(	Configuration of control channel 1	See below.	tEr LOC for ATV31•••••A
E	d	Cd1 can be accessed if CHCF = SEP and LAC = L3. <i>E E r</i> : Terminal block control <i>L D C</i> : Drive keypad display control (ATV31••••••A only) <i>L C C</i> : Remote keypad display control <i>I d b</i> : Control via Modbus <i>L R n</i> : Control via CANopen		
E	d 2	Configuration of control channel 2 Cd2 can be accessed if CHCF = SEP and LAC = L3. <i>E c</i> : Terminal block control <i>L C</i> : Drive keypad display control (ATV31••••••A only) <i>L C</i> : Remote keypad display control <i>I d b</i> : Control via Modbus <i>C R c</i> : Control via CANopen	See below.	Mdb:

ENGLISH




Code	Description	Adjustment Range	Factory Setting
	Control channel switching	See below.	Cd1
<i>C C S</i>	CCS can be accessed if CHCF = SEP and LAC = L3. Use parameter CCS to se input or a control bit for remote switching of Cd1 or Cd2. <i>L d l</i> : Control channel = Channel 1 <i>L d 2</i> : Control channel = Channel 2 <i>L l l</i> : Logic input Ll1 <i>L l 2</i> : Logic input Ll2 <i>L l 3</i> : Logic input Ll3 <i>L l 4</i> : Logic input Ll4 <i>L 15</i> : Logic input Ll5 <i>L 16</i> : Logic input Ll6 <i>L l 1</i> : Bit 11 of the Modbus control word <i>L l 1</i> : Bit 12 of the Modbus control word <i>L l 1</i> : Bit 13 of the Modbus control word <i>L l 1</i> : Bit 14 of the Modbus control word <i>L l 1</i> : Bit 15 of the Modbus control word <i>L l 1</i> : Bit 13 of the Modbus control word <i>L l 1</i> : Bit 14 of the CANopen control word <i>L 2 l</i> : Bit 12 of the CANopen control word <i>L 2 l</i> : Bit 13 of the CANopen control word <i>L 2 l</i> : Bit 14 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Bit 15 of the CANopen control word <i>L 2 l</i> : Sit 15 of the CANopen control word <i>L 2 l</i> : Sit 15 of the CANopen control word <i>L 2 l</i> : Sit 15 of the CANopen control word <i>L 2 l</i> : Sit 15 of the CANopen control word <i>L 2 l</i> : Sit 15 of the CANopen control word <i>L 2 l</i> : Sit 15 of the CANopen control word <i>L l</i> : Sit 15 of the CANopen control word <i>L l</i> : Sit 15 of the CANopen control word <i>L l</i> : Sit 15 of the CANopen control word <i>L</i> : Sit 15 of the CANopen control word <i>L</i> : Sit 15 of the CANopen control word bit is in state 1.		
	Copy channel 1 to channel 2. (The copy is possible only in this direction.)	See below.	nO
	COP can be accessed if LAC = L3.		•
гпр	n II: No copy 5 P: Copy reference [ d: Copy control R L L: Copy control and reference		
LUF	If channel 2 is controlled via the terminal block, channel 1 control is not copied.		
	If channel 2 reference is set via AI1, AI2, AI3, or AIP, channel 1 reference is not	copied.	
	The reference copied is FrH (before the ramp) unless the channel 2 reference is copied is rFr (after ramp).	•	ase, the reference
	NOTE: Copying the control and/or the reference may change the direction of rot	ation.	
	Control via the remote keypad display	See below.	nO
	LCC can only be accessed if the drive controller is equipped with a remote keypa	ad display, and if LAC = L	1 or L2.
	n D: Function inactive		
LEE	$\forall E$ 5: Enables control of the drive controller with the STOP/RESET, RUN, and display. The speed reference is given by parameter LFr in the SEt-menu. Only t commands remain active on the terminal block. If the remote keypad display is not connected, the drive controller will lock on an		



_			
Code	Description	Adjustment Range	Factory Setting
	Stop priority	See below.	YES
	PSt gives priority to the STOP key on the drive keypad display (ATV31A only of the control channel selected (terminal block or communication bus). If set to nC active control channel is the local or remote keypad display, the stop button retain NOTE: To change the assignment of PSt, you must press and hold down the ENT o D: Function inactive	), the active control char is priority, regardless of	nnel has priority. If the
PSŁ	A WARNING		
	DISABLED STOP COMMAND		
	Disabling the stop key on the drive keypad display or the remote keypad display the drive controller from stopping when the stop key is pressed. An external sto must be installed to stop the motor.		
	Failure to follow this instruction can result in death, serious injury, or equ damage.	ipment	
	Direction of operation	See below.	dFr
	Direction of operation allowed for the RUN key on the drive keypad display (ATV3	31•••••A only) or on the i	remote keypad displa
r O E	<i>d F r</i> : Forward <i>d r</i> 5: Reverse <i>b D L</i> : On ATV31•••••• drive controllers, both directions are authorized; on ATV31 possible.	•••••A controllers, only t	the forward direction
	Saving the configuration <sup>1</sup>	See below.	See below.
	n D: Function inactive 5 E r l: Saves the current configuration (but not the result of auto-tuning) to EEP soon as the save is performed. Use this function to keep another configuration in r		
565	The drive controller is factory set with the current configuration and the backup co configuration.	nfiguration both initialize	ed to the factory
	If the remote keypad display is connected to the drive controller, up to four additio	nal aattinga ara availabl	
	F IL 3, and $F$ IL 4. Use these selections to save up to four configurations in th SCS automatically switches to nO as soon as the save is performed.		
	F IL 3, and F IL 4. Use these selections to save up to four configurations in th SCS automatically switches to nO as soon as the save is performed. Return to factory settings/Restore configuration <sup>1</sup>		
	F IL 3, and F IL 4. Use these selections to save up to four configurations in th SCS automatically switches to nO as soon as the save is performed.	e remote keypad display See below. Isly saved by SCS (SCS es to nO as soon as this	y's EEPROM memor See below. S set to Strl). rECI is action is performed.
FE 5	<ul> <li>F IL 3, and F IL 4. Use these selections to save up to four configurations in th SCS automatically switches to nO as soon as the save is performed.</li> <li>Return to factory settings/Restore configuration<sup>1</sup></li> <li>n D: Function inactive</li> <li>r E L 1: Replaces the current configuration with the backup configuration previou visible only if the backup configuration has been saved. FCS automatically change In 1: Replaces the current configuration with the factory settings. FCS automatic</li> </ul>	See below. See below. Isly saved by SCS (SCS es to nO as soon as this cally switches to nO as so nal selections are availa I L 2, F I L 3, and F	y's EEPROM memory See below. S set to Strl). rECI is a action is performed. soon as this action is able corresponding to 1 L 4. These
F E 5	<ul> <li>F IL 3, and F IL 4. Use these selections to save up to four configurations in th SCS automatically switches to nO as soon as the save is performed.</li> <li>Return to factory settings/Restore configuration<sup>1</sup></li> <li>D I: Function inactive</li> <li>r E L I: Replaces the current configuration with the backup configuration previou visible only if the backup configuration has been saved. FCS automatically change I n I: Replaces the current configuration with the factory settings. FCS automatically change performed.</li> <li>If the remote keypad display is connected to the drive controller, up to four additio backup files loaded in the remote keypad display's EEPROM memory: F IL I, F selections replace the current configuration with the corresponding backup configuration with the coresponding backup configuration with the corresponding back</li></ul>	The remote keypad display See below. Isly saved by SCS (SCS es to nO as soon as this cally switches to nO as so anal selections are availa $F \mid L ?, F \mid L 3$ , and $F$ uration in the remote key nO, the configuration tran nple). If $n \mid L \mid r$ briefly appled and the factory setting	y's EEPROM memory See below. S set to Strl). rECl is action is performed. soon as this action is able corresponding to <i>I L 4</i> . These ypad display. FCS insfer is not possible pears on the display

<sup>1</sup> SCS and FCS can be accessed in several configuration menus, but their settings affect all menus and parameters as a whole.


### **APPLICATION FUNCTIONS MENU FUN-**

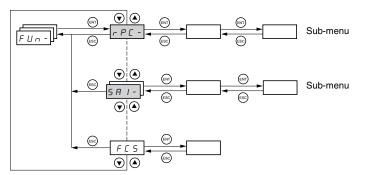

Application function parameters can only be modified when the drive controller is stopped and with no run command present. On the remote keypad display, this menu can be accessed with the access locking switch in the  $\Box$  position.

Some functions in this menu have numerous parameters. To simplify programming and to minimize scrolling, these functions are grouped into sub-menus. Like menus, sub-menus are identified by a dash. For example, LIA- is a sub-menu, but LIn is a parameter.

It is not possible to configure incompatible application functions. The first function configured will prevent any functions that are incompatible with it from being configured. Refer to the function compatibility table on page 20.

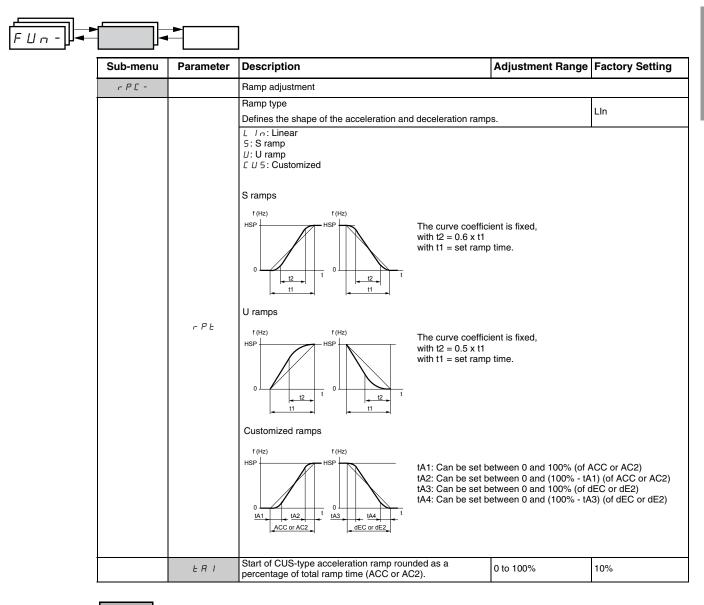



Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
	E A 2	End of CUS-type acceleration ramp rounded as a percentage of total ramp time (ACC or AC2)	0 to (100% - tA1)	10%
	ĿЯЭ	Start of CUS-type deceleration ramp rounded as a percentage of total ramp time (dEC or dE2)	0 to 100%	10%
	ĿЯЧ	End of CUS-type deceleration ramp as a percentage of tota ramp time (dEC or dE2)	<sup>I</sup> 0 to (100% - tA3)	10%
		Acceleration and deceleration ramp times <sup>1</sup>	0.1 to 999.9 s	3 s
	ACC	Acceleration ramp time for the motor to go from 0 Hz to Fr	6 (parameter in the drC- m	enu, see page 28).
	d E C	Deceleration ramp time for the motor to go from FrS to 0 H for the load.	z. Ensure that the value of	dEC is not set too
		Ramp switching	See below.	nO
		This function remains active regardless of the control chan	nel.	
		D: Not assigned     L / I: Logic input L11     L / 2: Logic input L12     L / 3: Logic input L13     L / 4: Logic input L14     L / 5: Logic input L15     L / 5: Logic input L16		
	r P S	If LAC = L3, the following assignments are possible:		
		[ d   i]: Bit 11 of the Modbus or CANopen control word		
ィアር - (continued)		$\begin{bmatrix} d & I & 2 \end{bmatrix}$ : Bit 12 of the Modbus or CANopen control word $\begin{bmatrix} d & I & 3 \end{bmatrix}$ : Bit 13 of the Modbus or CANopen control word $\begin{bmatrix} d & I & 4 \end{bmatrix}$ : Bit 14 of the Modbus or CANopen control word $\begin{bmatrix} d & I & 4 \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word $\begin{bmatrix} d & I & 5 \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word		
		ACC and dEC are enabled when the logic input or control v	vord bit is in state 0.	
		AC2 and dE2 are enabled when the logic input or control w	ord bit is in state 1.	
-		Ramp switching threshold	0 to 500 Hz	0
		The second ramp is switched if the value of Frt is not equal Setting Frt to 0 deactivates it.	to 0 and the output freque	ency is greater than
		Ramp switching threshold can be combined with switching	via a logic input or a contr	ol word bit as follow
	FrE	LI or bit Frequency Ramp		
		0 <frt acc,="" dec<="" td=""><td></td><td></td></frt>		
		0 >Frt AC2, dE2 1 <frt ac2,="" de2<="" td=""><td></td><td></td></frt>		
		1 >Frt AC2, dE2		
				5 s
	AC 2	2 <sup>nd</sup> acceleration ramp time <sup>1</sup> : Enabled via logic input (rPS) or frequency threshold (Frt).	0.1 to 999.9 s	55
	A C 2 d E 2	Enabled via logic input (rPS) or frequency threshold (Frt). 2 <sup>nd</sup> deceleration ramp time <sup>1</sup> :	0.1 to 999.9 s 0.1 to 999.9 s	5 S
		Enabled via logic input (rPS) or frequency threshold (Frt).		
		Enabled via logic input (rPS) or frequency threshold (Frt). 2 <sup>nd</sup> deceleration ramp time <sup>1</sup> : Enabled via logic input (rPS) or frequency threshold (Frt).	0.1 to 999.9 s See below.	5 s YES
		Enabled via logic input (rPS) or frequency threshold (Frt). 2 <sup>nd</sup> deceleration ramp time <sup>1</sup> : Enabled via logic input (rPS) or frequency threshold (Frt). Deceleration ramp adaptation Activating this function automatically adapts the deceleration	0.1 to 999.9 s See below.	5 s YES

<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
5 E C -		Stop modes		
		Normal stop type	See below.	RMP
5 <i>E E</i>	Type of stop executed when the run command disappears of $r \sqcap P$ : Follow ramp $F \mathrel{\leq} L$ : Fast stop $r \mathrel{\leq} L$ : Freewheel stop $d \vdash l$ : DC injection stop	or a stop command appea	ars.	
		Fast stop via logic input	See below.	nO
	D: Not assigned     L / I: Logic input Ll1     L / 2: Logic input Ll2     L / 3: Logic input Ll3     L / 4: Logic input Ll4     L / 5: Logic input Ll5     L / 5: Logic input Ll6			
	F5E	If LAC = L3, the following assignments are possible:		
		$\begin{bmatrix} d & l & l \\ \vdots & Bit 11 \text{ of the Modbus or CANopen control word} \\ \begin{bmatrix} d & l & 2 \\ \vdots & Bit 12 \text{ of the Modbus or CANopen control word} \\ \begin{bmatrix} d & l & 3 \\ \vdots & Bit 13 \text{ of the Modbus or CANopen control word} \\ \begin{bmatrix} d & l & 4 \\ \vdots & Bit 14 \text{ of the Modbus or CANopen control word} \\ \end{bmatrix}$		
		E d 15: Bit 15 of the Modbus or CANopen control word		
		Fast stop is activated when the state of the logic input chan. Fast stop is a stop on the deceleration reduced by the coeffinput falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31).	icient specified by param e, the motor will only resta	eter dCF. If the logi art if 2-wire control
	dſF	Fast stop is activated when the state of the logic input chan. Fast stop is a stop on the deceleration reduced by the coeffinput falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31). Coefficient for dividing the deceleration ramp time for fast stopping.	cient specified by param e, the motor will only resta Otherwise, a new run cor 0, 1 to 10	eter dCF. If the log art if 2-wire control mmand must be se 4
	d E F	Fast stop is activated when the state of the logic input chan Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31). Coefficient for dividing the deceleration ramp time for fast	cient specified by param e, the motor will only resta Otherwise, a new run cor 0, 1 to 10	eter dCF. If the log art if 2-wire control mmand must be se 4
	d E F	Fast stop is activated when the state of the logic input chan Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31). Coefficient for dividing the deceleration ramp time for fast stopping. This parameter only appears if FST is assigned. Ensure tha	cient specified by param e, the motor will only resta Otherwise, a new run cor 0, 1 to 10	eter dCF. If the logi art if 2-wire control i mmand must be ser 4
	d E F	Fast stop is activated when the state of the logic input chan Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31). Coefficient for dividing the deceleration ramp time for fast stopping. This parameter only appears if FST is assigned. Ensure tha The value 0 corresponds to the minimum ramp.	cient specified by param e, the motor will only resta Otherwise, a new run cor 0, 1 to 10 t the reduced ramp is not	eter dCF. If the logi art if 2-wire control nmand must be se 4 too low for the loa
		Fast stop is activated when the state of the logic input changes         Fast stop is a stop on the deceleration reduced by the coeffiniput falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31).         Coefficient for dividing the deceleration ramp time for fast stopping.         This parameter only appears if FST is assigned. Ensure tha The value 0 corresponds to the minimum ramp.         DC injection via logic input $n \square$ : Not assigned $L \ I \ L$ Logic input L11 $L \ I^2$ : Logic input L13 $L \ I'^2$ : Logic input L14 $L \ I'^2$ : Logic input L15	cient specified by param e, the motor will only resta Otherwise, a new run cor 0, 1 to 10 t the reduced ramp is not	eter dCF. If the log art if 2-wire control nmand must be se 4 too low for the loa
		Fast stop is activated when the state of the logic input chan Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (ICC = 2C and tCt = LEL or PFO, see page 31).Coefficient for dividing the deceleration ramp time for fast stopping.This parameter only appears if FST is assigned. Ensure tha The value 0 corresponds to the minimum ramp.DC injection via logic input $n \square$ : Not assigned $L \ I \ I:$ Logic input Ll1 $L \ 2:$ Logic input Ll2 $L \ 3:$ Logic input Ll3 $L \ 4:$ Logic input Ll4 $L \ 5:$ Logic input Ll5 $L \ 5:$ Logic input Ll6	cient specified by param e, the motor will only resta Otherwise, a new run cor 0, 1 to 10 t the reduced ramp is not	eter dCF. If the log art if 2-wire control nmand must be se 4 too low for the loa
		Fast stop is activated when the state of the logic input chan. Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31). Coefficient for dividing the deceleration ramp time for fast stopping. This parameter only appears if FST is assigned. Ensure that The value 0 corresponds to the minimum ramp. DC injection via logic input $r_{i}$ $D$ : Not assigned L + I: Logic input L11 L + 2: Logic input L12 L + 3: Logic input L13 L + 4: Logic input L14 L + 5: Logic input L14 L + 5: Logic input L16 If LAC = L3, the following assignments are possible: C = I + 1: Bit 11 of the Modbus or CANopen control word C = I + 2: Bit 12 of the Modbus or CANopen control word C = I + 3: Bit 13 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word C = I + 3: Bit 14 of the Modbus or CANopen control word	cient specified by param a, the motor will only resta Otherwise, a new run cor 0, 1 to 10 t the reduced ramp is not See below.	eter dCF. If the logi art if 2-wire control mmand must be ser 4 t too low for the load
	d [ ]	Fast stop is activated when the state of the logic input chan Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (tCC = 2C and tCt = LEL or PFO, see page 31).Coefficient for dividing the deceleration ramp time for fast stopping.This parameter only appears if FST is assigned. Ensure tha The value 0 corresponds to the minimum ramp.DC injection via logic inputD corresponds to the minimum ramp.D corresponds to the corresponds to the minimum ramp.D corresponds to the corresponds to the corresponds to the correspondent to the correspondent to the correspondent to the coresponden	cient specified by param a, the motor will only resta Otherwise, a new run cor 0, 1 to 10 t the reduced ramp is not See below.	eter dCF. If the log art if 2-wire control nmand must be se 4 too low for the loa
		Fast stop is activated when the state of the logic input chan, Fast stop is a stop on the deceleration reduced by the coeffi input falls back to state 1 and the run command is still active configured (ICC = 2C and tCt = LEL or PFO, see page 31). Coefficient for dividing the deceleration ramp time for fast stopping. This parameter only appears if FST is assigned. Ensure tha The value 0 corresponds to the minimum ramp. DC injection via logic input $n \square$ : Not assigned $L \mid I$ : Logic input L11 $L \mid 2$ : Logic input L12 $L \mid 3$ : Logic input L13 $L \mid 4$ : Logic input L14 $L \mid 5$ : Logic input L15 $L \mid 5$ : Logic input L16 If LAC = L3, the following assignments are possible: $C \mid I \mid$ Bit 11 of the Modbus or CANopen control word $C \mid I \mid$ Bit 12 of the Modbus or CANopen control word $C \mid I \mid$ Bit 13 of the Modbus or CANopen control word $C \mid I \mid$ Bit 15 of the Modbus or CANopen control word $C \mid I \mid$ Bit 15 of the Modbus or CANopen control word $C \mid I \mid$ Bit 15 of the Modbus or CANopen control word $C \mid I \mid$ Bit 15 of the Modbus or CANopen control word $C \mid I \mid$ Bit 15 of the Modbus or CANopen control word $C \mid I \mid$ Bit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word $C \mid I \mid$ Sit 15 of the Modbus or CANopen control word Sit 15 Sit 15 of the Modbus of CANopen control word Sit 15 Sit 15 of the Modbus of CANopen control word Sit 15 Sit 15 of the Modbus contex Sit 15 Sit 15 of the Mo	cient specified by param s, the motor will only rest Otherwise, a new run cor 0, 1 to 10 t the reduced ramp is not See below. rol word bit is 1. 0 to In <sup>3</sup>	eter dCF. If the log ant if 2-wire control nmand must be se 4 too low for the loa nO

<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.

 $^{2\,}$  These settings are not related to the automatic DC injection function.

<sup>3</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.

Т

Sub-menu	Parameter	Description	Adjustment Range	Factory Settin
		Freewheel stop via logic input		nO
5 E C - (continued)	n 5 E	D: Not assigned     L I I: Logic input Ll1     L I2: Logic input Ll2     L I3: Logic input Ll3     L I4: Logic input Ll3     L I4: Logic input Ll4     L I5: Logic input Ll5     L I6: Logic input Ll6     Freewheel stop is activated when the logic input is a     command is still active, the motor will only restart if 2     command must be sent.		

## **A** WARNING


### NO HOLDING TORQUE

- DC injection braking does not provide holding torque at zero speed.
- DC injection braking does not function during a loss of power or during a drive controller fault.
- When required, use a separate brake for holding torque.

### **EXCESSIVE DC INJECTION BRAKING**

- Application of DC injection braking for long periods of time can cause motor overheating and damage.
- Protect the motor from extended periods of DC injection braking.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

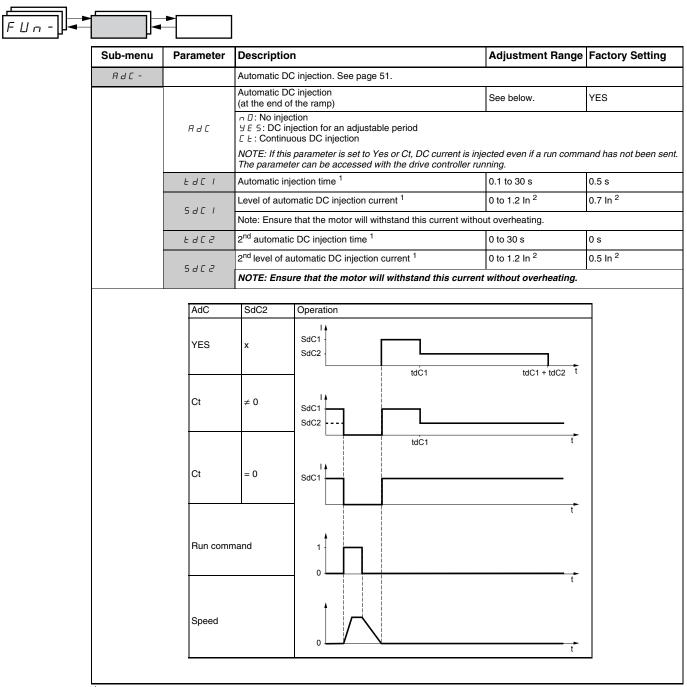


<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.

<sup>2</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
5 A I -		Summing inputs Can be used to sum one or two inputs with reference Fr1.		
		Summing input 2	See below.	AI2
	S A 2	D: Not assigned     I : Analog input Al1     I : Analog input Al2     I : Analog input Al2     I : Analog input Al3     I : P: Potentiometer (ATV31+++++A drive controllers only)  If I AC = I 3 the following assignments are possible:		
		If LAC = L3, the following assignments are possible:		
		<i>□ □ □</i> : Reference via Modbus <i>□ □ □</i> : Reference via CANopen <i>□ □ □</i> : Reference via the remote keypad display, LFr param	ieter in the SEt- menu pa	ge 24.
		Summing input 3	See below.	nO
	5 A 3	n D: Not assigned R I I: Analog input Al1 R I 2: Analog input Al2 R I 3: Analog input Al3 R I P: Potentiometer (ATV31A drive controllers only)		
		If LAC = L3, the following assignments are possible:		
		Паь: Reference via Modbus [Па: Reference via CANopen [] [] : Reference via the remote keypad display (LFr param		

### **Summing Inputs**

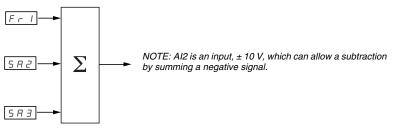

Refer to the diagrams on pages 39 and 41.

### **Preset Speeds**

Parameter PSS, preset speeds, allows 2, 4, 8, or 16 preset speeds, requiring 1, 2, 3, or 4 logic inputs respectively.

The preset speeds must be assigned in the following order: PS2, then PS4, then PS8, then PS16.

Refer to the following table for combining inputs to activate the various preset speeds:

16 speeds LI (PS16)	8 speeds LI (PS8)	4 speeds LI (PS4)	2 speeds LI (PS2)	Speed reference
0	0	0	0	Reference <sup>1</sup>
0	0	0	1	SP2
0	0	1	0	SP3
0	0	1	1	SP4
0	1	0	0	SP5
0	1	0	1	SP6
0	1	1	0	SP7
0	1	1	1	SP8
1	0	0	0	SP9
1	0	0	1	SP10
1	0	1	0	SP11
1	0	1	1	SP12
1	1	0	0	SP13
1	1	0	1	SP14
1	1	1	0	SP15
1	1	1	1	SP16


<sup>1</sup> See the diagrams on page 39 and page 41: Reference 1 = (SP1).

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
P55-		Preset speeds		
		2 preset speeds	See below.	
		Selecting the assigned logic input activates the function.	1	
	P 5 2	n D: Not assigned         L I I: Logic input L11         L I 2: Logic input L12         L I 3: Logic input L13         L I 4: Logic input L14         L I 5: Logic input L15         L I 5: Logic input L16         If LAC = L3, the following assignments are possible:         L d I I: Bit 11 of the Modbus or CANopen control word		If tCC = 2C: LI3 If tCC = 3C: nO If tCC = LOC: LI3
		$\begin{bmatrix} d & l \\ 2 \end{bmatrix}$ : Bit 12 of the Modbus or CANopen control word $\begin{bmatrix} d & l \\ 3 \end{bmatrix}$ : Bit 13 of the Modbus or CANopen control word $\begin{bmatrix} d & l \\ 4 \end{bmatrix}$ : Bit 14 of the Modbus or CANopen control word $\begin{bmatrix} d & l \\ 5 \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word		
		4 preset speeds	See below.	
		Selecting the assigned logic input activates the function.	1	
		NOTE: Ensure that PS2 has been assigned before assigning	g PS4.	
	P 5 4	n D: Not assigned L I I: Logic input L11 L I 2: Logic input L12 L I 3: Logic input L13 L I 4: Logic input L14 L J 5: Logic input L15 L I 5: Logic input L16		If tCC = 2C: LI4 If tCC = 3C: nO If tCC = LOC: LI4
		If LAC = L3, the following assignments are possible:		
		$\begin{bmatrix} d & l & l \\ d & l & d \end{bmatrix}$ : Bit 11 of the Modbus or CANopen control word $\begin{bmatrix} d & l & d \\ d & l & d \end{bmatrix}$ : Bit 12 of the Modbus or CANopen control word $\begin{bmatrix} d & l & d \\ d & l & d \end{bmatrix}$ : Bit 13 of the Modbus or CANopen control word $\begin{bmatrix} d & l & d \\ d & l & d \end{bmatrix}$ : Bit 14 of the Modbus or CANopen control word $\begin{bmatrix} d & l & d \\ d & l & d \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word		
		8 preset speeds	See below.	
		Selecting the assigned logic input activates the function.		
		NOTE: Ensure that PS4 has been assigned before assigning	g PS8.	
	P 5 8	n D: Not assigned L I I: Logic input L11 L I 2: Logic input L12 L I 3: Logic input L13 L I 4: Logic input L13 L I 5: Logic input L15 L I 5: Logic input L16		nO
		If LAC = L3, the following assignments are possible:		
		$\begin{bmatrix} d & I \\ d & I \end{bmatrix}$ : Bit 11 of the Modbus or CANopen control word $\begin{bmatrix} d & I \\ d & I \end{bmatrix}$ : Bit 12 of the Modbus or CANopen control word $\begin{bmatrix} d & I \\ d & I \end{bmatrix}$ : Bit 13 of the Modbus or CANopen control word $\begin{bmatrix} d & I \\ d & I \end{bmatrix}$ : Bit 14 of the Modbus or CANopen control word $\begin{bmatrix} d & I \\ d & I \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word		

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
		16 preset speeds	See below.	nO
		Selecting the assigned logic input activates the function.	*	•
		NOTE: Ensure that PS8 has been assigned before assignin n D: Not assigned L / J: Logic input LI1	g PS16.	
		L I 2: Logic input Ll2 L I 3: Logic input Ll3		
	P5 16	L 14: Logic input Ll4 L 15: Logic input Ll5		
		L I E: Logic input LI6		
		If LAC = L3, the following assignments are possible:		
		$\begin{bmatrix} d & I & I \\ \vdots & Bit 11 & of the Modbus or CANopen control word  \begin{bmatrix} d & I & 2 \\ \vdots & Bit 12 & of the Modbus or CANopen control word  \begin{bmatrix} d & I & 3 \\ \vdots & Bit 13 & of the Modbus or CANopen control word  \begin{bmatrix} d & I & 4 \\ \vdots & Bit 14 & of the Modbus or CANopen control word  \begin{bmatrix} d & I & 5 \\ \vdots & Bit 15 & of the Modbus or CANopen control word  \end{bmatrix}$		
	5 P 2	2 <sup>nd</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	10 Hz
	5 P 3	3 <sup>rd</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	15 Hz
	5 P 4	4 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	20 Hz
	5 P 5	5 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	25 Hz
	5 P 6	6 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	30 Hz
	5 P 7	7 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	35 Hz
	5 P B	8 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	40 Hz
	5 P 9	9 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	45 Hz
	5 P I D	10 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	50 Hz
	SPII	11 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	55 Hz
	5 P I 2	12 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	60 Hz
	5 P I 3	13 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	70 Hz
	5 P I 4	14 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	80 Hz
	5 P 1 5	15 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	90 Hz
	5 <i>P 16</i>	16 <sup>th</sup> preset speed <sup>1</sup>	0.0 to 500.0 Hz	100 Hz

<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.



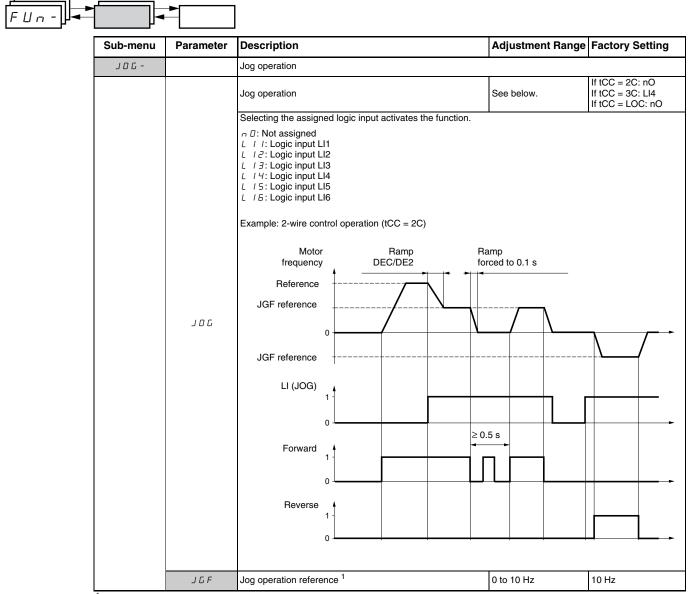

<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.

ENGLISH

### +/- Speed


Single Action Buttons

Section 3: Menus Application Functions Menu FUn-

This function can only be accessed if LAC = L2 or L3 (see page 44). The following sections describe two types of +/- speed operation: use of single action buttons and use of double action buttons. A pendant station is an example application of both.

Single action buttons require two logic inputs and two directions of rotation. The input assigned to the + speed command increases the speed, the input assigned to the - speed command decreases the speed.

	- speed	speed maintained	+ speed
Forward direction	a and d	а	a and b
Reverse direction	c and d	с	c and b

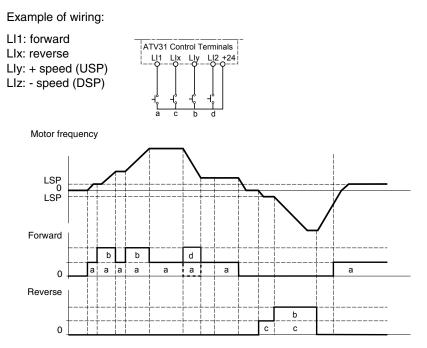

The maximum speed is set by HSP (see page 24).

NOTE: If the reference is switched via rFC (see page 45) from any reference channel to another with +/- speed, the value of reference rFr (after ramp) is copied at the same time. This prevents the speed from being incorrectly reset to zero when switching takes place.


### **Double Action Buttons**


Only one logic input, assigned to + speed, is required for double action buttons. Double action buttons typically have two detents. Press the button to the first detent to maintain speed; press it to the second detent to increase speed. Each action closes a contact. Refer to the following table.

			Press to 2 <sup>nd</sup> detent (+ speed)
Forward direction	-	а	a and b
Reverse direction	-	с	c and d

### Example of wiring:

LI1: forward LIx: reverse LIy: + speed (USP)

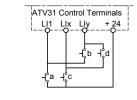

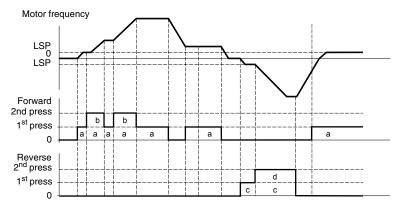

Use of double action buttons is incompatible with 3-wire control.

The maximum speed is set by HSP (see page 24).

NOTE: If the reference is switched via rFC (see page 45) from any reference channel to another with +/- speed, the value of reference rFr (after ramp) is copied at the same time. This prevents the speed from being incorrectly reset to zero when switching takes place.

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
UPd-		+/- Speed (motorized potentiometer)	•	•
0,0		This function can only be accessed if LAC = L2 or L3 and	JPdH or UPdt is active (se	e page 44).
		+ Speed	See below.	nO
		Can only be accessed if UPdt is active.	Occ below.	10
		Selecting the assigned logic input activates the function.		
		n D: Not assigned		
	U 5 Р	L I I: Logic input LI1 L I 2: Logic input LI2		
		L / J: Logic input LI3		
		L 14: Logic input Ll4 L 15: Logic input Ll5		
		L / 5: Logic input LIS		
		- Speed		
		Can only be accessed if UPdt is active.	See below.	nO
		Selecting the assigned logic input activates the function.		
		n D: Not assigned		
	d S P	L / /: Logic input Ll1 L / 2: Logic input Ll2		
		L / J: Logic input LI3		
		L 14: Logic input LI4		
		L 15: Logic input LI5 L 15: Logic input LI6		
		Save reference	See below.	nO
		Associated with the +/- speed function, this parameter can		-
		When the run commands are removed, the reference is sa		
	<i></i>	When the mains supply or the run commands are removed		FEPROM
	5 E r	On the next start-up, the speed reference is the last refere		
		$\sigma \square$ : No save		
		г Я П: Save to RAM		
		E E P: Save to EEPROM		



Pages 39 and 41

#### PI regulator provides regulation of a process using feedback from a sensor that sends a signal to the drive controller. This function is often used for pump and fan applications. The PI regulator function is activated by assigning an analog input to PI regulator feedback (PIF). Restart error threshold P (wake-up) PIF rFC Error Ramps ΤĘ ΕI 5 Internal inversion nO PII ACC DEC reference (auto) HSP nO rFr x1 rSL YESI FrH rPI (rP1) (man) Al1 rP2 rPG Al2 LSP AC2 DE2 AI3 Gains Reference A rP3 Pages 39 and rP4 41 Preset PI references PI 1 F Legend: feedback nO FЬS A-The black square represents AI1 the factory setting of B x FbS parameter xxx. C AI2 AI3 xxx Reference B

**PI Regulator** 

The PI regulator feedback parameter (PIF, see page 66) must be assigned to one of the analog inputs (AI1, AI2, or AI3).

The **PI reference** can be assigned to the following parameters, in order of priority:

- Preset references via logic inputs (rP2, rP3, and rP4, see page 66)
- Internal reference (rPI, see page 67) •
- Reference Fr1 (see page 44)

Refer to the following table for combining logic inputs for preset PI references.

LI (Pr4)	LI (Pr2)	Pr2 = nO	Reference
			rPI or Fr1
0	0		rPI or Fr1
0	1		rP2
1	0		rP3
1	1		rP4

The following parameters can also be accessed in the Settings menu (SEt-, beginning on page 23):

- Internal reference (rPI) •
- Preset references (rP2, rP3, rP4)
- Regulator proportional gain (rPG) •
- Regulator integral gain (rIG)
- PI feedback multiplication coefficient (FbS):

The FbS parameter can be used to scale the reference to the variation range of the PI feedback (sensor range).

For example, Pressure control: PI reference (process) = 0 to 5 bar = 0 to 100% Range of pressure sensor = 0 to 10 bar FbS = Maximum sensor scale / Maximum process FbS = 10 / 5 = 2

• rSL parameter:

Can be used to set the PI error threshold above which the PI regulator is reactivated (wake-up) after a stop due to the maximum time of operation at low speed being exceeded (tLS).

• Reversal of the direction of correction (PIC):

If PIC = nO, the speed of the motor increases when the error is positive. An example application is pressure control with a compressor.

If PIC = YES, the speed of the motor decreases when the error is positive. An example application is temperature control with a cooling fan.


### Manual–Automatic Operation with PI Regulator

Setting up the PI Regulator

- This function combines PI regulator and switching of reference rFC (page 45). The speed reference is given by Fr2 or by the PI function, depending on the state of the logic input.
- 1. Configure the drive controller for PI regulator. See the diagram on page 62.
- 2. Perform a test with the factory configuration. In most cases, the factory settings are sufficient. To optimize the drive controller, gradually adjust rPG or rIG independently and observe the effect on PI feedback in relation to the reference.
- 3. If the factory settings are unstable or the reference is incorrect, perform a test with a speed reference in manual mode (without PI regulator) and with the drive controller on load for the speed range of the system:
  - In steady state, the speed must remain stable at the reference, and the PI feedback signal must be stable.
  - In transient state, the speed must follow the ramp then stabilize quickly, and the PI feedback must follow the speed.

If this is not the case, check the drive controller settings and the sensor signal and cabling.

- 4. Enable PI regulator.
- 5. Set brA to nO (no auto-adaptation of the ramp).
- 6. Set the speed ramps (ACC, dEC) to the minimum permitted by the application without triggering an ObF fault.
- 7. Set the integral gain (rIG) to the minimum value.
- 8. Observe the PI feedback and the reference.
- 9. Perform several RUN/STOP cycles, or vary the load or reference rapidly.
- Set the proportional gain (rPG) to obtain the ideal compromise between response time and stability in transient phases (slight overshoot and 1 to 2 oscillations before stabilizing).
- 11. If the reference varies from the preset value in steady state, gradually increase the integral gain (rIG) and reduce the proportional gain (rPG) in the event of instability (pump applications) to find a compromise between response time and static precision. Refer to the figure on page 62.
- 12. Perform in-production tests throughout the reference range.

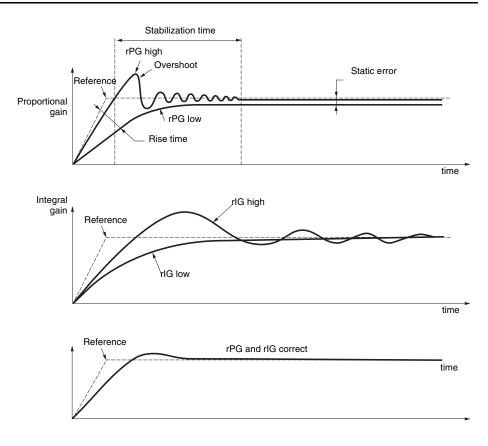

The oscillation frequency depends on the application.

Para	ameter	Rise Time	Overshoot	Stabilization Time	Static Error
rPG	1	1	1	=	
rlG	1	X	11	1	**

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
P I -		PI regulator		
		PI regulator feedback	See below.	nO
	PIF	n D: Not assigned H I I: Analog input Al1 H I 2: Analog input Al2 H I 2: Analog input Al2		
		R / J: Analog input Al3	0.01 to 100	1-
	r P G	PI regulator proportional gain <sup>1</sup>	0.01 to 100	1
		Contributes to dynamic performance during rapid changes in PI regulator integral gain <sup>1</sup>	0.01 to 100	4
	r IG			1
		Contributes to static precision during slow changes in the PI		1-
	FЬS	PI feedback multiplication coefficient <sup>1</sup>	0.1 to 100	1
		For process adaptation		
	PIC	Reversal of the PI regulator direction of correction <sup>1</sup>	See below.	nO
	FIL	ה D: normal אב 5: reverse		
		2 preset PI references	See below.	nO
		Selecting the assigned logic input activates the function.	See below.	
	Pr2	n D: Not assigned L I I: Logic input LI1 L I Z: Logic input LI2 L I J: Logic input LI3 L I 4: Logic input LI4 L I 5: Logic input LI5 L I 5: Logic input LI6		
		If LAC = L3, the following assignments are possible: $\begin{bmatrix} d & i \\ 2 & 3 \end{bmatrix}$ : Bit 11 of the Modbus or CANopen control word $\begin{bmatrix} d & i \\ 2 & 3 \end{bmatrix}$ : Bit 12 of the Modbus or CANopen control word $\begin{bmatrix} d & i \\ 2 & 3 \end{bmatrix}$ : Bit 13 of the Modbus or CANopen control word $\begin{bmatrix} d & i \\ 2 & 3 \end{bmatrix}$ : Bit 14 of the Modbus or CANopen control word $\begin{bmatrix} d & i \\ 2 & 3 \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word $\begin{bmatrix} d & i \\ 2 & 3 \end{bmatrix}$ : Bit 15 of the Modbus or CANopen control word		
		4 preset PI references	See below.	nO
		Selecting the assigned logic input activates the function.		
	Pr4	NOTE: Ensure that Pr2 has been assigned before assigning n D: Not assigned L / I: Logic input L11 L / J: Logic input L12 L / J: Logic input L13 L / 4: Logic input L14 L / 5: Logic input L15 L / 5: Logic input L16 L / 5: Logic input L16	) Pr4.	
		If LAC = L3, the following assignments are possible: $\begin{bmatrix} d & l & l \\ Bit & 11 & 0 \\ c & d & l & 2 \\ Bit & 12 & 0 \\ c & d & l & 2 \\ Bit & 13 & 0 \\ c & d & l & 3 \\ Bit & 13 & 0 \\ c & d & l & 4 \\ c & d & l & 4 \\ c & d & l & 4 \\ c & d & l & 5 \\ c & d & l & b \\ c & d & l & l \\ c & d & l & $		1000/
		2 <sup>nd</sup> preset PI reference <sup>1</sup>	0 to 100%	30%
	r P 2			
	- P 2	Only appears if Pr2 has been enabled by selecting an input.		000/
	r P 2	3 <sup>rd</sup> preset PI reference <sup>1</sup>	0 to 100%	60%
			0 to 100%	60%

<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.




Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
		Restart after error threshold (wake-up threshold)	0 to 100%	0
	r 5L	If the PI and low speed operating time (tLS, see page 26) fur regulator may attempt to set a speed lower than LSP. This re of a cycle of starting, operating at low speed, then stopping.		
P I -		Parameter rSL (restart error threshold) can be used to set a stop at prolonged LSP.	minimum PI error thresho	old for restarting after a
(continued)		The function is inactive if $tLS = 0$ .		
		Internal PI regulator reference		nO
	PII	n D: The PI regulator reference is Fr1, except for UPdH and regulator reference). <i>Y E</i> 5: The PI regulator reference is parameter rPI.	I UPdt (+/- speed cannot	be used as the PI
	rPI	Internal PI regulator reference <sup>1</sup>	0 to 100%	0

<sup>1</sup> Can also be accessed in the Settings menu, SEt. See page 23.



Brake control enables the drive controller to manage an electromagnetic brake. This function can only be accessed if LAC = L2 or L3 (page 40). It can be assigned to relay R2 or to logic output AOC.

To prevent jolts, synchronize the brake release with torque build-up during startup, and synchronize the brake engage with zero speed on stopping. Refer to the following figure for braking sequence.

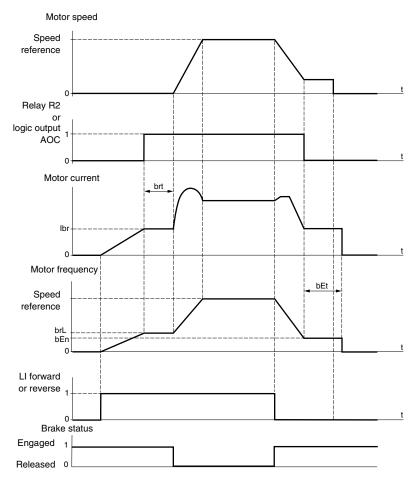

The following parameters can be accessed in the FUn- menu (see page 70):

- Brake release frequency (brL)
- Brake release current (lbr)
- Brake release time (brt)
- Brake engage frequency (bEn)
- Brake engage time (bEt)
- Brake release pulse (bIP)

The following are the recommended settings for brake control:

- 1. Brake release frequency (brL):
  - Horizontal movement: Set to 0.
  - Vertical movement: Set to the nominal slip of the motor in Hz.
- 2. Brake release current (lbr):
  - Horizontal movement: Set to 0.
  - Vertical movement: Set to the nominal current of the motor at first, then adjust the release current to prevent jolting on start-up. Ensure that the maximum load is held when the brake is released.
- 3. Brake release time (brt):
  - Adjust according to the type of brake. Brake release time is the time required for the mechanical brake to release.
- 4. Brake engage frequency (bEn):
  - Set to twice the nominal slip of the motor, then adjust according to the result.

*NOTE:* The maximum value of bEn is LSP. Ensure that LSP is set to a sufficient value.

- 5. Brake engage time (bEt):
  - Adjust according to the type of brake. This is the time required for the mechanical brake to engage.
- 6. Brake release pulse (bIP):
  - Horizontal movement: Set to nO.
  - Vertical movement: Set to YES and ensure that the motor torque direction for forward control corresponds to the upward direction of the load. If necessary, reverse two motor phases. This parameter generates motor torque in an upward direction, regardless of the direction of operation, to maintain the load while the brake is releasing.

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
ЬΙС -		Brake control		•
		This function can only be accessed if LAC = L2 or L3 (p	oage 40).	
		Brake control configuration	See below.	nO
	ЬΙС	n D: Not assigned r 2: Relay R2 d D: Logic output AOC		
		If bLC is assigned, parameter FLr (page 78) and brA (page 78) is forced to YES.	age 50) are forced to nO, and	parameter OPL (pa
	brL	Brake release frequency	0.0 to 10.0 Hz	Varies with drive controller rating
	lbr	Motor current threshold for brake release	0 to 1.36 In <sup>1</sup>	Varies with drive controller rating
	brt	Brake release time	0 to 5 s	0.5 s
	LSP	Low speed	0 to HSP (page 24)	0 Hz
	LJF	Motor frequency at minimum reference. This parameter	parameter can also be modified in the SEt- menu (page 24)	
		Brake engage frequency threshold	nO, 0 to LSP Hz	nO
	ь Е п	n D: Not set		
		If bLC is assigned and bEn = nO, the drive controller with	II trip on bLF fault at start-up.	
	ЬЕЬ	Brake engage time	0 to 5 s	0.5s
		Brake release pulse	See below.	nO
	ЬIP	$\bigcirc$ D: While the brake is releasing, the motor torque directation. $\forall E 5$ : While the brake is releasing, the motor torque direction of rotation.	·	
		Ensure that the motor torque direction for Forward contr necessary, reverse two motor phases.	ol corresponds to the upward	direction of the load

<sup>1</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.

Thes

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting	
LEZ-		Switching for second current limit			
		This function can only be accessed if LAC = L2 or L3 (page 40).			
		Switching for second current limit	See below.	nO	
		Selecting the assigned logic input activates the function.			
	L [ 2	D: Not assigned     L / I: Logic input LI1     L /2: Logic input LI2     L /3: Logic input LI3     L /4: Logic input LI4     L /5: Logic input LI5     L /5: Logic input LI6			
		If LAC = L3, the following assignments are possible:			
		$\begin{bmatrix} d & l & l \\ \vdots & \text{Bit 11 of the Modbus or CANopen control word} \\ \begin{bmatrix} d & l & 2 \\ \vdots & \text{Bit 12 of the Modbus or CANopen control word} \\ \begin{bmatrix} d & l & 3 \\ \vdots & \text{Bit 13 of the Modbus or CANopen control word} \\ \begin{bmatrix} d & l & 4 \\ \vdots & 1 \end{bmatrix}$ Bit 14 of the Modbus or CANopen control word $\begin{bmatrix} d & l & 4 \\ \vdots & 1 \end{bmatrix}$ Bit 15 of the Modbus or CANopen control word $\begin{bmatrix} d & l & 5 \\ \vdots & 1 \end{bmatrix}$ Bit 15 of the Modbus or CANopen control word			
		CL1 is enabled when the logic input or control word bit is in s	tate 0 (SEt- menu page	26).	
		CL2 is enabled when the logic input or control word bit is in s	tate 1.		
	EL 2	2 <sup>nd</sup> current limit <sup>1</sup>	0.25 to 1.5 ln <sup>2</sup>	1.5 ln <sup>2</sup>	


<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.

<sup>2</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
CHP-		Motor switching		•
LIII		This function can only be accessed if LAC = L2 or L3 (page	40).	
		Switching, motor 2	See below.	nO
		n D: Not assigned L / I: Logic input Ll1 L / 2: Logic input Ll2 L / 3: Logic input Ll3 L / 4: Logic input Ll3 L / 5: Logic input Ll4 L / 5: Logic input Ll6 L / 5: Logic input Ll6		
		If LAC = L3, the following assignments are possible:		
	СНР	[ d   1: Bit 11 of the Modbus or CANopen control word         [ d   2: Bit 12 of the Modbus or CANopen control word         [ d   3: Bit 13 of the Modbus or CANopen control word         [ d   4: Bit 14 of the Modbus or CANopen control word         [ d   4: Bit 14 of the Modbus or CANopen control word         [ d   5: Bit 15 of the Modbus or CANopen control word		
		LI or bit = 0: Motor 1 LI or bit = 1: Motor 2		
		<ul> <li>The motor switching function disables motor thermal proprotection must be provided. See the caution message</li> <li>If you use this function, do not use the tUn auto-tuning f configure tUn to rUn or POn.</li> <li>Changes to parameters do not take effect until the drive</li> </ul>	on page 14. unction (page 29) on mot	
		Nominal motor voltage (motor 2) given on the nameplate	Varies with drive controller rating	Varies with drive controller rating
	U n 5 2	ATV31•••M2: 100 to 240 V ATV31•••M3X: 100 to 240 V ATV31•••N4: 100 to 500 V ATV31•••S6X:100 to 600 V		
		Nominal motor frequency (motor 2) given on the nameplate	10 to 500 Hz	50 Hz
		UnS (in V)		
	Fr52	The ratio FrS (in Hz) must not exceed the following a ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••N4: 14 max. ATV31•••S6X: 17 max.	values	
	Fr 52	ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••N4: 14 max.		
	Fr52 nEr2	ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••N4: 14 max. ATV31•••S6X: 17 max.		Varies with drive controller rating
		ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••N3X: 7 max ATV31•••N4: 14 max. ATV31•••S6X: 17 max. Changing the setting of bFr to 60 Hz also changes the settin	ng of FrS2 to 60 Hz.	
		ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••M3X: 7 max ATV31•••N6X: 14 max. ATV31•••S6X: 17 max. Changing the setting of bFr to 60 Hz also changes the settin Nominal motor current (motor 2) given on the nameplate	ng of FrS2 to 60 Hz. 0.25 to 1.5 In <sup>1</sup>	controller rating Varies with drive
		ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••M3X: 7 max ATV31•••N4: 14 max. ATV31•••S6X: 17 max. Changing the setting of bFr to 60 Hz also changes the settin Nominal motor current (motor 2) given on the nameplate Nominal motor speed (motor 2) given on the nameplate	ng of FrS2 to 60 Hz. 0.25 to 1.5 In <sup>1</sup> 0 to 32760 RPM	controller rating Varies with drive controller rating
		ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••M3X: 7 max ATV31•••N4: 14 max. ATV31•••S6X: 17 max. Changing the setting of bFr to 60 Hz also changes the settin Nominal motor current (motor 2) given on the nameplate Nominal motor speed (motor 2) given on the nameplate 0 to 9999 rpm, then 10.00 to 32.76 krpm If the nameplate indicates synchronous speed and slip (in H	ng of FrS2 to 60 Hz. 0.25 to 1.5 In <sup>1</sup> 0 to 32760 RPM z or as a percentage) inst	controller rating Varies with drive controller rating
	n E r 2	ATV31•••M2: 7 max. ATV31•••M3X: 7 max ATV31•••N4: 14 max. ATV31•••S6X: 17 max. Changing the setting of bFr to 60 Hz also changes the settin Nominal motor current (motor 2) given on the nameplate Nominal motor speed (motor 2) given on the nameplate 0 to 9999 rpm, then 10.00 to 32.76 krpm If the nameplate indicates synchronous speed and slip (in H calculate nominal speed as follows: Nominal speed = Synchronous speed x 100 - slip as a	ng of FrS2 to 60 Hz. 0.25 to 1.5 In <sup>1</sup> 0 to 32760 RPM z or as a percentage) inst	controller rating Varies with drive controller rating tead of nominal spe

<sup>1</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.

ENGLISH

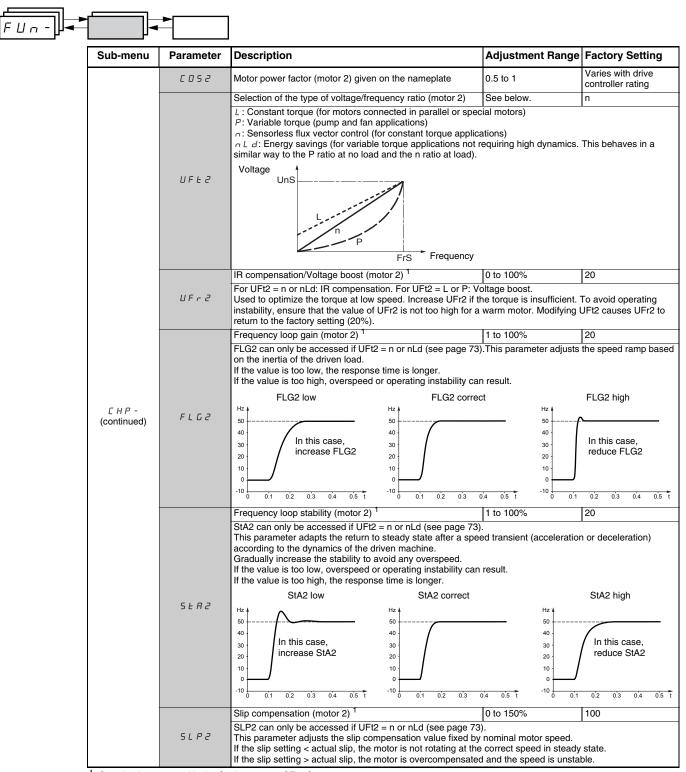

<sup>1</sup> Can also be accessed in the Settings menu, SEt-. See page 23.

These parameters only appear if the function has been enabled.

#### **Management of Limit Switches**

This function can be used to manage the operation of one or two limit switches, in 1 or 2 directions of operation. It can only be accessed if LAC = L2 or L3 (see page 40). To use the function:

- Assign one or two logic inputs to forward limit and reverse limit.
- Select the type of stop (on ramp, fast, or freewheel stop). After a stop, the motor is permitted to restart in the opposite direction only.
- The stop is performed when the input is in state 0. The direction of operation is authorized in state 1.

Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
L 5 E -		Management of limit switches LSt- can only be accessed if LAC = L2 or L3 (page 40).		
	LĦF	Limit, forward direction n II: Not assigned L / I: Logic input L11 L / I2: Logic input L12 L / J: Logic input L13 L / I4: Logic input L14 L / 5: Logic input L15 L / 5: Logic input L16	See below.	nO
L用r		Limit, reverse direction n I: Not assigned L / I: Logic input L11 L / J: Logic input L12 L / J: Logic input L13 L / Y: Logic input L14 L / 5: Logic input L15 L / 5: Logic input L16	See below.	nO
	L A 5	Type of limit switch stop r P: On ramp F 5 E: Fast stop r 5 E: Freewheel stop	See below.	nSt

These parameters only appear if the function has been enabled.


FUn

ENGLISH

FUn-			]		
	Sub-menu	Parameter	Description	Adjustment Range	Factory Setting
	5 £ 5		Saving the configuration <sup>1</sup>	See below.	nO
			$n \square$ : Function inactive 5 $E - I$ : Saves the current configuration (but not the result of a switches to nO as soon as the save is performed. Use this funct addition to the current configuration.		
			The drive controller is factory set with the current configuration the factory configuration.	and the backup configur	ation both initialized to
			If the remote keypad display is connected to the drive controller, up to four additional settings are available: $F \mid L \mid$ , $F \mid L \mid 2$ , $F \mid L \mid 3$ , and $F \mid L \mid 4$ . Use these selections to save up to four configurations in the remote keypad display's EEPROM memory. SCS automatically switches to nO as soon as the save is performed.		
			Return to factory setting/restore configuration <sup>1</sup>	See below.	nO
			r D: Function inactive $r \in L$ /: Replaces the current configuration with the backup co to Strl). rECI is visible only if the backup configuration has been soon as this action is performed. l = r /: Replaces the current configuration with the factory setting as this action is performed.	n saved. FCS automática	Illy changes to nO as
	F C 5	If the remote keypad display is connected to the drive controller corresponding to backup files loaded in the remote keypad disp <i>F IL 3</i> , and <i>F IL 4</i> . These selections replace the current cor configuration in the remote keypad display. FCS automatically operformed.	play's EEPROM memory nfiguration with the corre	: F IL I, F IL ₽, sponding backup	
			Note: If $\cap \square d$ briefly appears on the display once the paramete is not possible and has not been performed (because the contro briefly appears on the display once the parameter has switched occurred and the factory settings must be restored using InI. In transferred before trying again.	oller ratings are different, to nO, a configuration t	for example). If $n + r$ ransfer error has
			NOTE: For rECI, InI, and FIL1 to FIL4 to take effect, you must p	press and hold down the	ENT key for 2 s.

<sup>1</sup> SCS and FCS can be accessed via several configuration menus but they concern all menus and parameters as a whole.

#### FAULT MENU FLT-

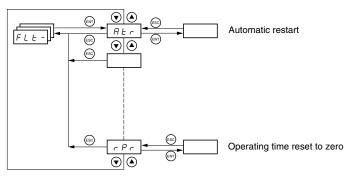

Fault Menu parameters can only be modified when the drive is stopped and no run command is present.

On the optional remote keypad display, this menu can be accessed with the switch in the  $\Bar{o}^{\tilde{n}}$  position.

FLE-			
	Code	Description	Factory Setting
		Automatic restart	nO
		n D: Function inactive $\forall E 5$ : Automatic restart after locking on a fault, if the cause of the fault is not longer present and the oth permit the restart. The restart is performed by a series of automatic attempts separated by increasingly 1 s, 5 s, 10 s, then once per minute for the period defined by tAr. If the restart has not taken place once the maximum duration of restart time, tAr, has elapsed, the proce drive controller remains locked until power is cycled.	longer waiting periods:
		The following faults permit automatic restart:	
	fi E r	External fault (EPF) Loss of 4-20 mA reference (LFF) CANopen fault (COF) System overvoltage (OSF) Loss of a line phase (PHF) Loss of a motor phase (OPF) DC bus overvoltage (ObF) Motor overload (OLF) Serial link (SLF) Drive overheating (OHF)	
		This function requires 2-wire control (tCC = 2C) with tCt = LEL or PFO (page 31).	
		Ensure that an automatic restart will not endanger personnel or equipment in any way. Refer to the War	ning message below.
		Maximum duration of restart process	5 minutes
	E A r	5: 5 minutes 1 D: 10 minutes 3 D: 30 minutes 1 h: 1 hour 2 h: 2 hours 3 h: 3 hours E E: Unlimited	
		This parameter appears if Atr = YES. It can be used to limit the number of consecutive restarts on a rec	urrent fault.
	r S F	Reset fault           n D: Not assigned           L         I I: Logic input LI1           L         I 2: Logic input LI2           L         I 3: Logic input LI3           L         I 4: Logic input LI3           L         I 5: Logic input LI4           L         I 5: Logic input LI5           L         I 5: Logic input LI6	no

These parameters only appear if the function has been enabled.

### A WARNING

#### UNINTENDED EQUIPMENT OPERATION

- Automatic Restart can only be used for machines or installations that present no danger in the event of automatic restarting, either for personnel or equipment.
- If Automatic Restart is active, R1 will only indicate a fault after the restart sequence has timed out.
- Equipment operation must conform to national and local safety regulations.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

Code	Description	Factory Setting
	Catch on the fly (automatically catch a spinning load on ramp)	nO
	Enables a smooth restart of a spinning load if the run command is maintained after the following events	:
	<ul> <li>Loss of line supply or disconnection</li> <li>Fault reset or automatic restart. See the warning on page 77.</li> <li>Freewheel stop</li> </ul>	
FLr	The speed given by the drive controller resumes from the estimated speed of the motor at the time of the ramp to the reference speed.	restart, then follows th
	This function requires 2-wire control (tCC = 2C) with tCt = LEL or PFO.	
	n D: Function inactive ∀ E 5: Function active	
	When the function is enabled, it activates at each run command, resulting in a slight delay (1 second m	aximum) before start.
	FLr is forced to nO if brake control (bLC) is assigned (page 70).	
	External fault	nO
	n D: Not assigned	l
	L / /: Logic input LI1	
	L 12: Logic input Ll2 L 13: Logic input Ll3	
	L 1 4: Logic input Lla	
	L / 5: Logic input LI5	
EEF	L 15: Logic input LI6	
	If LAC = L3, the following assignments are possible:	
	[ J / ]: Bit 11 of the Modbus or CANopen control word	
	Ed 12: Bit 12 of the Modbus or CANopen control word	
	[ d / ]: Bit 13 of the Modbus or CANopen control word         c d / 4: Bit 14 of the Modbus or CANopen control word	
	<i>L</i> a / 5: Bit 15 of the Modbus of CANopen control word	
	Stop mode in the event of an external fault (EtF)	YES
	n D: Fault ignored	
EPL	<i>BE</i> 5: Fault with a freewheel stop	
	$r \ \Pi P$ : Fault with a stop on the ramp $F \ 5 \ E$ : Fault with a fast stop	
	Configuration of motor phase loss fault	YES
	n D: Function inactive	110
	<i>G</i> E Function inactive	
OPL	D R C : No fault is triggered, but output voltage is monitored to avoid an overcurrent when the link with the	e motor is re-establishe
	and a catch on the fly occurs, even if FLr = nO. To be used with a downstream contactor.	
	OPL is forced to YES if brake control (bLC) is assigned (page 70).	
	Configuration of line phase loss fault	YES
IPL	This parameter is only accessible on three-phase drives.	
., .	n D: Fault ignored	
	YE 5: Fault with fast stop	
	Stop mode in the event of a drive overheating fault (OHF)	YES
DHL	∩ D: Fault ignored	
UNL	$\forall E$ 5: Fault with a freewheel stop $r \Pi P$ : Fault with a stop on the ramp	
	F = 5 E: Fault with a fast stop	
	Stop mode in the event of a motor overload fault (OLF)	YES
	n D: Fault ignored	-
DLL	9 E 5: Fault with a freewheel stop	
	$r \Pi P$ : Fault with a stop on the ramp	
	F 5 E : Fault with a fast stop	

ENGLISH


<u>FLE</u> -∭ <del>▲</del>				
C	Code	Description	Adjustment Range	Factory Setting
<u>-</u>	5 L L	Stop mode in the event of a Modbus serial link fault (SLF)     See below.     YES       n I: Fault ignored     9 E 5: Fault with a freewheel stop     n I P: Fault with a stop on the ramp       F 5 ± : Fault with a fast stop     F 5 ± : Fault with a fast stop		YES
Ľ	5 O L	F 5 E : Fault with a fast stop         Stop mode in the event of a CANopen serial link fault (COF)       See below.       YES         r D: Fault ignored       YE 5 : Fault with a freewheel stop       YE 5 : Fault with a stop on the ramp         F 5 E : Fault with a fast stop       F 5 E : Fault with a fast stop		YES
E	= n L	Configuration of auto-tuning fault (tnF) n D: Fault ignored (the drive controller reverts to the factory settings) 9 E 5: Fault with drive controller locked	See below.	YES
Step in duit with drive controller locked         Step mode in the event of a loss of 4 - 20 mA signal fault (LFF)       See below. $n \square$ : Fault ignored (only value possible if CrL3 ≤3 mA, see page 32) $\forall E$ 5: Fault with a freewheel stop $L F E$ $F F$ : The drive controller switches to the fallback speed (see LFF parameter below) $L F E$ $r \square F$ : Fault with a stop on the ramp $F 5 E$ : Fault with a fast stop         Before setting LFL to YES, rMP, or FSt, check the connection of input Al3. Otherwise, the drive control			elow) fault occurred until the fa	
L	FF	to an LFF fault. Fallback speed Fallback speed setting for stopping in the event of a fault	0 to 500 Hz	10 Hz
	drn	Derated operation in the event of an undervoltage n D: Function inactive y E 5: The line voltage monitoring threshold is: ATV31•••M2: 130 V ATV31•••M3X: 130 V ATV31•••N4: 270 V ATV31•••S6X: 340 V	See below.	nO
		In this case, a line choke must be used and the performance of the drive controll In order to assign this function, you must press and hold down the ENT key for 2		nO
<u>c</u>	5 E P	Controlled stop on loss of mains power $n \square$ : Lock the drive controller and stop the motor on a freewheel $\Pi \Pi 5$ : Use the inertia to maintain the drive controller power supply as long as por $n \Pi P$ : Stop on the active ramp (dEC or dE2) F 5 E: Fast stop. The stopping time depends on the inertia and the braking abilit	ossible	
	In H	Fault inhibit         CAUTION         Inhibiting faults may damage the drive controller beyond repair by preventing soccurrence of a fault.         Failure to follow this precaution can result in equipment damage.         n D: Not assigned         L       1 <t< th=""><th>t is in state 1.</th><th>nO</th></t<>	t is in state 1.	nO
ſ	-Pr	Operating time reset to zero $r \square$ : No $r \vdash H$ : Operating time reset to zero The rPr parameter is automatically set to nO as soon as the reset to zero is perfected.	See below.	nO

#### COMMUNICATION MENU COM-

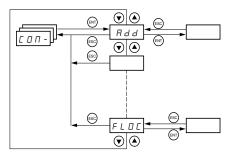

The Communication menu parameters can only be modified when the drive controller is stopped and no run command is present. Modifications to parameters Add, tbr, tFO, AdCO, and bdCO take effect only after a restart.

On the optional remote keypad display, this menu can be accessed with the switch in the  $\vec{h}$  position.

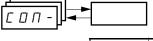


Code	Description	Adjustment Range	Factory Setting			
A d d	Modbus: Drive address	1 to 247	1			
	Modbus: Transmission speed		19200 bps			
Еbг	4. B: 4800 bps         9. 5: 9600 bps         19. 2: 19200 bps         NOTE: The remote keypad display can only be used with	, the transmission speed set to 19200 bps				
	Modbus communication format	See below.	8E1			
E F D	Imodulus communication format       See below.       Set         Imodulus communication format       Set below.       Set         Imodulus communication       Set below.       Set below.         Imodulus communication       Set below.       Set below.      <					
E E D	Modbus: Time-out	0.1 to 10 s	10 s			
AGCO		0 to 127	0			
Halu	CANopen: Drive address CANopen: Transmission speed	See below.	125			
6 d C D	/ □. □: 10 kbps 2 □. □: 20 kbps 5 □. □: 50 kbps / 2 5. □: 125 kbps 2 5 □. □: 250 kbps 5 □ □. □: 500 kbps / □ □ □: 1000 kbps					
	CANopen: Error registry (read-only)	See below.				
ErCO	D: No error         I: Bus off error         2: Life time error         3: CAN overrun         4: Heartbeat error					
	Forced local mode	See below.	nO			
FL D	n D: Not assigned         L I: Logic input L11         L I2: Logic input L12         L I3: Logic input L13         L I4: Logic input L14         L I5: Logic input L15         L I6: Logic input L16					
	In forced local mode, the terminal block and drive keypad	diaplay reasin control of the drive controllar				

Code	Description	Adjustment Range	Factory Setting	
	Selection of the reference and control channel in forced local mode	See below.	Al1	
	Can only be accessed if LAC = 3		AIP for ATV31 •••••	
	In forced local mode, only the speed reference is taken into account. PI functions, summing inputs, etc. are not active. Refer to the diagrams on pages 40 to 43.			
FLOC	R / I: Analog input Al1, logic inputs LI			
	R 12: Analog input Al2, logic inputs Ll R 13: Analog input Al3, logic inputs Ll			
	<i>R IP</i> : Potentiometer (ATV31••••••A controllers only), RUN/STOP buttons			
	L C C: Remote keypad display: LFr reference (page 24), RUN/STOP/FWI	D/REV buttons		



These parameters only appear if the function has been enabled.

#### **DISPLAY MENU SUP-**

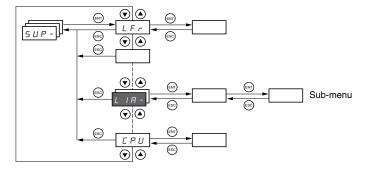

The display menu parameters can be accessed with the drive controller running or stopped. This menu can be accessed with the access locking switch on the remote keypad display in any position.

Some functions have numerous parameters. To simplify programming and to keep parameter lists short, these functions have been grouped in submenus. Like menus, sub-menus are identified by a dash after their code. For example, LIA- is a submenu.

When the drive controller is running, the value of one of the display parameters is shown. To change the parameter displayed, scroll to the desired display parameter and press the ENT key. To retain your selection as the new default, press and hold the ENT key again for 2 seconds. The value of this parameter will be displayed during operation, even after power to the drive controller has been cycled. If the new choice is not confirmed by pressing the ENT key a second time, the drive controller will return to the previous parameter after power is cycled.

ENGLISH

<u>5 U P -</u>			
 _	Code	Description	Adjustment Range
	LFr	Frequency reference for control via the drive controller keypad or the remote keypad display	0 to 500 Hz
	r P I	Internal PI reference	0 to 100%
	FrH	Frequency reference before ramp (absolute value)	0 to 500 Hz
_	rFr	Output frequency applied to the motor	- 500 Hz to + 500 Hz
-	SPdI SPd2 SPd3 SPd3	Output value in customer units SPd1, SPd2, or SPd3 depending on the SdS parameter, so	ee page 27. Factory setting is SPd3.
-	L[r	Motor current	
-	DP r	Motor power 100% = Nominal motor power, calculated using the param	eters entered in the drC- menu.
	ШLп	Line voltage (Vac) calculated from the measured voltage o	n the DC bus
	EHr	Motor thermal state           L H r         100% = Nominal thermal state           118% = OLF threshold (motor overload)	
	E H d	Drive thermal state 100% = Nominal thermal state 118% = OHF threshold (drive overheating)	
	L F E	Last fault $b \ L \ F : Brake control fault$ $C \ F : Configuration (parameters) incorrect C \ F : Configuration (parameters) invalid C \ F : Communication fault line 2 (CANopen)C \ r \ F : Capacitor pre-charge fault E \ F \ F : Capacitor pre-charge faultE \ F \ F : Capacitor pre-charge fault E \ F \ F : EPROM memory faultE \ F \ F : External faultL \ F \ F : 4 - 20 mA fault on Al3n \ D \ F : No fault savedD \ F : No fault savedD \ F : Do bus overvoltage faultD \ F : Overcurrent faultD \ F : Overcurrent faultD \ F : Overcurrent faultD \ F \ Notor overload faultD \ F \ Notor overload faultD \ F \ Line supply overvoltage faultS \ C \ F : Motor short-circuit fault (phase, earth)S \ C \ F : Motor overgeed faultE \ r \ F \ Auto-tuning faultU \ S \ F \ Line supply undervoltage faultU \ S \ F \ Line supply undervoltage fault$	
-	0 E r	Motor torque 100% = Nominal motor torque, calculated using the param	
o to 9999 (hours), then 10.00		Operating time Total time the motor has been powered up: 0 to 9999 (hours), then 10.00 to 65.53 (khours). Can be reset to zero by the rPr parameter in the FLt- menu	0 to 65530 hours



These parameters only appear if the function has been enabled.

	•	]
 Co	de	Description
	C D d	<ul> <li>Terminal locking code</li> <li>Allows the drive configuration to be protected with an access locking code.</li> <li><i>NOTE: Before entering a code, be sure to record it.</i></li> <li><i>I F F</i> : No access locking code</li> <li>To lock the access, use the key to enter a code (2 to 9999) and press ENT. "ON" appears on the screen to indicate that the parameters have been locked.</li> <li><i>I n</i> : A code (2 to 9999) is locking the access to the drive controller</li> <li>To unlock the access, use the key to enter the access code (2 to 9999) and press ENT. The code remains on the display and the access is unlocked until the next time the power is removed from the controller. Parameter access will be locked again the next time power is reapplied.</li> <li>If an incorrect code is entered, the display changes to "ON" and the parameters remain locked.</li> <li>XXXX: Parameter access is unlocked (the code remains on the screen).</li> <li>To reactivate locking with the same code when the parameters have been unlocked, return to ON. using the votton then press ENT. "ON" appears on the screen to indicate that the parameters have been locked.</li> <li>To lock the access with a new code when the parameters have been unlocked, enter a new code (increment the display using  ov ) and press ENT. "ON" appears on the screen to indicate that the parameters have been locked.</li> <li>To clear locking when the parameters have been unlocked, return to OFF using the votton and press ENT. "OFF" remains on the screen. The parameters are unlocked and will remain unlocked.</li> </ul>
	E U 5	<ul> <li>choice of the parameter displayed.</li> <li>Auto-tuning status. See page 29.</li> <li><i>E R b</i>: The default stator resistance value is used to control the motor.</li> <li><i>P E n d</i>: Auto-tuning has been requested, but not yet performed.</li> <li><i>P r D i</i>: Auto-tuning in progress.</li> <li><i>F R i L</i>: Auto-tuning has failed.</li> <li><i>d D n E</i>: Auto-tuning is complete. The stator resistance measured by the auto-tuning function is used to control the motor.</li> <li><i>S L r d</i>: Auto-tuning is complete. The cold stator resistance (rSC other than nO) is used to control the motor.</li> </ul>
	UdP	Indicates the ATV31 firmware version. For example, 1102 = V1.1 IE02.
L IA -		Logic input functions
	L     A L   2 A L   3 A L   4 A L   5 A L   5 A	Can be used to display the functions assigned to each input. If no functions are assigned, nO is displayed. Use $\blacktriangle$ and $\checkmark$ to scroll through the functions. If a number of functions have been assigned to the same input, ensure that they are compatible.
	L 15	Can be used to display the state of the logic inputs (using the segments of the display: high = 1, low = 0) State 1 State 0 LI1 LI2 LI3 LI4 LI5 LI6
		Example above: LI1 and LI6 are at 1, LI2–LI5 are at 0.
<i>A I A -</i>	A I I A A I Z A A I Z A A I Z A	Analog input functions Can be used to display the functions assigned to each input. If no functions have been assigned, nO is displayed. Use and v to scroll through the functions. If a number of functions are assigned to the same input, ensure that they are compatible.

### **SECTION 4: MAINTENANCE AND TROUBLESHOOTING**

PRECAUTIONS	Read the following safety statements before proceeding with any maintenance or troubleshooting procedures.
	HAZARDOUS VOLTAGE
	Disconnect all power before servicing the drive controller.
	• Read and understand these procedure and the precaution on page 15 of this manual before servicing the ATV31 drive controllers.
	<ul> <li>Installation, adjustment, and maintenance of these drive controllers must be performed by qualified personnel.</li> </ul>
	Failure to follow this instruction will result in death or serious injury.
ROUTINE MAINTENANCE	Perform the following steps at regular intervals:
	Check the condition and tightness of the connections.
	<ul> <li>Make sure that the ventilation is effective and that the temperature around the drive controller remains at an acceptable level.</li> </ul>
	Remove dust and debris from the drive controller, if necessary.
FAULT DISPLAY	If a problem arises during setup or operation, ensure that all ambient environment, mounting, and connection recommendations have been followed.
	The first fault detected is stored and displayed, flashing, on the screen. The drive controller locks and the fault relay (RA-RC) contact opens, if it has been configured for this function.
Drive Controller Does Not Start, No Fault Displayed	If the drive controller will not start and there is no display indication, consider the following:
	1. Check the power supply to the drive controller.
	2. The assignment of the fast stop or freewheel stop functions prevents the drive controller from starting if the corresponding logic inputs are not powered up. In this case, the drive controller displays nSt in freewheel stop mode and FSt in fast mode. This is normal, since these functions are active at zero speed so that the drive controller will stop safely if there is a wire break.
	<ol> <li>Ensure that the run command inputs have been actuated in accordance with the chosen control mode (tCC parameter in the I-O- menu. See page 31).</li> </ol>
	4. If an input is assigned to the limit switch function and this input is at state 0, the drive controller can only be started by sending a command for the opposite direction (see page 74).
	<ol> <li>If the reference channel (page 39) or the control channel (page 40) is assigned to Modbus or CANopen, the drive controller displays nSt on power up and remains stopped until the communication bus sends a command.</li> </ol>

Clearing Faults	The drive controller can be unlocked after a fault by the following methods:		
	Removing power from the drive controller until the display clears.		
	<ul> <li>Automatically, if the automatic restart function is enabled (parameter Atr is set to Yes, see page 77)</li> </ul>		
	<ul> <li>By a logic input, if a logic input is assigned to the fault reset function (parameter rSF assigned to LI•, see page 77)</li> </ul>		
Faults Which Cannot Be Automatically Reset	Faults which cannot be automatically reset are listed in the table below. To clear these faults:		
	<ol> <li>Remove power from the drive controller.</li> <li>Wait for the display to go off completely.</li> </ol>		

- 3. Determine the cause of the fault and correct it.
- 4. Reapply power.

bLF, CrF, OCF, SOF, and tnF can also be reset remotely via a logic input. Refer to the rSF parameter on page 77.

Fault	Probable Cause	Remedy
Ь L F Brake sequence	Brake release current not reached	<ul> <li>Check the drive controller and motor connections.</li> <li>Check the motor windings.</li> <li>Check the lbr setting in the FUn- menu. Refer to page 70.</li> </ul>
<i>L r F</i> Precharge circuit fault	Precharge circuit damaged	<ul><li>Reset the drive controller.</li><li>Replace the drive controller.</li></ul>
In F Internal fault	<ul> <li>Internal fault</li> <li>Internal connection fault</li> </ul>	<ul> <li>Remove sources of electromagnetic interference.</li> <li>Replace the drive controller.</li> </ul>
E F     Overcurrent	<ul> <li>Incorrect parameter settings in the SEt- and drC- menus</li> <li>Acceleration too rapid</li> <li>Drive controller and/or motor undersized for load</li> <li>Mechanical blockage</li> </ul>	<ul> <li>Check the SEt- and drC-parameters.</li> <li>Ensure that the size of the motor and drive controller is sufficient for the load.</li> <li>Clear the mechanical blockage.</li> </ul>
5 <i>E F</i> Motor short circuit	<ul> <li>Short circuit or grounding at the drive controller output</li> <li>Significant ground leakage current at the drive controller output if several motors are connected in parallel</li> </ul>	<ul> <li>Check the cables connecting the drive controller to the motor, and check the motor insulation.</li> <li>Reduce the switching frequency.</li> <li>Connect output filters in series with the motor.</li> </ul>
5	<ul><li>Instability</li><li>Overhauling load</li></ul>	<ul> <li>Check the motor, gain, and stability parameters.</li> <li>Add a braking resistor.</li> <li>Check the size of the motor, drive controller, and load.</li> </ul>
とっF Auto-tuning fault	<ul> <li>Motor or motor power not suitable for the drive controller</li> <li>Motor not connected to the drive controller</li> </ul>	<ul> <li>Use the L or the P ratio (see UFt on page 29).</li> <li>Check the presence of the motor during auto-tuning.</li> <li>If a downstream contactor is being used, close it during auto-tuning.</li> </ul>

## Faults Which Can Be Automatically Reset

After the cause of the fault has been removed, the faults in the table below can be reset:

- With the automatic restart function. Refer to the Atr parameter in the FLtmenu on page 77.
- Via a logic input. Refer to the rSF parameter in the FLt- menu on page 77.
- By cycling power to the drive controller.

Fault	Probable Cause	Remedy			
E D F Serial link failure CANopen	Loss of communication between the drive controller and communication device or remote keypad.	<ul> <li>Check the communication bus.</li> <li>Refer to the product-specific documentation.</li> </ul>			
<i>E P F</i> External fault	User defined	User defined			
L F F Loss of 4-20 mA follower	Loss of the 4-20 mA reference on input AI3	Check the connection on input AI3.			
b F     Overvoltage     during deceleration	<ul> <li>Braking too rapidly</li> <li>Overhauling load</li> </ul>	<ul> <li>Increase the deceleration time.</li> <li>Install a braking resistor if necessary.</li> <li>Activate the brA function if it is compatible with the application. Refer to page 50.</li> </ul>			
D H F Drive overload	<ul> <li>Drive controller or ambient temperature are too high.</li> <li>Continuous motor current load is too high.</li> </ul>	Check the motor load, the drive controller ventilation, and the environment. Wait for the drive controller to cool before restarting.			
D L F Motor overload	<ul> <li>Thermal trip due to prolonged motor overload</li> <li>Motor power rating too low for the application</li> </ul>	Check the ItH setting (motor thermal protection, page 24), check the motor load. Allow the motor to cool before restarting.			
<i>□ P F</i> Motor phase failure	<ul> <li>Loss of phase at drive controller output</li> <li>Downstream contactor open</li> <li>Motor not connected</li> <li>Instability in the motor current</li> <li>Drive controller oversized for motor</li> </ul>	<ul> <li>Check the connections from the drive controller to the motor.</li> <li>If a downstream contactor is being used, set OPL to OAC. Refer to page 78.</li> <li>Test the drive controller on a low power motor or without a motor: set OPL to nO. Refer to page 78.</li> <li>Check and optimize the UFr (page 25), UnS (page 28), and nCr (page 28) parameters and perform auto-tuning (page 29).</li> </ul>			
5 F     Overvoltage during     steady state     operation or during     acceleration	<ul> <li>Line voltage too high</li> <li>Line supply transients</li> </ul>	<ul> <li>Check the line voltage. Compare with the drive controller nameplate rating.</li> <li>Reset the drive controller.</li> </ul>			
РНF Input phase failure	<ul> <li>Input phase loss, blown fuse</li> <li>Three-phase drive controller used on a single phase line supply</li> <li>Input phase imbalance</li> <li>Transient phase fault</li> <li>NOTE: This protection only operates with the drive controller running under load.</li> </ul>	<ul> <li>Check the connections and the fuses.</li> <li>Disable the fault by setting IPL to nO. Refer to page 78.</li> <li>Verify that the input power is correct.</li> <li>Supply three-phase power if needed.</li> </ul>			
5 L F Serial link failure		<ul> <li>Check the communication connection.</li> <li>Refer to the product-specific documentation.</li> </ul>			

## Faults That Reset When the Fault Is Cleared

Fault Probable Cause		Remedy	
<i>E F F</i> Configuration fault	The parameter configurations are not suited to the application.	Restore the factory settings or load the backup configuration, if it is valid. See parameter FCS in the drC- menu, page 33.	
<i>E F I</i> Configuration fault via serial link	The parameter configurations loaded in the drive controller via the serial link are not suited to the application.	<ul> <li>Check the configuration loaded previously.</li> <li>Load a compatible configuration.</li> </ul>	
リ5F Undervoltage	<ul> <li>Line supply too low</li> <li>Transient voltage dip</li> <li>Damaged precharge resistor</li> </ul>	<ul> <li>Check the line voltage.</li> <li>Check the setting of the UNS parameter. See page 28.</li> <li>Replace the drive controller.</li> </ul>	

#### **CONFIGURATION SETTINGS TABLES**


Use the configuration settings tables beginning on page 89 to prepare and record the configuration before programming the drive controller. It is always possible to **return to the factory settings** by setting the FCS parameter to Init in the drC-, I-O-, CtL-, or FUn- menus. See pages 30, 33, 47, or 75.

#### **Drive Controller and Customer ID**

Drive Controller ATV31.....

Customer ID no. (if applicable).....

#### **1st level Adjustment Parameter**

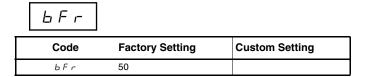



Code	Factory Setting	Custom Setting	Code	Factory Setting	Custom Setting
A C C	3 s	S	r P 2	30%	%
8 C 2	5 s	S	r P 3	60%	%
d E 2	5 s	S	r P Y	90%	%
d E C	3 s	S	5 P 2	10 Hz	Hz
ERI	10%	%	5 P 3	15 Hz	Hz
E A 2	10%	%	5 P 4	20 Hz	Hz
ĿЯЭ	10%	%	5 P 5	25 Hz	Hz
ĿЯЧ	10%	%	5 P 6	30 Hz	Hz
LSP	0 Hz	Hz	5 P 7	35 Hz	Hz
H S P	bFr	Hz	5 P 8	40 Hz	Hz
I E H	According to drive rating	A	5 P 9	45 Hz	Hz
UF r	20%	%	5 P I D	50 Hz	Hz
FLG	20%	%	SPII	55 HZ	Hz
SER	20%	%	5 P 1 2	60 Hz	Hz
S L P	100 Hz	%	5 P I 3	70 Hz	Hz
IdE	0.7 ln (1)	A	5 P I 4	80 Hz	Hz
EdE	0.5 s	S	5 P I 5	90 Hz	Hz
Ed[I	0.5 s	S	5 P 16	100 Hz	Hz
SdC I	0.7 ln (1)	A	EL I	1.5 ln <sup>1</sup>	A
F9C5	0 s	S	EL2	1.5 ln <sup>1</sup>	A
5 <i>d C 2</i>	0.5 ln (1)	A	EL S	0 (no time limit)	S
JPF	0 Hz	Hz	r 5 L	0	
JF2	0 Hz	Hz	UFr2	20%	%
JGF	10 Hz	Hz	FLG2	20%	%
r P G	1		5 E A 2	20%	%
r IG	1/s	/ s	SLP2	100%	%
FЬS	1		FEd	bFr	Hz
PIC	nO		E E d	100%	%
			СĿd	In <sup>1</sup>	A
			5 d 5	30	

4 kHz

SFr

<sup>1</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.



These parameters only appear if the corresponding function is enabled. The majority can also be accessed and adjusted in the function configuration menu. Those which are underlined appear in factory settings mode.

ENGLISH


kHz

Menu



Code	Factory Setting	Custom Setting	
ЬFг	50 Hz	Hz	
U n 5	Varies with drive rating	V	
FrS	50 Hz	Hz	
n E r	Varies with drive rating	А	
n 5 P	Varies with drive rating	RPM	
C 0 5	Varies with drive rating		
r SC	nO		

Code	Factory Setting	Custom Setting
E U 5	tAb	
UFE	n	
nrd	YES	
SFr	4 kHz	kHz
L F r	60 Hz	Hz
5 5 L	nO	

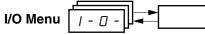

Code	Factory Setting	Custom Setting
FEE	2C	
	ATV31 ••••• A: LOC	
FEF	trn	
r r 5	if tCC = 2C, LI2	
	if tCC = 3C, LI3	
	if tCC = LOC: nO	
[rl]	4 mA	mA
[rH]	20 mA	mA

Code	Factory Setting	Custom Setting
AD IE	0A	
d D	nO	
r l	FLt	
r 2	nO	

# Control Menu


Code	Factory Setting	Custom Setting
LAC	L1	
Frl	AI1 AIP for ATV31	
Fr2	nO	
r F E	Fr1	
EHEF	SIM	
[d]	tEr LOC for ATV31	

Code	Factory Setting	Custom Setting
C d 2	Mdb	
<i>C C S</i>	Cd1	
C D P	nO	
LEE	nO	
PSE	YES	
r 0 E	dFr	



These parameters only appear if the corresponding function is enabled.

#### **Application Functions Menu**

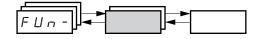


Co	ode	Factory Setting	Custom Setting	Co	de	Factory Setting	Custom Setting
	r P E	LIn		J D G -	J 0 G	If tCC = 2C: nO If tCC = 3C: LI4 If tCC = LOC: nO	
	ERI	10%	%		JGF	10 Hz	Hz
	E A 2	10%	%		USP	nO	
	E A B	10%	%	UPd-	d 5 P	nO	
	ĿЯЧ	10%	%		SEr	nO	
r PC -	ACC	3 s	S		PIF	nO	
	dEC	3 s	S		r P G	1	
	r P S	nO			r IG	1	
	FrE	0	Hz		FЬS	1	
	AC 2	5 s	S		PIC	nO	
	d E 2	5 s	S		Pr2	nO	
	ЬгЯ	YES		P I -	Pr4	nO	
	SEE	Stn			r P 2	30%	%
	FSE	nO			r P 3	60%	%
	d C F	4			r P 4	90%	%
5 E C -	d E I	nO			r 5 L	0	
	IdC	0.7 ln	A		PII	nO	
	EdE	0.5 s	S		r P I	0%	%
	n 5 E	nO			ЬΙС	nO	
	ЯdС	YES			ЬrL	Varies with drive	Hz
	E d E I	0.5 s	S		lbr	controller rating	A
AGC -	SdC I	0.7 ln <sup>1</sup>	A	ЬΙС -	brt	0.5 s	S
	Ed[2	0 s	S		ЬEп	nO	Hz
	5 d C 2	0.5 ln <sup>1</sup>	A	]	ЬЕЬ	0.5 s	S
5 A I -	5 A 2	AI2			ЬIP	nO	
5 H I -	5 A 3	nO		LE2-	L C Z	nO	
					E L 2	1.5 ln <sup>1</sup>	A

<sup>1</sup> In corresponds to the nominal drive current indicated in the ATV31 Installation Manual and on the drive controller nameplate.

These parameters only appear if the corresponding function is enabled. They can also be accessed in the SEt- menu.

#### **Application Functions Menu (Continued)**

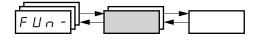

Code		Factory Setting	Custom Setting
		If tCC = 2C: LI3	
	P 5 2	If tCC = 3C: LI4	
		If tCC = LOC: LI3	
		If tCC = 2C: LI4	
	P 5 4	If tCC = 3C: nO	
		If tCC = LOC: LI4	
	P 5 8	nO	
	P 5 1 6	nO	
	5 P 2	10 Hz	Hz
	5 P 3	15 Hz	Hz
	5 P 4	20 Hz	Hz
P 5 5 -	5 P 5	25 Hz	Hz
	5 P 6	30 Hz	Hz
	5 P 7	35 Hz	Hz
	5 P 8	40 Hz	Hz
	5 P 9	45 Hz	Hz
	5 P I D	50 Hz	Hz
	5 P I I	55 Hz	Hz
	5 P I 2	60 Hz	Hz
	5 P I 3	70 Hz	Hz
	5 P I 4	80 Hz	Hz
	5 P I 5	90 Hz	Hz
	5 P I 6	100 Hz	Hz

Code		Factory Setting	Custom Setting	
	EHP	nO		
	U n 5 2	Varies with drive controller rating		v
	Fr 52	50 Hz		Hz
С Н Р -	n[r2			А
	n 5 P 2	Varies with drive controller rating		RPM
	C O S 2			
	UFE2	n		
	UFr2	20%		%
	FLG2	20%		%
	SER2	20%		%
	SLP2	100 Hz		Hz
	LAF	nO		
L 5 E -	LAr	nO		
	LAS	nSt		

These parameters only appear if the corresponding function is enabled. They can also be accessed in the SEt- menu.




Code	Factory Setting	Custom Setting
A E r	nO	
EAr	5	
r S F	nO	
FLr	nO	
EEF	nO	
EPL	YES	
OPL	YES	
IPL	YES	
DHL	YES	
OLL	YES	

Code	Factory Setting	Custom Setting
5 L L	YES	
C 0 L	YES	
EnL	YES	
LFL	nO	
LFF	10 Hz	Hz
drn	nO	
5 <i>E P</i>	nO	
In H	nO	
r P r	nO	



These parameters only appear if the corresponding function is enabled.

#### Communication Menu

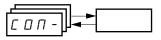

Code	Factory Setting	Custom Setting
Rdd	1	
ĿЬг	19200	
E F D	8E1	
E E D	10 s	S
A 9 C 0	0	

Code	Factory Setting	Custom Setting
ь д С О	125	
FLD	nO	
FLOC	Al1 AIP for ATV31	

ENGLISH

#### **INDEX OF PARAMETER CODES**

. T. J.
_
_
10
<b>U</b> 1

Code	See Page:	Code	See Page:	Code	See Page:	Code	See Page:
A C 2	24	Frb	50	rFr	83	EAr	77
ACC	24	FSE	51	r 16	66	ŁЬг	80
7 J C	53	FEd	27	r D E	47	FEE	31
9960	80	HSP	24	r P 2	66	ECE	31
7 d d	80	lbr	70	r P B	66	EdE	25
9     8	84	IdC	51	rP4	66	Ed[ I	25
9 12 8	84	InH	79	r P G	66	Ed[2	25
RIJA	84	IPL	78	r P I	67	E F r	30
9016	84	IEH	24	r P I	83	ЕНd	83
9 E r	77	JF 2	26	r P r	79	EHr	83
5 7 6 0	80	JGF	26	r P S	50	EL S	26
o E n	70		58	r P E	49	ЕЕd	27
DEE	70	JPF	26	rr5	31	E E D	80
o Fr	28	LAC	44	r S C	29	ЕUn	29
5. IP	70	LAF	74	r SF	77	L U S	29
5 5 L C	70	LAr	74	r SL	67	L U S	84
or A	50	LAS	74	rEH	83	UdP	84
or L	70		71	582	54	UFr	25
art	70		46	583	54	UFr2	73
565	46	LEr	83	505	30	UFE	29
. L 5 . d 1	46	LFF	79	<u>5dEl</u>	53	UFE2	73
. a . . d 2	45	LFL	79	5862	53	<u> </u>	83
. <i>a c</i> : H C F	45	LFr	83	535	27	<u> </u>	28
_ H L F [ H P	72	LFE	83		27	<u> </u>	72
		- <u>LIIA</u>	84		79	USP	61
<i>L2</i>	71	<u>LI2A</u>	84	<u> </u>	25		01
	26	<u>L / 3 A</u>	84	<u></u>	73	<u> </u>	
C D J	84	<u>L I 4 A</u>	84	<u></u>	57		
C 0 P	46	L ISA	84	<u></u>	57		
05	28	LI6A	84	<u></u>	57	<u> </u>	
052	73	L /S	84	<u> </u>	57	_	
Cr H B	32		24	<u>5PI4</u>	57	_	
Erla	32	- <u>n</u> [r	28		57	_	
EEd	27	- <u>n[r</u> 2	72		57		
JEF	51		30	<u>572</u>	57		
361	51	nrd		<u>5P3</u>	57		
362	50	n 5 P	28 72	<u> </u>			
3 E C	50			<u> </u>	57		
30	32	<u>n 5 E</u>	52		57	_	
drn	79		78	5 P 6	57		
3 S P	61	DLL	78	5 P 7	57	_	
EPL	78	<u>DPL</u>	78	5 P 8	57	_	
ErEO	80	<u>OPr</u>	83	<u> </u>	57	_	
EEF	78	O E r	83	<u>5Pd I</u>	83		
- 6 5	26	PIC	66	5 P d 2	83	_	
- C 5	30	PIF	66	5 P d 3	83	_	
LG	25	Pr2	66	5 5 L	30	_	
-LG2	26	Pr4	66	SEA	25		
LO	80	P 5 1 6	57	SEA2	73	_	
LOC	81	P 5 2	56	SEP	79	_	
Lr	78	P 5 4	56	5tr	61		
- I	44	P 5 8	56	5 <i>E E</i>	51		
r 2	44	PSE	47	EAI	24		
r H	83	r I	32	F A S	24		
- 5	28	r 2	32	FUB	24	_	
Fr 52	72	rFC	45	ĿЯЧ	24		

#### **INDEX OF FUNCTIONS**

Function	See Page:
+/- speed	59
2-wire/3-wire control	31
Analog/logic output AOC/AOV	32
Automatic restart	77
Automatic DC injection	53
Brake control	68
CANopen: Drive address	80
Catch on the fly (automatically catch a spinning load on ramp)	78
Control and reference channels	34
Control channel switching	46
Current limit	26
DC injection via logic input	51
Deceleration ramp adaptation	50
Drive thermal protection	13
Drive ventilation	13
Fast stop via logic input	51
Flying restart (automatic catching a spinning load on ramp)	78
Forced local mode	80
Freewheel stop via logic input	52
Function access level	44
Jog operation	58
Management of limit switch	74
Modbus: Drive address	80
Motor control auto-tuning	29
Motor switching	72
Motor thermal protection	14
Motor thermal protection - max. thermal current	24
PI regulator	62
Preset speeds	55
Ramp switching	50
Ramps	49
Reference switching	45
Relay R1	32
Relay R2	32
Reset of current fault	77
Return to factory settings/restore configuration	30
Saving the configuration	30
Selection of the type of voltage/frequency ratio	29
Skip frequency	26
Stop modes	51
Summing inputs	54
Switching for second current limit	71
Switching frequency	27
	A