


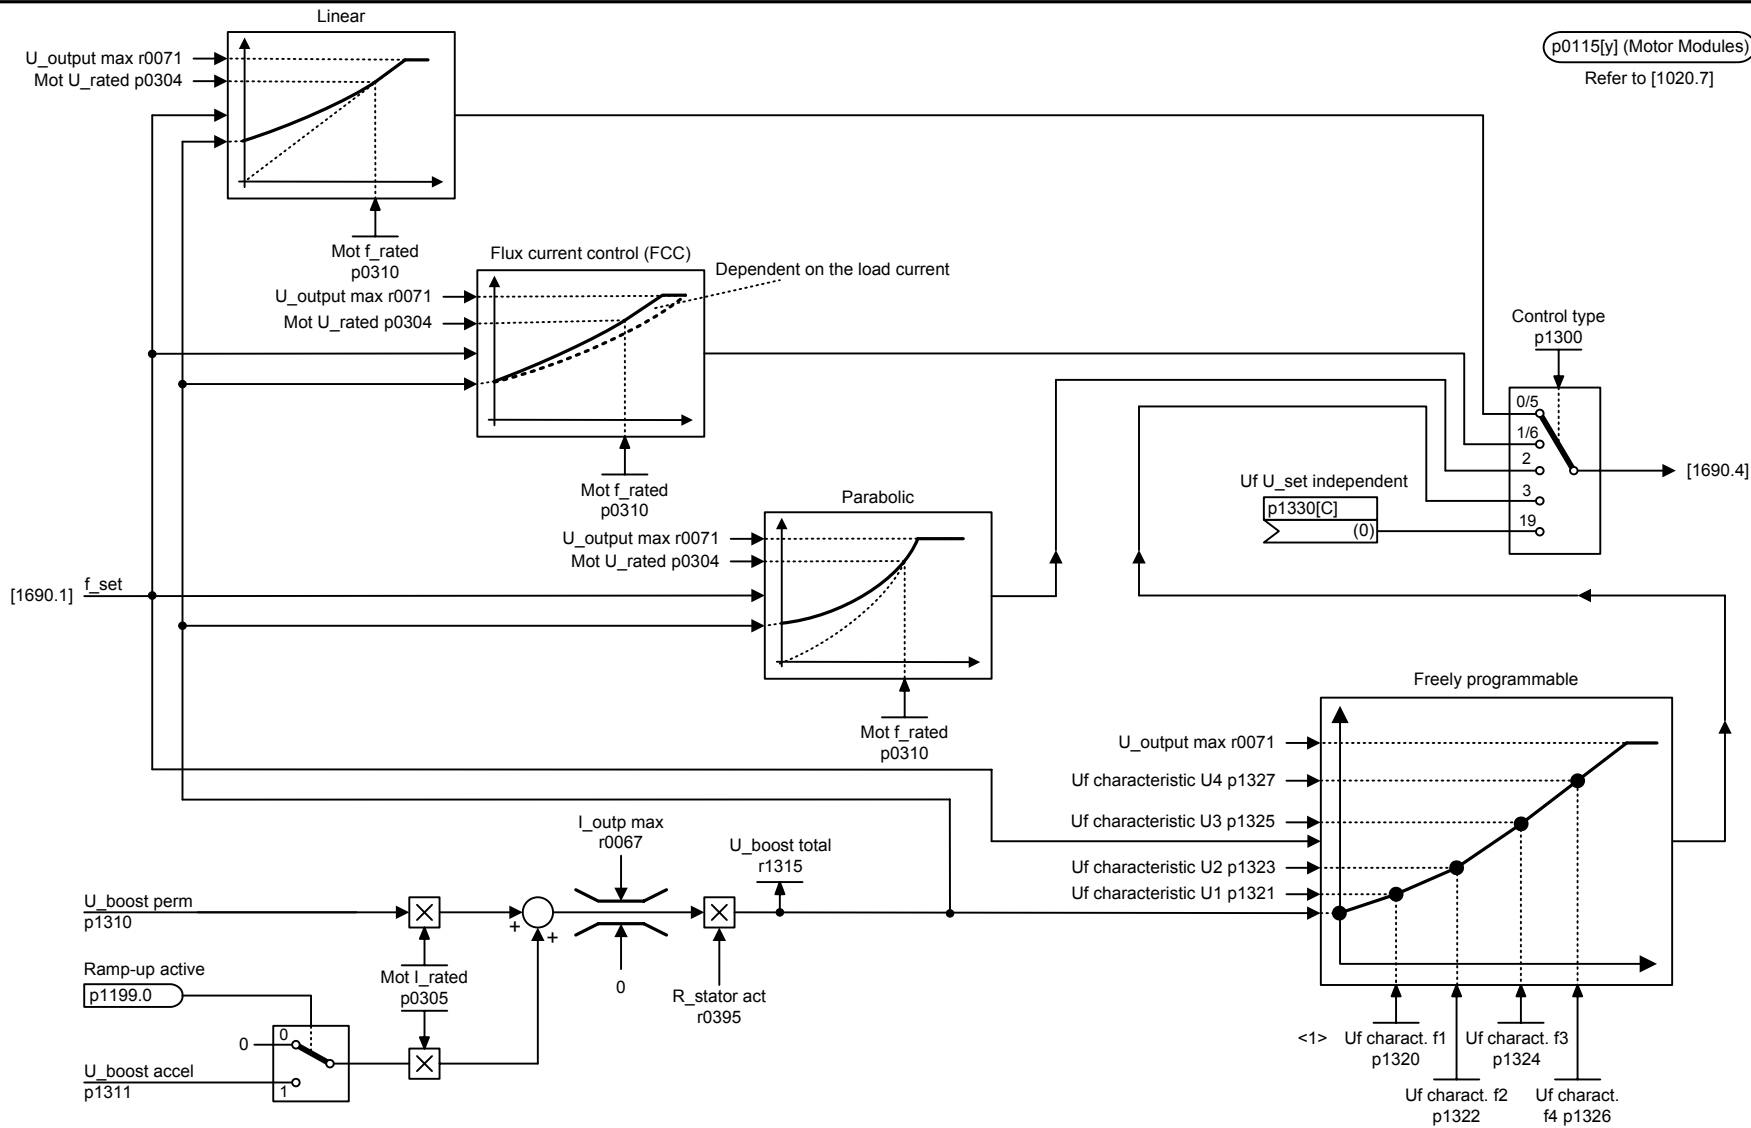

<1> For p1320 = 0, the voltage boost via p1310 is not effective.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6300_01_eng.vsd	Function diagram	
Vector control - V/f characteristic and voltage boost					23.03.07 V02.05.00	SINAMICS S	
					- 6300 -		